

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Acer](#) /
- > [Acer Aspire A315-7520U Laptop User Manual](#)

Acer Aspire A315-7520U

Acer Aspire A315-7520U Laptop User Manual

Model: Aspire A315-7520U

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Acer Aspire A315-7520U laptop. The Acer Aspire A315-7520U is a high-performance laptop designed for business, academic, and general productivity tasks. It features an AMD Ryzen 5 7520U processor, 16GB of LPDDR5 RAM, and a 1TB NVMe SSD, ensuring efficient multitasking and fast data access. The 15.6-inch Full HD IPS touchscreen display offers clear visuals and interactive functionality. This device comes pre-installed with Windows 11 Pro, providing advanced security and management features.



Image 1.1: The Acer Aspire A315-7520U laptop, showcasing its sleek design and display.

Key Features:

- **Processor:** AMD Ryzen 5 7520U Quad-Core (up to 4.3GHz) for balanced performance and energy efficiency.
- **Memory:** 16GB LPDDR5 RAM for smooth multitasking.
- **Storage:** 1TB NVMe SSD for fast boot times, application launches, and file transfers.
- **Display:** 15.6-inch Full HD (1920x1080) IPS Anti-Glare Touchscreen for crisp visuals and interactive use.
- **Operating System:** Windows 11 Pro, offering advanced business features and security.
- **Connectivity:** Wi-Fi 6, Bluetooth 5.2, HDMI, USB-C, and USB 3.2 for versatile connections.

2. SETUP GUIDE

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Acer Aspire A315-7520U Laptop
- AC Power Adapter and Cable (Charger)
- Quick Start Guide (if included)

Inspect the laptop for any physical damage. If any damage is found, contact your retailer immediately.

2.2 Connecting the Power Adapter

Before first use, connect the AC power adapter to the laptop's power input port and then plug it into a wall outlet. Allow the battery to charge for at least 30 minutes before powering on the device for the first time.



Image 2.1: Side view of the laptop showing various ports, including the power input, USB, and HDMI.

2.3 Initial Power On and Windows 11 Pro Setup

1. Open the laptop lid.
2. Press the power button, typically located on the keyboard deck or side.
3. Follow the on-screen instructions to complete the Windows 11 Pro setup. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.
4. It is recommended to connect to the internet during setup to ensure the latest updates are applied.

3. OPERATING YOUR LAPTOP

3.1 Power Management

- **Power On:** Press the power button.
- **Sleep Mode:** Close the lid or select "Sleep" from the Start Menu.
- **Shut Down:** Go to Start Menu > Power > Shut down.
- **Restart:** Go to Start Menu > Power > Restart.

3.2 Using the Touchscreen Display

The 15.6-inch Full HD IPS display supports touch input. You can interact with Windows 11 Pro and applications using gestures similar to a tablet or smartphone.

- **Tap:** Equivalent to a mouse click.
- **Tap and Hold:** Equivalent to a right-click.
- **Swipe:** For scrolling or navigating.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out.



Image 3.1: The Acer Aspire A315-7520U laptop open, showing the keyboard and touchscreen display.

3.3 Keyboard and Touchpad

The laptop features a full-size keyboard and a precision touchpad. Familiarize yourself with the function keys (Fn) which provide quick access to settings like volume, brightness, and Wi-Fi.



Image 3.2: Top-down view of the Acer Aspire A315-7520U keyboard and touchpad layout.

3.4 Connectivity

- **Wi-Fi:** Connect to wireless networks via Wi-Fi 6 for high-speed internet access. Manage connections through Windows settings.
- **Bluetooth:** Pair with Bluetooth devices like headphones, mice, or keyboards. Enable Bluetooth in Windows settings to discover and connect devices.
- **USB Ports:** Use the USB-C and USB 3.2 ports for connecting external storage, peripherals, or charging compatible devices.
- **HDMI:** Connect to external monitors or projectors using the HDMI port for extended display options.

4. MAINTENANCE

4.1 Cleaning Your Laptop

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Keyboard and Chassis:** Use a soft cloth. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters openings. Compressed air can remove dust from keyboard crevices.
- **Ports:** Gently remove dust from ports using compressed air.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- Use only the original or an Acer-approved power adapter.

4.3 Software Updates

Regularly check for and install Windows updates and driver updates to ensure optimal performance and security. Go to Start Menu > Settings > Windows Update.

5. TROUBLESHOOTING

Common Issues and Solutions:

- **Laptop does not power on:**
 - Ensure the power adapter is securely connected to both the laptop and a working power outlet.
 - Check if the power outlet is functional by plugging in another device.
 - If the battery is completely drained, allow it to charge for some time before attempting to power on.
- **Display is blank or flickering:**
 - Adjust screen brightness using the function keys.
 - Connect an external monitor via HDMI to check if the issue is with the laptop's internal display.
 - Restart the laptop.

- **Wi-Fi or Bluetooth not connecting:**

- Ensure Wi-Fi and Bluetooth are enabled in Windows settings.
- Restart your router/modem for Wi-Fi issues.
- Remove and re-pair Bluetooth devices.
- Update network drivers through Device Manager.

- **Slow performance:**

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup and defragmentation (for HDD, though this model has SSD).
- Scan for malware or viruses.

For more advanced troubleshooting or issues not covered here, please refer to the official Acer support website or contact customer service.

6. SPECIFICATIONS

Feature	Detail
Brand	Acer
Model Name	Aspire 3 (A315-7520U)
Screen Size	15.6 Inches
Display Resolution	1920 x 1080 Pixels (Full HD)
Display Type	IPS LED Touchscreen, Anti-Glare
Processor	AMD Ryzen 5 7520U (4 Cores, up to 4.3 GHz)
RAM Memory	16 GB LPDDR5
Storage	1 TB NVMe SSD
Operating System	Windows 11 Pro
Graphics Card	Integrated AMD Graphics
Connectivity	Wi-Fi 6 (802.11ax), Bluetooth 5.2, HDMI, USB-C, USB 3.2
Color	Silver
Item Weight	6.5 Pounds
Built-In Media	Charger

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Acer Aspire A315-7520U laptop, being an Amazon Renewed product, typically comes with a **90-day limited warranty**. This warranty covers defects in materials and workmanship under normal use. For specific terms and conditions, please refer to the warranty documentation provided with your purchase or contact Amazon Renewed support.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact the seller (Oydisen Computer) or Amazon Renewed customer service. You can also visit the official Acer support website for general product information and driver downloads.

- **Seller:** Oydisen Computer (as per product listing)
- **Amazon Renewed Support:** [Amazon Renewed Help Page](#)
- **Acer Official Support:** Refer to [Acer's official support website](#) for drivers, manuals, and FAQs.