

[Manuals.plus](#) /

› [Wahl Professional](#) /

› Wahl Professional Launch Combo Cordless Clipper and Trimmer Set User Manual

## Wahl Professional 08001

# Wahl Professional Launch Combo Cordless Clipper and Trimmer Set User Manual

Model: 08001

## PRODUCT OVERVIEW

---

The Wahl Professional Launch Combo is a professional-grade cordless clipper and trimmer set designed for versatile grooming. Both devices feature powerful 6000 RPM rotary motors, ensuring efficient and precise cutting. The set is engineered for extended cordless operation and convenient USB-C charging.



# Launch Combo

CORD/CORDLESS  
CLIPPER AND TRIMMER

A complete starter kit.  
Designed for both cutting  
and detailing.



Image: Wahl Professional Launch Combo Cordless Clipper and Trimmer Set.

## Key Features

- **Launch Clipper:** Equipped with a powerful 6000 RPM rotary motor and a taper blade, ideal for off-scalp cutting and achieving soft finishes.
- **Launch Trimmer:** Features a 6000 RPM rotary motor and a T-blade for precise detailing around the ears, face, and neck.
- **Extended Cordless Runtime:** Offers up to 110 minutes of cordless operation, supported by quick USB-C charging.
- **Versatile Cutting Options:** Includes 6 clipper cutting guides and 3 trimmer cutting guides for a wide range of styling needs.
- **Ergonomic Design:** Lightweight construction and low vibration reduce wrist fatigue, providing comfort during prolonged use.

## WHAT'S INCLUDED

The Wahl Professional Launch Combo set provides all necessary tools for comprehensive grooming.

## Kit Contains

Launch Clipper and Trimmer  
6 Clipper Guides, 3 Trimmer Guides  
Black Brush  
USB-C Charging Cord  
Blade Oil  
Cleaning Brush  
2 Red Blade Guards  
Black Carrying Case



Image: All items included in the Launch Combo kit.

- Launch Clipper
- Launch Trimmer
- 6 Clipper Cutting Guides
- 3 Trimmer Cutting Guides
- USB-C Charging Cord
- Blade Oil
- Cleaning Brush
- 2 Red Blade Guards
- Black Carrying Case

## SETUP

### Charging the Devices

Before initial use, fully charge both the clipper and trimmer using the provided USB-C charging cord. A full charge provides up to 110 minutes of cordless operation. The LED indicator light will show the charging status.

### Attaching Guide Combs (Clipper)

To attach a guide comb, align the comb with the clipper blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade. Ensure the clipper is turned off before attaching or removing guide combs.

# LAUNCH CLIPPER

*Adjustable Cutting  
Lengths From 0.8–3.5MM*

*Powerful High-Speed  
Motor 6000 RPM*

*Finger Rest and  
Thumb Groove*

**Lightweight  
& Balanced**

**Curved  
Housing  
Design**

*LED Charge Level  
Indicator Light*



Image: Close-up of the Wahl Launch Clipper, showing the blade and guide comb attachment area.

## OPERATING INSTRUCTIONS

### Using the Clipper

The Launch Clipper is designed for off-scalp cutting and creating soft finishes. Select the appropriate guide comb for your desired hair length. Turn on the clipper using the power button. Use the taper lever on the side to adjust the cutting length between 0.8mm and 3.5mm for blending and fading.

### Using the Trimmer

The Launch Trimmer is ideal for precision work around the ears, face, and neck. It features a zero-gap adjustable T-blade for clean lines and close detailing. Turn on the trimmer using the power button. Use gentle, controlled movements for accurate trimming.

## Adjustable Cutting Lengths

From 0.8-3.5 mm

## Zero-Gap Adjustable T-Blade

For clean hits and close detail trimming



Image: Detail of the clipper and trimmer blades, highlighting adjustable cutting lengths.

## MAINTENANCE

---

### Blade Cleaning

After each use, turn off the device and remove any attached guide combs. Use the provided cleaning brush to gently brush away loose hair from the blades. For a more thorough cleaning, the blades can be carefully removed (refer to specific blade removal instructions if provided in the full manual) and cleaned with a soft cloth.

### Blade Oiling

To maintain optimal cutting performance and blade longevity, it is crucial to oil the blades regularly. Apply a few drops of the included blade oil to the teeth of the blades after every few uses, or as needed. Turn on the device for a few seconds to allow the oil to distribute evenly, then wipe off any excess oil.



# Complete Starter Kit

*Ideal for beginner artists and students*

Image: The Launch Combo set, including the cleaning brush and blade oil for maintenance.

## TROUBLESHOOTING

### Common Issues and Solutions

- **Reduced Power/Performance:** If the device seems to lack power or its cutting performance diminishes, ensure it is fully charged. The 6000 RPM rotary motors are designed for efficient cutting through various hair types, but require adequate power.
- **Difficulty Switching Between Tools:** Both the clipper and trimmer are cordless. For seamless transitions during grooming sessions, ensure both devices are sufficiently charged.
- **Blades Pulling Hair:** This often indicates dull blades or insufficient lubrication. Clean the blades thoroughly and apply blade oil as described in the Maintenance section. If the issue persists, blade replacement may be necessary.

## SPECIFICATIONS

<b>Product Dimensions</b>	7.48 x 3.15 x 6.3 inches; 1.79 Pounds
---------------------------	---------------------------------------

<b>Batteries</b>	1 Nonstandard Battery (included)
<b>UPC</b>	043917112909
<b>Manufacturer</b>	Wahl Professional
<b>Model Number</b>	08001
<b>Power Source</b>	Corded Electric/Cordless
<b>Material Type</b>	Stainless Steel
<b>Color</b>	Black/Chrome

## WARRANTY AND SUPPORT

---

This Wahl Professional product is covered by a manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the documentation included in your product packaging or visit the official Wahl Professional website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Wahl Professional customer service directly. Contact information can typically be found on the product packaging or the manufacturer's website.