

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [XIAOMI](#) /

> [Xiaomi Pad 7 Pro Tablet User Manual - Model 24091RPADG](#)

XIAOMI 24091RPADG

Xiaomi Pad 7 Pro User Manual

Model: 24091RPADG

1. INTRODUCTION

This manual provides essential information and instructions for using your Xiaomi Pad 7 Pro tablet. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its performance and lifespan. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Upon unboxing your Xiaomi Pad 7 Pro, please verify that all the following items are included:

- Xiaomi Pad 7 Pro Tablet
- USB Type-C Cable
- User Manual (this document)

Note: A power adapter is not included in the box. A 45W power adapter is recommended and sold separately.

3. PRODUCT OVERVIEW

The Xiaomi Pad 7 Pro is a high-performance tablet designed for productivity, entertainment, and creative tasks. It features a sleek unibody design crafted from high-strength aluminum alloy, ensuring durability and a premium feel.

3.1 Key Features

- **Display:** 11.2-inch 3.2K 144Hz crystal-clear display with Dolby Vision® support and 800 nits peak brightness. Features multi-dimensional eye-care functions and TÜV Rheinland eye comfort certifications.
- **Performance:** Powered by the Snapdragon 8s Gen 3 Mobile Platform (4nm manufacturing process, Octa-core up to 3.0GHz, Adreno GPU, Qualcomm AI engine).
- **Audio:** Quad speakers with Dolby Atmos® support and 200% volume boost.
- **Battery:** Massive 8850mAh (typ) battery with 45W turbo charging support.
- **Cameras:** Rear 50MP camera (JN1, f/1.8) with 4K video recording, and a Front 32MP camera (f/2.2).
- **Operating System:** Android 14 with HyperOS 2, optimized for seamless multi-tasking and AI capabilities.

- **Connectivity:** Wi-Fi 6E, Bluetooth 5.4. (WIFI Version only, no calls or text, no SIM card or SD slot).

3.2 Device Layout

Familiarize yourself with the physical components of your tablet.



Figure 1: Rear view of the Xiaomi Pad 7 Pro, highlighting the camera module and sleek design.





Figure 2: Angled view of the Xiaomi Pad 7 Pro, showcasing its thin profile and rear camera placement.



Figure 3: The Xiaomi Pad 7 Pro docked in its optional keyboard case, demonstrating its laptop-like functionality.

4. SETUP

4.1 Initial Power On

1. Press and hold the Power button located on the side of the tablet until the Xiaomi logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.

4.2 Charging the Battery

Before first use, it is recommended to fully charge your tablet. Use the provided USB Type-C cable with a compatible 45W power adapter (sold separately).

1. Connect the USB Type-C cable to the tablet's charging port.
2. Connect the other end of the cable to a compatible power adapter and plug it into a power outlet.
3. The charging indicator will appear on the screen.

5. OPERATING INSTRUCTIONS

5.1 Display and Navigation

The 11.2-inch 3.2K 144Hz display offers a smooth and vibrant visual experience. Navigate the HyperOS interface using touch gestures:

- **Tap:** Select an item or open an application.
- **Swipe:** Scroll through pages, menus, or home screens.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

The display supports various eye-care functions, including 4096 levels of brightness adjustment and TÜV Rheinland certifications for low blue light and flicker-free operation. Access these settings under Display & Brightness in the Settings menu.

Your browser does not support the video tag.

Video 1: A hands-on review demonstrating the display and overall performance of the Xiaomi Pad 7 Pro.

5.2 Performance and Multitasking

The Snapdragon 8s Gen 3 Mobile Platform ensures smooth performance for all tasks, from browsing and streaming to gaming and AI-powered applications. HyperOS 2 is designed for efficient multitasking:

- **Split Screen:** Open two apps side-by-side for enhanced productivity.
- **Floating Windows:** Keep important apps accessible in resizable windows over other applications.
- **AI Capabilities:** Utilize built-in AI for tasks like text generation, image creation, and intelligent meeting tools.

5.3 Audio Experience

Enjoy immersive sound with the tablet's quad speakers and Dolby Atmos® support. The 200% volume boost provides a powerful audio experience for movies, music, and games.

6. ACCESSORIES

Enhance your Xiaomi Pad 7 Pro experience with official and third-party accessories:

- **Keyboard/Touchpad Case:** Transform your tablet into a laptop-like device for typing and navigation.
- **Stylus:** Ideal for signing documents, sketching, and precise input.
- **USB-C to HDMI Adapter/Dongle:** For connecting to external monitors (supports mirrored display mode).

7. CAMERA USAGE

The Xiaomi Pad 7 Pro is equipped with a 50MP rear camera and a 32MP front camera, suitable for capturing photos and videos.

- **Rear Camera:** 50MP, JN1 sensor, f/1.8 aperture, PDAF. Supports 4K video at 30fps/60fps, 1080P video at 30fps/60fps, and 720P video at 30fps. Features include Photo, Video, Portrait, Document, Dual video, Director mode, Teleprompter, Dynamic shot, and HDR.
- **Front Camera:** 32MP, f/2.2 aperture. Supports 1080P video at 30fps and 720P video at 30fps. Features include Photo, Video, Portrait, Dual video, Teleprompter, Dynamic shot, and HDR.

To access the camera, tap the Camera app icon on your home screen. Select your desired mode and tap the shutter button to capture images or start/stop video recording.

8. BATTERY MANAGEMENT

The tablet features an 8850mAh (typical) battery. To optimize battery life:

- Adjust screen brightness to a comfortable level.
- Close unused applications running in the background.
- Enable battery saver mode when the battery is low.
- Utilize Smart Charging and Battery Protection features in Settings to extend battery lifespan.

The tablet supports 45W turbo charging via USB Type-C. For optimal charging speed, use a Xiaomi 45W power adapter.

9. SPECIFICATIONS

Feature	Description
Brand	XIAOMI
Model Name	Xiaomi Pad 7 PRO
Model Number	24091RPADG
Screen Size	11.2 Inches
Display Resolution	3200 x 2136, 345 ppi
Display Refresh Rate	144 Hz
Operating System	Android 14 HyperOS
Processor	Snapdragon 8s Gen 3 Mobile Platform (Octa-core, up to 3.0GHz)
RAM	8GB or 12GB LPDDR5X
Storage	256GB UFS 4.0 (variant dependent)
Rear Camera	50MP, JN1 lens, f/1.8
Front Camera	32MP, f/2.2
Battery Capacity	8850 mAh (typical)
Charging	45W Turbo Charging (adapter not included)
Connectivity	Wi-Fi 6E, Bluetooth 5.4
Sensors	Accelerometer, Gyroscope, Ambient light (color temperature), Rear Ambient light, Flicker, Hall, Side fingerprint, Magnetic, Proximity, RGB LED, IR remote control
Dimensions (L x W x Th)	9.89"L x 6.83"W x 0.24"Th
Weight	1 Pound

10. TROUBLESHOOTING

If you encounter issues with your Xiaomi Pad 7 Pro, try the following common troubleshooting steps:

- **Device not powering on:** Ensure the battery is charged. Connect the tablet to a power source and try again.
- **Screen unresponsive:** Restart the device by holding the Power button for approximately 10 seconds.
- **Wi-Fi connectivity issues:** Check your router and ensure Wi-Fi is enabled on the tablet. Try forgetting the network and reconnecting.
- **Applications crashing:** Clear the cache of the problematic app or reinstall it. Ensure your HyperOS is up to

date.

- **Slow performance:** Close background applications, clear storage space, or perform a factory reset (backup your data first).

11. WARRANTY AND SUPPORT

11.1 Warranty Information

Your Xiaomi Pad 7 Pro comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. The product typically includes a 30-day warranty from the manufacturer.

11.2 Customer Support

For further assistance, technical support, or warranty claims, please contact Xiaomi customer service through their official website or authorized service centers. You can also visit the [XIAOMI Store on Amazon](#) for product information and support resources.