

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fujifilm](#) /

› [FUJIFILM X-E5 Mirrorless Digital Camera XF23mmF2.8 Lens Kit - User Manual](#)

Fujifilm X-E5

FUJIFILM X-E5 Mirrorless Digital Camera XF23mmF2.8 Lens Kit - User Manual

Model: X-E5

INTRODUCTION

The FUJIFILM X-E5 is a compact mirrorless digital camera designed for photographers seeking a classic shooting experience with the versatility of interchangeable lenses. This manual provides essential information for setting up, operating, and maintaining your camera and XF23mmF2.8 lens kit.

PACKAGE CONTENTS

- FUJIFILM X-E5 Camera Body
- FUJINON XF23mmF2.8 R WR Lens
- Rechargeable Lithium-Ion Battery
- USB Cable
- Shoulder Strap
- Body Cap
- Lens Cap
- Lens Hood

CAMERA OVERVIEW

The FUJIFILM X-E5 features a rangefinder-style design with tactile controls for intuitive operation. Key components include the 40.2-megapixel X-Trans 5 HR sensor, X-Processor 5 imaging engine, and in-body image stabilization (IBIS).



Figure 1: Front view of the FUJIFILM X-E5 camera with the XF23mmF2.8 lens attached.



Figure 2: Top view of the FUJIFILM X-E5, showing the shutter speed dial, exposure compensation dial, and Film Simulation dial.



Figure 3: Rear view of the FUJIFILM X-E5, highlighting the electronic viewfinder and tilting LCD screen.

SETUP

- Charge the Battery:** Insert the supplied battery into the charger and connect it to a power source. The charging indicator will show the charging status.
- Insert Battery and Memory Card:** Open the battery/memory card compartment cover located at the bottom of the camera. Insert the charged battery and a compatible SD card (sold separately).
- Attach the Lens:** Align the white dot on the lens with the white dot on the camera body. Rotate the lens clockwise until it clicks into place.
- Initial Settings:** Turn on the camera using the ON/OFF switch. Follow the on-screen prompts to set the date, time, and language.

OPERATING THE CAMERA

Taking Photos

- Power On:** Flip the ON/OFF switch to ON.
- Adjust Settings:** Use the shutter speed dial, aperture ring on the lens, and exposure compensation dial to control exposure. The customizable Film Simulation dial allows quick access to various color profiles.
- Focus:** Half-press the shutter button to activate autofocus. The camera's AI-powered subject detection AF will identify and track subjects.
- Capture:** Fully press the shutter button to take a photo.

Video Recording

The X-E5 supports high-resolution video recording, including 4320p (4K) at 20fps. It also features in-body image stabilization for smoother footage.

- Switch to Video Mode:** Use the drive mode dial or a custom function button to select video recording mode.
- Start/Stop Recording:** Press the dedicated video record button to start and stop recording.

Your browser does not support the video tag.

Video 1: Overview of the FUJIFILM X-E5 Mirrorless Digital Camera with XF 23mm Lens, demonstrating key features and design.

ADVANCED FEATURES

- In-Body Image Stabilization (IBIS):** Provides up to seven stops of stabilization, reducing camera shake for sharper handheld images, especially in low light.
- AI-Powered Subject Detection AF:** The X-Processor 5 enables advanced autofocus that can detect and track a broader range of subjects, including humans, animals, and vehicles.
- Digital Teleconverter:** Utilize the 40.2-megapixel sensor to digitally zoom 1.4x or 2x, offering extended reach without changing lenses.
- Customizable Film Simulation Dial:** Beyond the standard Film Simulation modes, three customizable settings (FS1-FS3) allow users to save and instantly recall their preferred image processing recipes.

MAINTENANCE

- Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution.
- Cleaning the Lens:** Use a lens blower to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.
- Sensor Cleaning:** If dust spots appear on images, use the camera's built-in sensor cleaning function (refer to the on-screen menu). For persistent dust, professional cleaning is recommended.
- Storage:** When not in use, store the camera in a cool, dry place away from direct sunlight and moisture. Remove the battery if storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted correctly.
Images are blurry.	Incorrect focus, camera shake, or dirty lens.	Ensure proper focus. Utilize IBIS. Clean the lens.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files, format the card (this will erase all data), or try a different compatible card.
Video recording stops unexpectedly.	Memory card speed is too slow or camera overheating.	Use a faster memory card (UHS-II recommended). Allow the camera to cool down.

SPECIFICATIONS

Feature	Detail
Sensor	40.2 MP APS-C X-Trans CMOS 5 HR
Image Processor	X-Processor 5

Feature	Detail
Image Stabilization	In-Body Image Stabilization (IBIS), up to 7 stops
Autofocus	AI-Powered Subject Detection AF (Hybrid)
Video Resolution	Up to 4320p (4K)
Lens Mount	FUJIFILM X Mount
Included Lens	FUJINON XF23mmF2.8 R WR
Screen Size	3-inch Tilting LCD
Connectivity	Bluetooth
Weight	Approximately 2 Pounds (with battery and memory card)

WARRANTY AND SUPPORT

The FUJIFILM X-E5 Mirrorless Digital Camera XF23mmF2.8 Lens Kit comes with a **1 Year Limited Warranty**. For detailed warranty terms, service, and support, please refer to the official Fujifilm website or contact their customer service. For further assistance, visit the [Fujifilm Store](#).

