

DECAKILA KUTT019R

Decakila KUTT019R Cinema Style Popcorn Machine User Manual

Model: KUTT019R | Brand: DECAKILA

1. INTRODUCTION

Thank you for choosing the Decakila KUTT019R Cinema Style Popcorn Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW AND COMPONENTS

The Decakila KUTT019R Popcorn Machine is designed to bring an authentic cinema experience to your home. It features a classic red and gold design with clear panels, an illuminated interior, and a non-stick popping kettle.



Image 1: The Decakila KUTT019R Cinema Style Popcorn Machine, showcasing its red and gold exterior, clear viewing panels, and internal popping kettle. The machine is filled with freshly popped popcorn.

Key Components:

- **Main Unit:** Houses the heating element and motor.

- **Popping Kettle:** Non-stick interior for easy cooking and cleaning.
- **Stirring Rod:** Ensures even popping of kernels.
- **Clear Panels:** Allows visibility of the popping process.
- **Illuminated Interior:** Enhances the cinema experience and visibility.
- **Exterior Handle:** For safe and convenient serving.
- **Kernel Catcher Tray:** Collects unpopped kernels.

4. SETUP

Before first use, ensure all packaging materials are removed and the machine is placed on a stable, heat-resistant surface.

1. Unpack all components from the box.
2. Wipe down the exterior of the machine with a damp cloth.
3. Clean the popping kettle, stirring rod, and kernel catcher tray with warm, soapy water, then rinse thoroughly and dry.
4. Ensure the popping kettle is securely attached within the main unit.
5. Place the kernel catcher tray at the bottom of the machine.
6. Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare delicious cinema-style popcorn:

1. Ensure the machine is clean and properly assembled.
2. Add 1-2 tablespoons of cooking oil (vegetable, coconut, or canola oil recommended) to the popping kettle.
3. Add 2.5 oz (approximately 1/2 cup) of popcorn kernels to the kettle. Do not overfill.
4. Close the machine door securely.
5. Turn on the power switch. The kettle will begin to heat and the stirring rod will rotate.
6. Popcorn will begin to pop within a few minutes. The illuminated interior allows you to observe the process.
7. Once popping slows significantly (typically 2-3 minutes after the first kernel pops), turn off the power switch.
8. Carefully tilt the kettle using the exterior handle to empty the popped corn into the bottom of the machine.
9. Serve the popcorn using a scoop. Add salt, sugar, or other seasonings to taste.
10. Allow the machine to cool completely before preparing another batch or cleaning.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your popcorn machine.

1. Always unplug the machine and allow it to cool completely before cleaning.
2. Remove the popping kettle by carefully detaching it from its supports.
3. Wash the kettle, stirring rod, and kernel catcher tray with warm, soapy water. The non-stick coating makes cleaning easy. Rinse thoroughly and dry.

- 4. Wipe the interior and exterior of the machine with a damp cloth. For stubborn stains, use a mild detergent.
- 5. Do not use abrasive cleaners or scouring pads, as these can damage surfaces.
- 6. Ensure all parts are completely dry before reassembling or storing the machine.

7. TROUBLESHOOTING

If you encounter issues with your popcorn machine, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; power outage.	Check power cord connection; ensure switch is ON; check household power.
Popcorn not popping.	Kettle not heated; old kernels; insufficient oil.	Allow kettle to preheat; use fresh kernels; ensure correct oil amount.
Many unpopped kernels.	Insufficient heat; old kernels; too many kernels.	Ensure proper heating; use fresh kernels; do not exceed capacity.
Popcorn tastes burnt.	Overheating; left in kettle too long.	Turn off machine immediately after popping slows; reduce oil if necessary.

8. SPECIFICATIONS

- **Brand:** DECAKILA
- **Model:** KUTT019R
- **Color:** Red
- **Capacity:** 2.5 Ounces (approx. 10 cups per cycle)
- **Product Dimensions:** 24 cm (L) x 27 cm (W) x 42 cm (H)
- **Product Weight:** 4 Kilograms

9. WARRANTY AND SUPPORT

This Decakila KUTT019R Popcorn Machine comes with a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or contact DECAKILA customer service directly. Keep your purchase receipt as proof of purchase.