

Manuals.plus /

- › Beudsa ChargN /
- › Beudsa ChargN Car Charger User Manual for Trexonic TRX-1580 TRX-1680 Portable DVD Players

Beudsa ChargN TRX-1580, TRX-1680

Beudsa ChargN Car Charger User Manual

FOR TREXONIC TRX-1580 & TRX-1680 PORTABLE DVD PLAYERS

Introduction

This manual provides essential instructions for the safe and effective use of your Beudsa ChargN Car Charger. This charger is designed to power Trexonic TRX-1580 and TRX-1680 portable DVD players directly from your vehicle's 12-24V DC power outlet. Please read this manual thoroughly before use and retain it for future reference.

The charger features built-in safety mechanisms including over voltage, over current, and over temperature protection to ensure reliable operation and protect your devices.

Product Overview



Weight:31g

Image 1: The Beudsa ChargN Car Charger, showing the cigarette lighter plug, coiled cable, and round DC output plug. This image highlights the overall design and connection points.



Image 2: A closer view of the Beudsa ChargN Car Charger, emphasizing the coiled cable and the round DC output plug. The cigarette lighter plug is also visible, ready for insertion into a vehicle's power socket.

Safety Information

- Do not expose the charger to water or excessive moisture.
- Avoid dropping or subjecting the charger to strong impacts.
- Do not attempt to disassemble or modify the charger. This will void the warranty and may cause damage or injury.
- Ensure the car's power outlet is clean and free of debris before inserting the charger.
- Always unplug the charger from the car's power outlet when not in use or when leaving the vehicle.
- Use only with compatible devices as specified (Trexonic TRX-1580, TRX-1680 portable DVD players).

Setup

1. **Identify the Car Power Outlet:** Locate the 12-24V DC power outlet (often called a cigarette lighter socket) in your vehicle.
2. **Connect to Car:** Insert the car charger's plug firmly into the vehicle's DC power outlet. Ensure a secure connection.
3. **Connect to DVD Player:** Locate the power input port on your Trexonic TRX-1580 or TRX-1680 portable DVD player. Insert the round DC output plug of the car charger into this port.
4. **Verify Connection:** Once both ends are connected, your DVD player should receive power. Refer to your DVD player's manual for specific power indicator lights.

Operating Instructions

Once properly connected as described in the "Setup" section, the Beudsa ChargN Car Charger will automatically supply power to your Trexonic portable DVD player. There are no additional operating controls on the charger itself.

- Ensure your vehicle's ignition is on or in accessory mode for the power outlet to be active, if required by your vehicle model.
- Operate your portable DVD player as per its own instruction manual.
- Disconnect the charger from both the car and the DVD player when not in use to conserve vehicle battery power and prevent accidental damage.

Maintenance and Care

- **Cleaning:** Use a soft, dry cloth to clean the charger. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the charger in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:** Do not pull on the cable to disconnect the charger. Always grasp the plug itself. Avoid bending or crimping the cable sharply.

Troubleshooting

Problem	Possible Cause	Solution
DVD player not receiving power.	<ul style="list-style-type: none">◦ Loose connection.◦ Vehicle's power outlet is not active.◦ Faulty car power outlet fuse.◦ Incompatible device.◦ Damaged charger.	<ul style="list-style-type: none">◦ Ensure both ends of the charger are securely plugged in.◦ Check if your vehicle's ignition needs to be on or in accessory mode.◦ Consult your vehicle's manual to check and replace the fuse for the power outlet.◦ Confirm your DVD player is a Trexonic TRX-1580 or TRX-1680.◦ If the charger is visibly damaged, discontinue use and replace it.
Charger feels unusually hot.	<ul style="list-style-type: none">◦ Overload or short circuit.◦ Poor ventilation.	<ul style="list-style-type: none">◦ Immediately disconnect the charger from both the car and the DVD player.◦ Ensure the charger is not covered or in an enclosed space during operation.◦ If overheating persists, discontinue use.

Specifications

Brand	Beudsa ChargN
Compatible Devices	Trexonic TRX-1580, TRX-1680 Portable DVD Players
Input Voltage	12-24V DC
Connector Type	Round Plug
Cable Length	Approximately 4 feet (1.2 meters)
Safety Features	Over voltage, over current, over temperature protection
Color	Black
Item Weight	3 Ounces (approx. 85 grams)
ASIN	B0FC1KYY3H

Warranty Information

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty duration and terms, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Beudsa ChargN customer support. Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.