

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LeapFrog](#) /

› [LeapFrog Preschool Game and Go Handheld Video Game Toy Instruction Manual](#)

LeapFrog 80-621200

LeapFrog Preschool Game and Go Handheld Video Game Toy Instruction Manual

Model: 80-621200

Brand: LeapFrog

INTRODUCTION

The LeapFrog Preschool Game and Go is a handheld video game toy designed to introduce young children to fundamental concepts such as numbers, letters, and shapes through engaging mini-games and music. This device offers a portable and interactive learning experience for children aged 2 years and older.

WHAT'S IN THE BOX

- LeapFrog Preschool Game and Go Handheld Toy
- Quick Start Guide

Note: 3 AAA batteries are included for demo purposes only. New batteries are recommended for regular use.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the device.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Figure 1: Front view of the LeapFrog Preschool Game and Go.

Power On/Off

- To power on the device, slide the orange power switch located on the right side of the unit upwards.
- To power off the device, slide the orange power switch downwards.

Volume Control

- The device features two volume settings.
- Adjust the volume using the dedicated switch or button, typically located near the power switch, to select between a lower or higher sound output.

OPERATING INSTRUCTIONS

Controls

- **Directional Pad (D-Pad):** Located on the left side, use this to navigate menus and control characters within games.
- **A Button:** Typically used for selection or action within games.
- **B Button:** Typically used for secondary actions or going back in menus.

Game Selection

The device features six distinct game icons below the screen. Press the corresponding icon to select a game:

- **ABC Icon:** Activates the ABC Swim game.
- **123 Icon:** Activates the 123 Treasure game.
- **Penguin Icon:** Activates the Letter Slide game.
- **Bug Icon:** Activates the Snack Track game.
- **Shapes Icon:** Activates the Shape Ape game.
- **Music Note Icon:** Activates the Song Shuffle feature.

Personalizing Game Play

You can personalize the experience by adding a child's name (up to 10 characters). The child's name will appear in certain games, such as the Letter Slide game, where they collect letters to spell their name.

LEARNING GAMES

The LeapFrog Preschool Game and Go includes six exciting learning games:

- **ABC Swim:** Pop bubbles to explore letter sounds.
- **123 Treasure:** Collect coins and count hearts to introduce numbers.
- **Letter Slide:** Help a penguin slide and jump to collect letters, including those in the child's personalized name.
- **Snack Track:** Feed a hungry bug by eating and counting snacks.
- **Shape Ape:** Catch various shapes as they fall from trees.
- **Song Shuffle:** Dance along to three engaging learning songs.

Video 1: Official product video showcasing the LeapFrog Preschool Game & Go features and gameplay.



Figure 2: The ABC Swim game interface on the device screen.



Figure 3: The Shape Ape game interface on the device screen.

- To clean the device, wipe it with a slightly damp cloth. Do not immerse in water.
- Avoid exposing the device to extreme temperatures or direct sunlight.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Device not turning on:** Ensure fresh batteries are correctly installed. Check the power switch position.
- **No sound or low sound:** Adjust the volume switch. Replace batteries if sound is distorted or very low.
- **Screen issues:** If the screen is blank or flickering, try turning the device off and on again. Replace batteries if the issue persists.
- **Unresponsive buttons:** Ensure the device is powered on. If a specific button is unresponsive, try cleaning around it. If the issue continues, replace batteries.

SPECIFICATIONS

Feature	Detail
Model Number	80-621200
Age Range	2+ Years
Power Source	Battery Powered
Batteries Required	3 AAA batteries (included for demo)
Controller Type	Button Control
Display Type	Digital
Material	Plastic
Product Dimensions	1.3 x 4.1 x 5.6 inches
Item Weight	6.4 ounces

WARRANTY AND SUPPORT

For warranty information, product registration, or additional support, please refer to the contact information provided in the Quick Start Guide included with your product or visit the official LeapFrog website. Keep your purchase receipt for warranty claims.

