

PSIIDAN B0FC2HTZ3P

PSIIDAN Professional Countertop Blender with 68oz Pitcher Instruction Manual

Model: B0FC2HTZ3P

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your PSIIDAN Professional Countertop Blender. Please read this manual thoroughly before first use and retain it for future reference. This appliance is designed for household use to blend, grind, and mix various food items.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.

The PSIIDAN Professional Countertop Blender features a control panel with POWER, PULSE, SPEED (MIN-MAX), and TIMER (0-5, START) functions.



Image: Close-up of the blender's control panel, highlighting the POWER and PULSE buttons, the variable speed dial (MIN to MAX), and the timer dial (0 to 5 and START).

5.1. General Blending

1. Ensure the pitcher is correctly assembled and ingredients are added.
2. Turn the TIMER knob to "START" if no specific timing is required, or to a desired time setting (1-5 minutes).
3. Press the **POWER** button to turn on the blender.
4. Adjust the **SPEED** dial from MIN to MAX to achieve the desired consistency.
5. For tough ingredients or to break up large pieces, use the **PULSE** button. Press and hold for short bursts, then release.
6. When blending is complete, turn the SPEED dial to MIN, then press the POWER button to turn off the blender. Unplug the appliance.

5.2. Variable Speed Control

The SPEED dial allows for precise control over blending consistency:

- **MIN:** Ideal for gentle mixing, purees, or starting to process delicate ingredients.
- **MAX:** Provides maximum power for crushing ice, making smoothies, or processing tough ingredients.



Image: Illustration of the variable speed control dial, indicating that lower speeds are suitable for juices and smoothies,

while higher speeds are for milkshakes, purees, and thicker consistencies like hummus.

5.3. Timer Setting

The TIMER knob allows for timed blending operations:

- **"START"**: If no specific timing is needed, turn the knob to "START". The blender will operate continuously until manually turned off.
- **"0"**: If the knob is turned to "0", pressing the POWER button will not start the machine. This acts as a safety off position.
- **"1" ~ "5"**: When the knob is turned to any number from 1 to 5, pressing the POWER button will start the machine and set the timer for that duration in minutes. The blender will automatically stop when the timer expires.



Image: Illustration of the timer dial, explaining the functions of the "START", "0", and numbered (1-5 minutes) settings for automated blending.

5.4. Grinding Cup Attachment (Optional)

For grinding dry ingredients like coffee beans or spices, use the 20oz grinding cup:

1. Ensure the blender is unplugged.
2. Attach the grinding cup to the motor base, ensuring it is securely locked.
3. Add dry ingredients to the grinding cup. Do not overfill.
4. Plug in the blender and follow the general blending instructions (Section 5.1), typically using a medium to high speed for grinding.
5. After grinding, unplug the blender before removing the grinding cup.



COME WITH 20oz. GRINDER
 Equipped with a grinding cup to grind coffee beans, etc.
 easy to do wet and dry separation

Image: The PSIIDAN blender with its 20oz grinding cup attachment, filled with coffee beans, demonstrating its use for dry ingredient processing. A cup of coffee and toast are shown nearby.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your blender.

6.1. Self-Cleaning Function

1. After use, rinse the pitcher.
2. Fill the pitcher halfway with warm water and add a few drops of dish soap.
3. Secure the lid and place the pitcher on the motor base.
4. Run the blender on a medium speed for 30-60 seconds.
5. Empty the pitcher, rinse thoroughly with clean water, and allow to air dry.

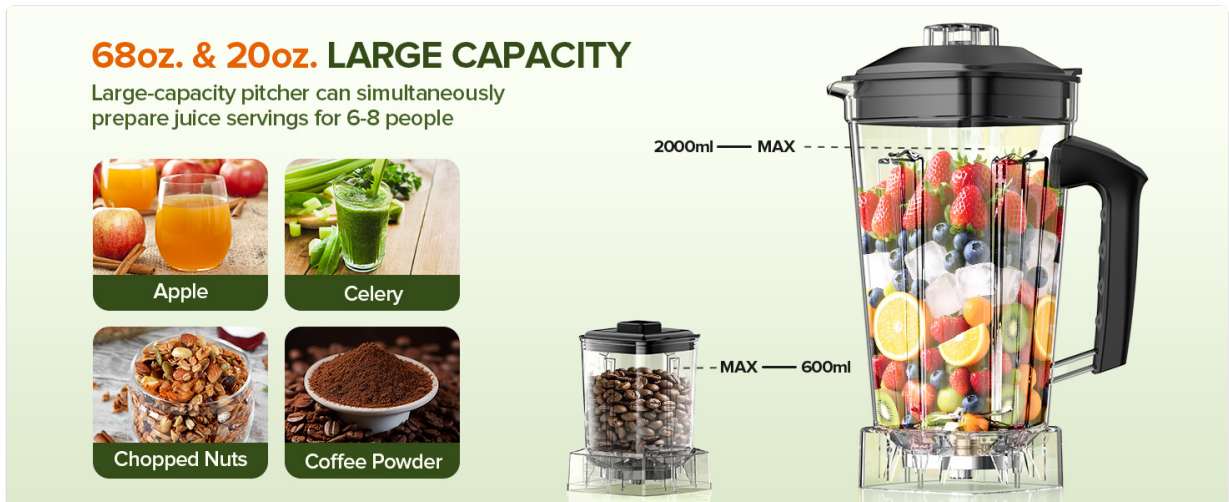


Image: Visual demonstration of the self-cleaning process, showing a dirty blender pitcher before cleaning and a clean pitcher filled with soapy water during the self-cleaning cycle.

6.2. Dishwasher Safe Components

The 68oz blending pitcher and lid are dishwasher safe. Place them on the top rack of your dishwasher.

- Do not place the motor base in the dishwasher. Wipe the motor base with a damp cloth.
- Ensure all parts are completely dry before reassembling or storing.

VARIABLE SPEED CONTROL

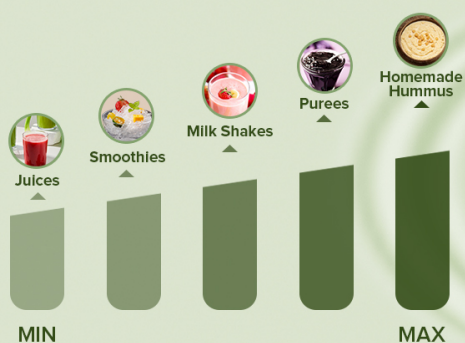


Image: Depiction of the dishwasher-safe components, showing the blender pitcher and lid placed in a dishwasher rack before and after a wash cycle.

6.3. Storage

Store the blender in a clean, dry place. Ensure the pitcher is empty and clean before storage. Do not store the blender with the cord wrapped tightly around the base.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	<ul style="list-style-type: none"> Not plugged in. Pitcher not correctly seated. Timer knob set to "0". Overheat protection activated. 	<ul style="list-style-type: none"> Ensure power cord is securely plugged into an outlet. Ensure pitcher is properly aligned and locked onto the motor base. Turn the TIMER knob to "START" or a numbered setting (1-5). Unplug the blender and let it cool down for 15-30 minutes before restarting.
Ingredients are not blending smoothly.	<ul style="list-style-type: none"> Too little liquid. Too many ingredients. Ingredients are too large or dense. 	<ul style="list-style-type: none"> Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the tamper to push ingredients towards the blades.
Loud noise or burning smell.	<ul style="list-style-type: none"> Overloading the motor. Foreign object in pitcher. 	<ul style="list-style-type: none"> Immediately turn off and unplug. Reduce load. Unplug and inspect pitcher for any foreign objects. If the issue persists, discontinue use and contact customer support.
Leakage from pitcher base.	<ul style="list-style-type: none"> Pitcher not properly assembled. Seal ring damaged or missing. 	<ul style="list-style-type: none"> Ensure the blade assembly is tightly secured to the pitcher base. Check the seal ring for proper placement and condition. Replace if damaged.

8. SPECIFICATIONS

- **Brand:** PSIIDAN
- **Model:** B0FC2HTZ3P
- **Power:** 1800W
- **Motor Speed:** Up to 28,000 RPM
- **Main Pitcher Capacity:** 68oz (2000ml)
- **Grinding Cup Capacity:** 20oz (600ml)
- **Voltage:** 120V
- **Material:** BPA Free Plastic (Container), Stainless Steel (Blade)
- **Dimensions:** 7.87"D x 8.66"W x 19.88"H
- **Item Weight:** 9.53 pounds
- **Special Features:** Detachable Attachment, Multiple Speeds, Overheat Protection

9. WARRANTY AND SUPPORT

This PSIIDAN Professional Countertop Blender comes with a Limited Warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact PSIIDAN customer service through the retailer where the product was purchased or visit the official PSIIDAN website.

Note: The warranty does not cover damage caused by misuse, neglect, accident, alteration, or improper installation.