

[Manuals.plus](#) /

> [WONNIE](#) /

> WONNIE 17.6" Portable Blu Ray Player with 15.4" 1080P Full HD Large Swivel Screen, Blu-ray DVD Player with HDMI Out & AV in, Built-in Rechargeable Battery, Support MP4, MKV Video & USB/SD Card W-BR156

WONNIE W-BR156

WONNIE Portable Blu-ray DVD Player

USER MANUAL

Introduction

The WONNIE W-BR156 Portable Blu-ray DVD Player is designed to provide a high-quality entertainment experience on the go. Featuring a 15.4-inch 1080P Full HD swivel screen, this player supports a wide range of disc and digital media formats, including Blu-ray, DVD, CD, USB, and SD card playback. It is equipped with a built-in rechargeable battery, dual stereo speakers, and HDMI output for connecting to larger displays, ensuring versatile use for various environments such as home, car, or outdoor settings.



Figure 1: WONNIE W-BR156 Portable Blu-ray DVD Player with remote control.

What's in the Box

Upon unboxing, please verify that all the following components are included:

- 1 x Blu-Ray Portable DVD Player
- 1 x Remote Control
- 1 x AC Adaptor
- 1 x Car Charger
- 1 x RCA Cable

Package List



Figure 2: Included accessories with the WONNIE W-BR156 Portable Blu-ray DVD Player.

Product Overview

Familiarize yourself with the various ports and controls on your WONNIE portable Blu-ray player.

Package List



Figure 3: Side panel connections of the WONNIE W-BR156 player.

- **DC IN 12V:** Power input for AC adapter or car charger.
- **LAN:** Ethernet port (functionality may vary by model/firmware).
- **USB:** For connecting USB flash drives.
- **HDMI OUT:** For connecting to external displays like TVs or projectors.
- **SD/MMC:** For inserting SD or MMC memory cards.
- **AV IN:** For connecting external audio/video sources.

- **HEADPHONE:** 3.5mm audio jack for headphones.
- **POWER ON/OFF:** Main power switch.

Setup

1. Charging the Battery

Before first use, fully charge the built-in 5000mAh rechargeable battery. Connect the AC adapter to the DC IN 12V port on the player and plug it into a wall outlet. The charging indicator light will typically show the charging status.

2. Powering On/Off

Slide the POWER ON/OFF switch to the 'ON' position to turn on the player. To turn off, slide the switch to the 'OFF' position.

3. Power Systems

The player can be powered by its internal rechargeable battery, the included AC adapter for home use, or the car charger for in-vehicle use.

Bring the Movie Theater Home

Sync 1080P Video to Larger Screen (TV or Projector) via HDMI Output



Figure 4: Powering options for the portable Blu-ray player.

Operating Instructions

1. Disc Playback

Open the disc cover and carefully place a disc onto the spindle, ensuring it clicks into place. Close the cover. The player will automatically detect the disc and begin playback. Supported disc formats include: BD, BD-R, BD-RE, DVD, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW. Blu-ray Discs are Region A/1, while Standard DVDs are All

Multiple Formats Support

Compatible with Blu-ray Discs from Region A(1)
and Region-Free Standard DVDs



BD, BD-R, BD-RE



DVD, DVD±R, DVD±RW, CD,
CD±R, CD±RW, VCD, SVCD,
SVCD



MP4, MOV, MPG, VOB, 3GP,
FLV, AVI, MKV, TP, TS
(up to 1080P)



MP3, OGG, WMA,
WAV, APE, FLAC



JPG, PNG, BMP, TIF



Figure 5: Disc insertion and supported media formats.

2. USB/SD Card Playback

Insert a USB flash drive into the USB port or an SD/MMC card into the SD/MMC slot. The player supports USB 2.0 and SD/MMC cards up to 32GB (FAT32 format). You can play HD video up to 1920x1080@30fps. Supported file formats include: Images (JPG, PNG, BMP, TIF), Audio (MP3, OGG, WMA, WAV, APE, FLAC), and Video (MP4, MOV, MPG,

VOB, 3GP, FLV, AVI, MKV, TP, TS).

3. HDMI Output Function

Connect the player to a TV or projector using an HDMI cable (not included) via the HDMI OUT port. This allows you to enjoy content on a larger screen with 1080P picture quality and high-fidelity sound. When connected via HDMI, the player's screen will automatically turn off for optimal viewing on the external display.

3 Power Systems

Keep you entertained for hours without interruption



5000mAh

5000 mAh

Rechargeable Battery

Power Adapter

Car Charger

Figure 6: Connecting the player to a TV via HDMI.

4. Audio Output

The player features dual high-performance stereo speakers for an immersive audio experience. For private listening, connect headphones to the 3.5mm HEADPHONE jack.



Figure 7: Dual stereo speakers for enhanced sound.

5. Swivel Screen Functionality

The 15.4-inch screen can be rotated 270 degrees and flipped 180 degrees, allowing for comfortable viewing from various

angles or folding flat like a tablet.



Figure 8: Screen rotation and flip capabilities.

6. Last Memory Function (Resume Playback)

The player supports a resume playback function, allowing you to continue watching from where you left off. To ensure this feature works correctly, remove the disc from the player before turning off the device.

Play from Where You Left Off

Tip: The last memory function works only if you remove the disc before turning off the device.



180° Flip & 270° Swivel Screen



Figure 9: Last memory function for seamless viewing.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the player's surface. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Avoid abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge the battery to about 50% and store in a cool, dry place.
- **Storage:** Store the player in a cool, dry environment away from direct sunlight, extreme temperatures, and excessive dust.

Troubleshooting

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power adapter not connected or faulty; Power switch is off.	Charge the battery; Ensure AC adapter/car charger is properly connected; Slide POWER ON/OFF switch to 'ON'.
Disc does not play or is unreadable.	Disc is dirty, scratched, or inserted incorrectly; Unsupported disc format or region code.	Clean the disc; Reinsert the disc correctly; Ensure disc format and region are supported (Blu-ray Region A/1, DVD All Regions).
No sound from speakers or headphones.	Volume is too low or muted; Headphones not fully plugged in; Audio settings issue.	Increase volume; Check mute setting; Ensure headphones are fully inserted; Check player's audio settings.
No picture on external TV via HDMI.	HDMI cable is loose or faulty; TV input not set to correct HDMI port; Player's screen is still on.	Check HDMI cable connection; Select correct HDMI input on TV; Player's screen should turn off automatically when HDMI is connected.
USB/SD card content not recognized.	Unsupported file format; Card/drive not formatted to FAT32; Card/drive capacity exceeds 32GB.	Ensure files are in supported formats (MP4, MP3, JPG, etc.); Format card/drive to FAT32; Use cards/drives up to 32GB.

Specifications

Feature	Detail
Model Number	W-BR156
Screen Size	15.4 Inches (17.6" diagonal overall)
Display Type	LCD, 1080P Full HD
Disc Formats Supported	BD, BD-R, BD-RE, DVD, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW (Blu-ray: Region A/1; DVD: All Regions)
USB/SD Card Support	USB 2.0, SD/MMC card up to 32GB (FAT32)
Video Formats (USB/SD)	MP4, MOV, MPG, VOB, 3GP, FLV, AVI, MKV, TP, TS (up to 1920x1080@30fps)
Audio Formats (USB/SD)	MP3, OGG, WMA, WAV, APE, FLAC
Image Formats (USB/SD)	JPG, PNG, BMP, TIF
Battery	Built-in 5000mAh rechargeable Lithium Metal battery

Feature	Detail
---------	--------

Connectivity	HDMI OUT, AV IN, USB, SD/MMC, 3.5mm Headphone Jack, DC IN 12V, LAN
Item Weight	4 pounds
Dimensions	17.2 x 13.43 x 3.7 inches (Package Dimensions)

Warranty and Support

WONNIE offers a new replacement or refund for reasons within 365 days of purchase. Professional technical support is also available. If you have any questions about your portable DVD player, or if any parts are missing or the item arrives damaged, please reach out to WONNIE directly via "Get Product Support" on the Amazon order page or through their after-sales email.

For further assistance, please visit the official WONNIE store on Amazon: [WONNIE Store](#)