

Parrot Uncle BBCPS1268-A4-NBR

Parrot Uncle 52-Inch Ceiling Fan with Light

Model: BBCPS1268-A4-NBR

1. INTRODUCTION

This instruction manual provides detailed guidance for the safe installation, operation, and maintenance of your new Parrot Uncle 52-inch ceiling fan with integrated LED light. Please read all instructions carefully before beginning installation and retain this manual for future reference.

This ceiling fan features a quiet AC motor, 6-speed settings, dimmable LED lighting, and reversible blades for year-round comfort. It is designed for indoor and covered outdoor use.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these instructions:

- Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting a minimum of 35 lbs (15.9 kg).
- Do not bend blade holders during installation, balancing, or cleaning.
- Keep hands, tools, and other objects clear of rotating fan blades.
- Ensure the fan is installed with a minimum of 7 feet (2.1 meters) clearance from the floor to the blade trailing edge.
- Do not operate the fan if any part is damaged.

3. PACKAGE CONTENTS

Carefully unpack your fan and inspect the contents. Ensure all items are present and undamaged. If any parts are missing or damaged, contact customer support.

- Motor Housing Assembly
- Fan Blades (4)
- Downrod (4.5 inch)

- Mounting Bracket
- Canopy
- LED Light Kit
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

Dimensions

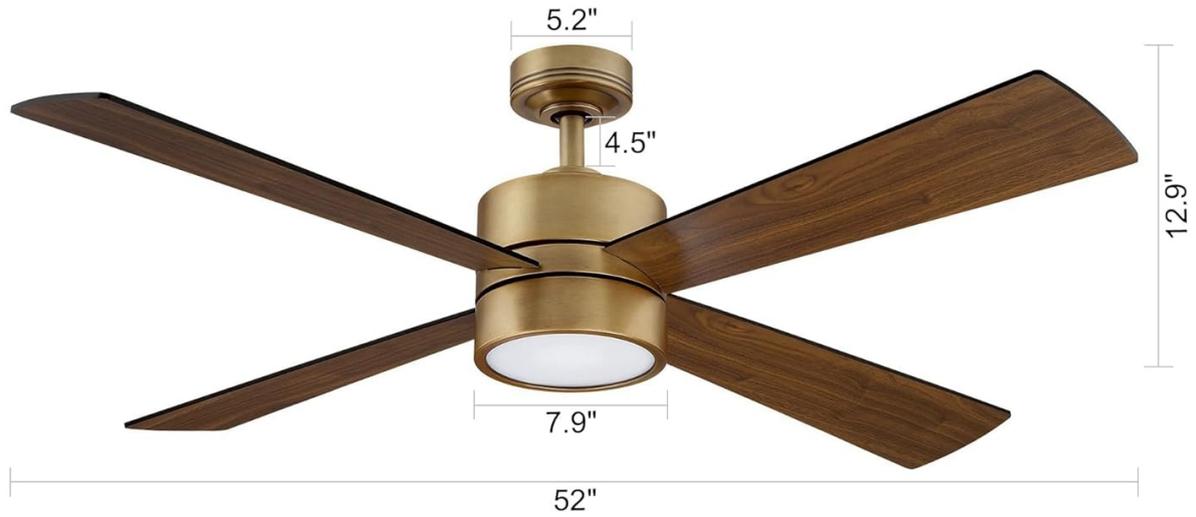


Figure 3.1: Fan Dimensions and Key Components

4. SPECIFICATIONS

Feature	Specification
Brand	Parrot Uncle
Model Name	52 Inch Ceiling Fans with Lights
Model Number	BBCPS1268-A4-NBR

Product Dimensions	52"L x 52"W x 12.9"H
Material	Iron (Housing), Walnut Plywood (Blades)
Motor Type	AC Motor
Number of Speeds	6
Airflow	3325 CFM
Light Source Type	Integrated LED Module
LED Wattage	18W
Color Temperature	3000K (Warm Light)
Brightness	1500 Lumens
Control Method	Remote Control
Voltage	110 Volts
Indoor/Outdoor Usage	Indoor, Covered Outdoor
Special Features	Dimmable, LED Light, Remote Controlled, Reversible Airflow, Timer

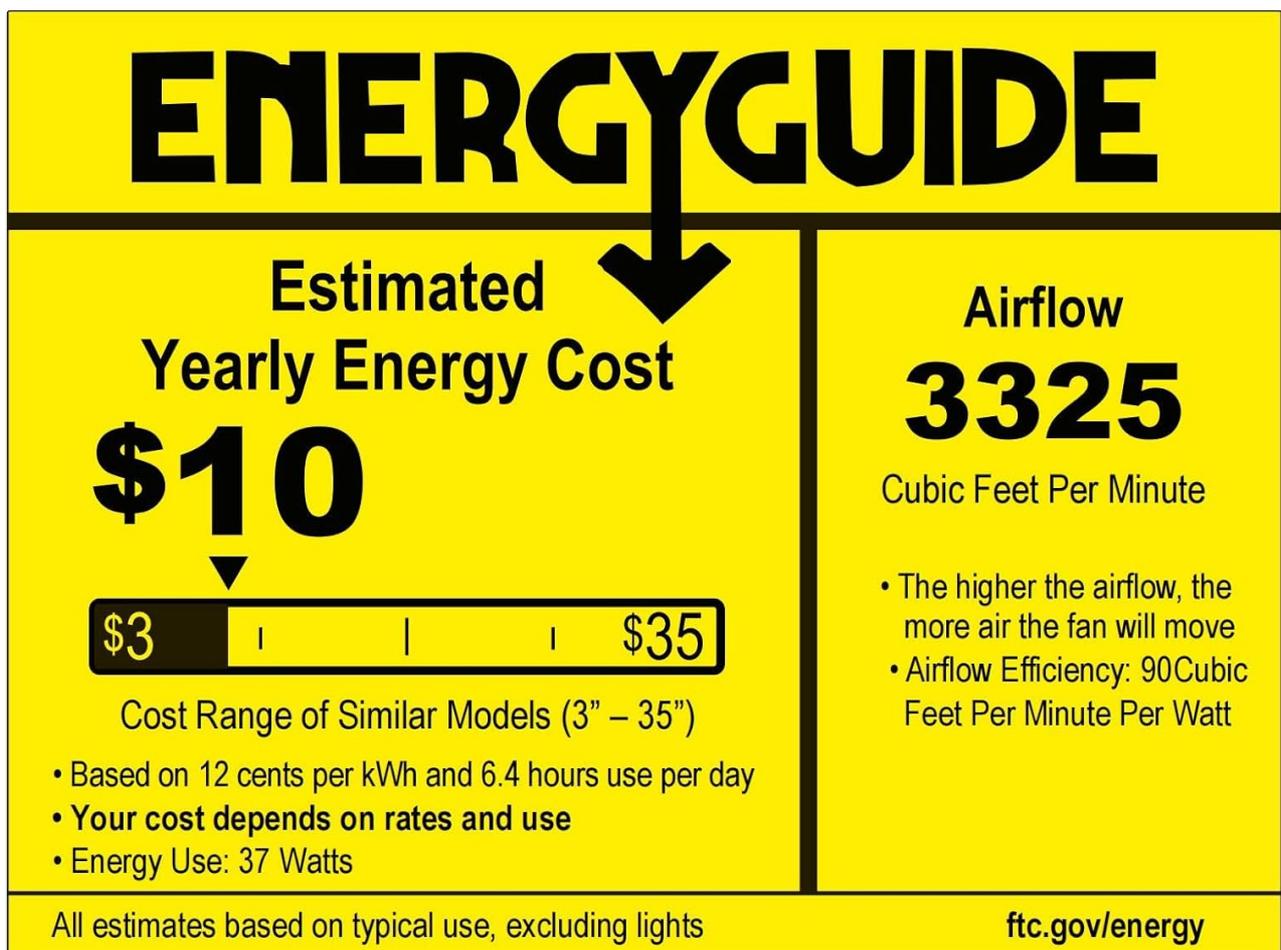


Figure 4.1: Energy Guide Information

5. INSTALLATION

Professional installation is recommended for safety and optimal performance. Ensure power is OFF at the circuit breaker before proceeding.

5.1 Mounting the Bracket

1. Secure the mounting bracket to the ceiling junction box using the provided screws and washers. Ensure the bracket is firmly attached and can support the fan's weight.
2. For sloped ceilings, ensure the mounting bracket is installed correctly to allow the fan to hang plumb.

5.2 Assembling the Fan

1. Insert the downrod through the canopy and coupling.
2. Route the electrical wires from the motor through the downrod.
3. Attach the downrod to the motor housing, securing it with the pin and screws.
4. Carefully lift the fan assembly and hang it on the mounting bracket hook.

5.3 Wiring Connections

1. Connect the fan's electrical wires to the household supply wires according to the wiring diagram in the full manual (typically black to black, white to white, and green/bare copper to ground). Use the provided wire nuts.
2. Ensure all connections are secure and properly insulated.

5.4 Attaching Blades and Light Kit

1. Attach the fan blades to the motor housing using the blade screws. Ensure they are tightened securely.
2. Connect the LED light kit wires to the fan's light wires.
3. Secure the LED light kit to the bottom of the motor housing.



Figure 5.1: Downrod Mount Options

6. OPERATING INSTRUCTIONS

Your Parrot Uncle ceiling fan is operated via the included remote control.

6.1 Remote Control Functions



Figure 6.1: Remote Control Layout

- **Fan ON/OFF:** Press the fan icon button to turn the fan on or off.
- **Fan Speed:** Use the 'up' and 'down' arrow buttons to cycle through 6 fan speeds.
- **Light ON/OFF:** Press the light bulb icon button to turn the LED light on or off.
- **Light Dimming:** Hold the light bulb icon button to adjust the brightness of the LED light (stepless dimming).
- **Timer:** Press 1H, 3H, 6H, or 8H to set the fan to automatically shut off after the selected duration.

6.2 Reversible Motor Function

The fan features a reversible motor for seasonal use. A switch on the fan's motor housing (or sometimes on the remote) controls the direction of blade rotation.

- **Summer Mode (Downward Airflow):** Set the switch to circulate air downwards, creating a cooling breeze.
- **Winter Mode (Upward Airflow):** Set the switch to circulate air upwards, helping to redistribute warm air trapped near the ceiling.

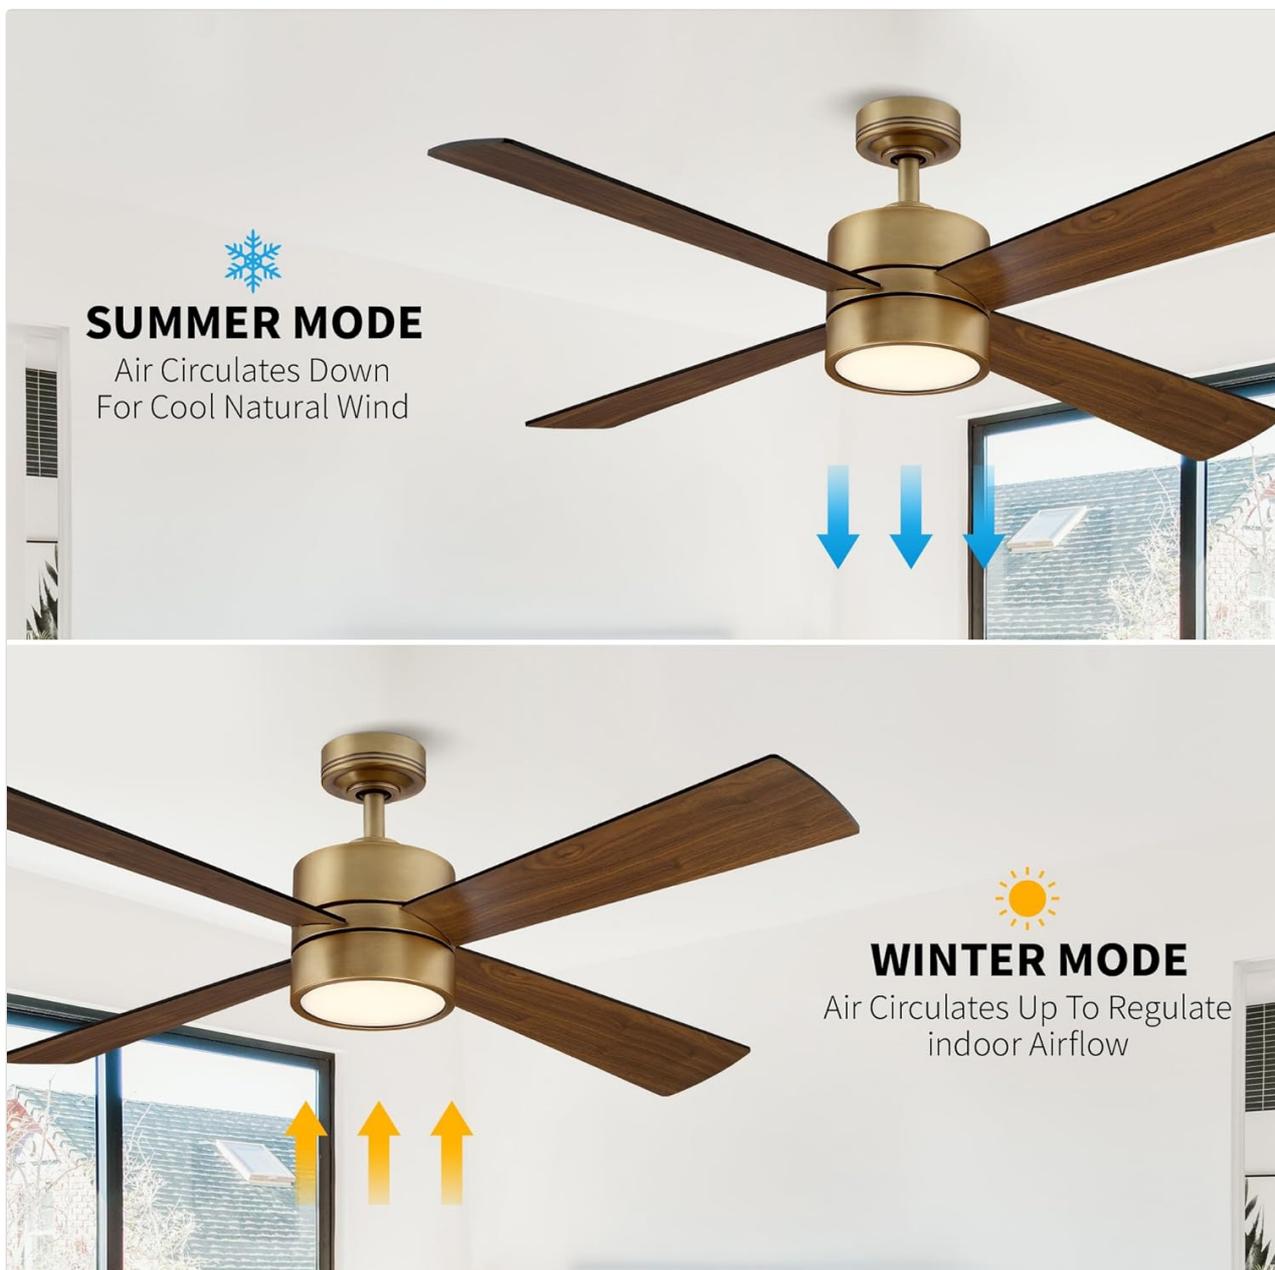


Figure 6.2: Summer and Winter Modes

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight. A balancing kit (not included) can be used to correct minor wobbles.
- **Light Source:** The LED light module is integrated and designed for long life. If it requires replacement, contact customer support.

8. TROUBLESHOOTING

Before attempting any repairs, ensure power is disconnected at the circuit breaker.

Problem	Possible Cause	Solution
---------	----------------	----------

Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired	Check circuit breaker; Verify all wire connections are secure; Replace remote battery or re-pair remote.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket	Tighten all blade screws; Use a balancing kit; Ensure mounting bracket is secure.
Light does not work	Loose wire connection; LED module failure; Remote control issue	Check light kit wiring; Contact customer support for LED module replacement; Check remote battery.
Remote control not working	Low battery; Not paired with fan; Obstruction	Replace battery (CR2032); Follow pairing instructions (refer to full manual); Ensure clear line of sight to fan receiver.

9. WARRANTY AND SUPPORT

This Parrot Uncle ceiling fan comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical assistance, missing parts, or warranty claims, please contact Parrot Uncle customer support. Have your model number (BBCPS1268-A4-NBR) and purchase information ready when contacting support.

Customer Support: Please visit the official Parrot Uncle website or refer to your purchase documentation for contact details.