



Manuals.plus /

› Pinmoco /

› Pinmoco TV Stand G700412K-RST User Manual

## Pinmoco G700412K-RST

# Pinmoco TV Stand User Manual

Model: G700412K-RST

## 1. INTRODUCTION

---

Thank you for choosing the Pinmoco TV Stand. This entertainment center is designed to accommodate TVs up to 47 inches, offering a stylish and functional solution for your living room or bedroom. Its open-shelf design promotes air circulation for electronics and provides ample storage for media devices and accessories. This manual provides essential information for assembly, usage, and maintenance to ensure safe and optimal performance of your TV stand.



Figure 1: Pinmoco TV Stand (Rustic Brown)

## 2. SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- Keep all small parts and packaging materials away from children.
- Ensure all connections are secure before placing any items on the stand.
- Do not overload the shelves. Refer to the Specifications section for weight limits.
- Place the TV stand on a flat, stable, and level surface to prevent tipping.
- Avoid exposing the stand to direct sunlight or extreme humidity to prolong its lifespan.
- Do not stand or climb on the TV stand.
- Use only the provided hardware for assembly.

## 3. PACKAGE CONTENTS

---

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Top Panel (Wood)
- Metal Frame Components
- Mesh Shelves (2 large, 2 small)
- Adjustable Feet
- Hooks (4 pieces)
- Assembly Hardware (screws, Allen wrench)
- Instruction Manual

## 4. SETUP AND ASSEMBLY

---

Assembly typically takes 30-45 minutes and requires an Allen wrench (provided). Follow these general steps:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list to ensure all pieces are present.
2. **Assemble the Main Frame:** Connect the vertical metal frame components using the provided screws and Allen wrench. Ensure all connections are finger-tight at this stage.
3. **Attach Shelves:** Insert the mesh shelves into their designated slots within the frame. Secure them with screws. The two larger shelves typically form the bottom tier, and the two smaller shelves form the middle tier.
4. **Install Top Panel:** Place the wooden top panel onto the assembled frame. Secure it using the appropriate screws.
5. **Attach Hooks:** Secure the four hooks to the side frames as desired for additional storage.
6. **Tighten All Screws:** Once all components are in place, systematically tighten all screws to ensure the stand is stable and secure. Do not overtighten.
7. **Adjust Feet:** Install the adjustable feet on the bottom of the stand. Adjust them as needed to level the stand on uneven surfaces.

# Product Size



Figure 2: Product Dimensions and Weight Capacities

## 5. USAGE

This TV stand is designed for versatile use in various rooms. Follow these guidelines for optimal use:

- **TV Placement:** Carefully place your TV on the top panel. Ensure the TV's base fits securely within the stand's dimensions. This stand is suitable for TVs up to 47 inches.
- **Media Device Organization:** Utilize the open mesh shelves to store game consoles (e.g., Xbox, PlayStation), media players, soundbars, and other electronic devices. The open design helps prevent overheating.
- **Cable Management:** The open structure allows for easy routing and management of cables, helping to keep your entertainment area tidy.
- **Accessory Storage:** Use the side hooks for hanging headphones, remote controls, or other small accessories. The lower shelves can also store books, DVDs, or decorative items.



Figure 3: TV Stand in use with various media devices

## 6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust the shelves and frame to prevent buildup.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Environmental Care:** While designed for durability, avoid prolonged exposure to extreme temperatures or moisture.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Screws are loose; uneven surface.	Ensure all screws are tightened. Adjust the leveling feet on the bottom of the stand. Move to a flat surface.
Parts missing during assembly.	Packaging error.	Double-check all packaging materials. Contact customer support with your model number and a description of the missing part.
TV does not fit on the stand.	TV size exceeds stand capacity.	This stand is designed for TVs up to 47 inches. Verify your TV's dimensions against the stand's top panel dimensions.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Pinmoco
Model Number	G700412K-RST
Material	Wood (top panel), Metal (frame, shelves)
Color	Rustic Brown (wood), Black (metal)
Product Dimensions	47 x 12 x 22 inches (Length x Width x Height)
Item Weight	18.5 pounds
TV Size Compatibility	Up to 47 inches
Special Features	Open storage shelves, Soundbar shelf, 4 hooks, Adjustable feet
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

Specific warranty information for the Pinmoco TV Stand G700412K-RST is not provided in this manual. For warranty details, product support, or to inquire about replacement parts, please refer to the product packaging or contact Pinmoco customer service directly through their official website or the retailer where the product was purchased.

