

Motionflow MF-ST-002

Motionflow 16-in-1 Steam Cleaner Instruction Manual

Model: MF-ST-002 | Brand: Motionflow

1. INTRODUCTION

The Motionflow 16-in-1 Steam Cleaner (Model MF-ST-002) is designed for effective and chemical-free cleaning across various surfaces in your home. This appliance utilizes high-pressure steam at temperatures up to 120°C to remove dirt, grime, and bacteria. With a rapid heat-up time of approximately 30 seconds and a 250 ml water tank providing up to 20 minutes of continuous steam, it offers efficient cleaning for a wide range of applications.

Please read this manual thoroughly before operating the appliance to ensure safe and correct usage.

2. SAFETY INSTRUCTIONS

Observe the following safety precautions to prevent injury or damage to the appliance:

- Always read the entire instruction manual before first use.
- Keep the appliance out of reach of children and pets.
- Do not open the water tank cap while the appliance is hot or under pressure. Allow it to cool down completely before refilling.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Unplug the appliance from the power outlet when not in use, before cleaning, or during maintenance.
- Never direct steam at people, animals, plants, or electrical appliances.
- Do not immerse the appliance in water or any other liquid.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Use only manufacturer-approved accessories and attachments.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Motionflow Steam Cleaner Main Unit
- Extendable Telescopic Handle

- Measuring Cup
- Filling Funnel
- Accessory Storage Bag
- Tile Brush
- Curved Special Piece (for corners and edges)
- Metal Brushes (2x)
- Scouring Pad Attachments (2x)
- Dust Brush
- Scouring Triangle
- Shower Squeegee
- Spatula Attachment
- Carpet Attachment
- Textile/Steam Pad Holder
- Steam Cleaning Cloths (2x)



Image 1: The Motionflow 16-in-1 Steam Cleaner shown with its main unit and a comprehensive set of 13 attachments and additional accessories, including various brushes, pads, and nozzles for diverse cleaning tasks.

4. SETUP

1. **Unpack the Appliance:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Assemble the Handle:** If using as a floor cleaner, connect the extendable telescopic handle to the main unit until it clicks securely into place.
3. **Fill the Water Tank:**
 - Ensure the appliance is unplugged and cool.
 - Unscrew the water tank cap.
 - Using the provided measuring cup and funnel, carefully fill the water tank with up to 250 ml of distilled or demineralized water. Do not overfill.
 - Securely replace the water tank cap.
4. **Attach Desired Accessory:** Select the appropriate cleaning attachment for your task and securely connect it to the steam nozzle or telescopic handle.

5. OPERATING INSTRUCTIONS

1. **Power On:** Plug the power cord into a suitable electrical outlet. The indicator light (if present) will illuminate, signaling that the appliance is heating up.
2. **Heat-Up Time:** Wait approximately 30 seconds for the appliance to reach its operating temperature. The indicator light may change or turn off when ready.
3. **Begin Cleaning:** Press and hold the steam trigger to release steam. Release the trigger to stop the steam flow.
4. **General Cleaning:** Hold the nozzle close to the surface to be cleaned and move it slowly and steadily. For stubborn dirt, hold the steam over the area for a few seconds.
5. **Specific Applications:**
 - **Floors:** Attach the telescopic handle and floor attachment with a cleaning cloth. Move the steam cleaner back and forth over the floor surface.
 - **Upholstery/Textiles:** Use the textile attachment. Always test on an inconspicuous area first to ensure colorfastness and material compatibility. Hold the attachment slightly above the fabric to avoid excessive moisture.
 - **Tiles & Grout:** Use the tile brush or metal brushes for effective cleaning of grout lines and tiled surfaces.
 - **Windows/Mirrors:** Attach the shower squeegee. Steam the surface, then wipe clean with the squeegee.
6. **Refilling Water:** If steam production stops, the water tank is empty. Unplug the appliance and allow it to cool for several minutes before refilling as per step 3 in the Setup section.
7. **Finishing:** After cleaning, release the steam trigger, unplug the appliance, and allow it to cool down completely before storage.

 


Image 2: A user demonstrating the Motionflow Steam Cleaner in floor cleaning mode, utilizing the telescopic handle and

floor head for thorough cleaning.



Image 3: A detailed view of the Motionflow Steam Cleaner's floor head, designed for efficient and wide-area steam cleaning.

6. MAINTENANCE AND STORAGE

- Empty Water Tank:** After each use, ensure the appliance is unplugged and cool. Carefully unscrew the water tank cap and empty any remaining water.
- Clean Attachments:** Wash removable attachments with warm, soapy water. Rinse thoroughly and allow them to air dry completely before storing.
- Wipe Down Unit:** Wipe the main unit with a damp cloth. Do not use abrasive cleaners or solvents.
- Descaling:** Over time, mineral deposits may accumulate. If steam output decreases, descaling may be necessary. Consult the manufacturer's website for specific descaling instructions or use a commercially available steam cleaner descaling solution according to its directions.
- Storage:** Store the appliance and all accessories in the provided accessory storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; appliance not heated; mineral buildup; nozzle blocked.	Refill water tank; wait for heat-up; descale appliance; clear nozzle blockage.
Water leakage from nozzle	Attachment not securely fitted; water tank cap loose.	Ensure attachment is clicked into place; tighten water tank cap.
Appliance not turning on	Not plugged in; power outlet fault.	Check power connection; test outlet with another device.

8. SPECIFICATIONS

- Model:** MF-ST-002
- Brand:** Motionflow
- Power Consumption:** 1200W
- Steam Temperature:** Up to 120°C
- Operating Time:** Approximately 20 minutes
- Heat-up Time:** Approximately 30 seconds
- Water Tank Capacity:** 250 ml




- **Hose Length:** Approximately 2 meters
- **Power Source:** Corded Electric

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the official Motionflow website or contact your retailer. Keep your proof of purchase for warranty claims.

© 2025 Motionflow. All rights reserved.

Related Documents - MF-ST-002

	<p>Motionflow 16-in-1 Handheld Steam Mop User Manual and Guide</p> <p>Comprehensive user manual for the Motionflow 16-in-1 Handheld Steam Mop. Learn about assembly, operation, safety precautions, and maintenance for effective deep cleaning of floors, windows, and more.</p>
	<p>Motionflow NV282C Steam Cleaner User Manual</p> <p>User manual for the Motionflow NV282C Steam Cleaner, providing comprehensive instructions on product overview, assembly, operation, safety precautions, care, maintenance, and troubleshooting.</p>
	<p>Motionflow MF Carpet Cleaner UM A1 C: User Manual</p> <p>Comprehensive user manual for the Motionflow MF Carpet Cleaner UM A1 C, detailing features, operation, safety precautions, maintenance, and troubleshooting for effective carpet cleaning.</p>

