

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Grey Steel Shaft 250W Electric Hand Blender Instruction Manual

Prestige 41057

Prestige Grey Steel Shaft 250W Electric Hand Blender

Model: 41057

INTRODUCTION

Thank you for choosing the Prestige Grey Steel Shaft 250W Electric Hand Blender. This appliance is designed for efficient and versatile blending tasks in your kitchen. Featuring a powerful 250-watt motor and a durable stainless steel blending rod, it is suitable for both hot and cold ingredients. Please read this manual carefully before first use to ensure safe operation and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Clean only with a damp cloth.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Exercise extreme caution when blending hot liquids to prevent splashing and burns.
- The blades are sharp. Handle with care during assembly, disassembly, and cleaning.

PRODUCT COMPONENTS

Your Prestige Hand Blender comes with the following components:

- **Motor Unit:** The main body housing the 250W motor and control button.
- **Stainless Steel Blending Rod:** The non-detachable shaft that connects to the motor unit and holds the blades.
- **Whisking Blade:** Used for whipping cream, eggs, and light batters.
- **Beater Blade:** Ideal for mixing cake batter, cookie dough, and frosting.
- **Mincing Blade:** Designed for mincing herbs and boiled vegetables.
- **Blade Shield:** A protective cover for the blades.



Image: The Prestige Hand Blender motor unit with its stainless steel blending rod, alongside the three interchangeable blades (whisking, beater, mincing) and a blade shield. A blended beverage in a glass is also shown.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the blending rod and all blades in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.
3. **Attach Blade:** Select the desired blade (Whisking, Beater, or Mincing). Align the blade with the shaft at the end of the blending rod and push it firmly until it clicks into place. Ensure the blade shield is properly positioned over the blade for safety and stability during operation.
4. **Connect Power:** Plug the hand blender into a suitable electrical outlet.

Note: The stainless steel blending rod is non-detachable from the motor unit. Only the blades are interchangeable attachments.

OPERATING INSTRUCTIONS

The Prestige Hand Blender is designed for ease of use with a single control button.

1. **Prepare Ingredients:** Place ingredients into a suitable container for blending. Ensure the container is deep enough to prevent splashing.
2. **Immerse Blender:** Fully immerse the blade end of the hand blender into the ingredients before starting.
3. **Start Blending:** Press and hold the power button on the motor unit to start blending. Move the blender up and down gently to ensure even blending.
4. **Stop Blending:** Release the power button to stop the appliance.
5. **Hot and Cold Blending:** The stainless steel rod allows for safe blending of both hot soups and cold beverages. Exercise caution when blending hot liquids.
6. **Blade Specific Uses:**
 - **Whisking Blade:** Use for whipping cream, beating eggs, and preparing light batters.
 - **Beater Blade:** Ideal for mixing cake batter, cookie dough, and frosting.
 - **Mincing Blade:** Suitable for mincing herbs and boiled vegetables.

Important: Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow the appliance to cool down for at least 5 minutes after each minute of continuous use.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your hand blender.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Remove Blade:** Carefully detach the blade from the blending rod.
3. **Clean Blending Rod and Blades:** Wash the stainless steel blending rod and all blades immediately after use in warm, soapy water. Rinse thoroughly under running water. Use a brush if necessary to remove food particles.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Dry:** Ensure all parts are completely dry before storing.
6. **Storage:** Store the hand blender and its attachments in a dry place. The wall mounting feature can be used for convenient storage.

Note: This appliance is not dishwasher safe. Hand washing is recommended for all detachable parts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; power outlet not working; power button not pressed.	Ensure the blender is securely plugged into a functional power outlet. Press and hold the power button firmly.
Blender stops during operation or overheats quickly.	Continuous operation for too long; motor overloaded with tough ingredients.	Do not operate for more than 1 minute continuously. Allow the appliance to cool down for at least 5 minutes. Reduce the quantity or density of ingredients.
Poor blending results.	Incorrect blade used; insufficient liquid; ingredients too large.	Ensure the correct blade is attached for the task. Add more liquid if necessary. Cut ingredients into smaller pieces before blending.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- Brand:** Prestige
- Model Number:** 41057
- Colour:** Grey
- Wattage:** 250 Watts
- Power Source:** Corded Electric
- Material:** Stainless Steel (Rod and Blades)
- Product Dimensions (D x W x H):** 42D x 24W x 9H Centimeters
- Item Weight:** 1.12 Kilograms
- Special Feature:** Detachable Attachments (Blades), Blade Shield, Wall Mounting
- Control Type:** Basic
- Dishwasher Safe:** No

WARRANTY AND CUSTOMER SUPPORT

Your Prestige Hand Blender comes with a standard warranty. For warranty claims, service, or technical assistance, please contact Prestige customer support.

Manufacturer: TTK PRESTIGE LIMITED

Registered Office: PLOT NO. 38. SIPCOT INDUSTRIAL COMPLEX, HOSUR-635126, INDIA.

National Service Manager: TTK PRESTIGE LIMITED., NO. 110-5, ARUNA ARCADE, 1ST FLOOR, LAL BAGH ROAD, SUDHAMA NAGAR, BANGALORE, 560027, KARNATAKA, INDIA.

Phone: 080-46824000

Email: CUSTOMERCARE@TTKPRESTIGE.COM

Customer Care (Importer): 080-6000 4411

