

[manuals.plus](#) /› [Beautiful by Drew Barrymore](#) /› [Beautiful by Drew Barrymore 6 Qt Digital Air Fryer Instruction Manual - Model BEAU6QAIR](#)

Beautiful by Drew Barrymore BEAU6QAIR

Beautiful by Drew Barrymore 6 Qt Digital Air Fryer Instruction Manual

Model: BEAU6QAIR

INTRODUCTION

Thank you for choosing the Beautiful by Drew Barrymore 6 Qt Digital Air Fryer. This appliance is designed to provide a healthier way to prepare your favorite foods, utilizing TurboCrisp Technology for fast, even, and crispy results with minimal oil. Please read this manual thoroughly before operating your new air fryer to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A fire may occur if the air fryer is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not place any items on top of the appliance when in operation.
- Do not place any of the following materials in the air fryer: paper, cardboard, plastic, and the like.
- Do not store any materials other than manufacturer’s recommended accessories in this appliance when not in use.

PRODUCT OVERVIEW

The Beautiful 6 Qt Digital Air Fryer features a sleek design with a touch-activated display and TurboCrisp Technology for efficient cooking. It offers multiple functions including air frying, roasting, reheating, and dehydrating.

Key Features:

- **6 Qt Capacity:** Ideal for families or gatherings, serving 5–7 people.
- **TurboCrisp Technology:** Ensures fast, even, and crispy cooking results.
- **Touch-Activated Display:** Modern interface with no physical dials or buttons.
- **Versatile Cooking:** Air Fry, Roast, Reheat, and Dehydrate functions.
- **Healthier Cooking:** Up to 75% less fat compared to traditional deep frying.
- **Adjustable Temperature:** Control ranging from 90°F to 400°F.
- **Powerful Performance:** 1750W stainless steel heating system.
- **Safety Feature:** 60-minute auto shut-off.

Components:

- Main Unit
- Removable Air Fry Basket
- Crisper Tray (inside basket)
- Touch-Activated Digital Display
- Cool-Touch Handle



Image: Front view of the Beautiful 6 Qt Digital Air Fryer, showcasing its sleek design and touch-activated display.



Image: Close-up of the touch-activated display, highlighting time and temperature controls, and function buttons for Air Fry, Roast, Reheat, and Dehydrate.

SETUP

- Unpack:** Carefully remove the air fryer and all packaging materials. Ensure all components are present.
- Clean:** Before first use, wash the air fry basket and crisper tray with warm, soapy water. Rinse and dry thoroughly. Wipe the exterior of the main unit with a damp cloth.
- Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches of space around the back and sides for proper air circulation. Do not place it directly against a wall or under cabinets.
- Power:** Plug the power cord into a grounded electrical outlet. The display will illuminate briefly.

OPERATING INSTRUCTIONS

The Beautiful Digital Air Fryer features a user-friendly touch-activated display for easy operation.

Basic Operation:

- 1. Prepare Food:** Place food into the air fry basket, ensuring not to overfill. For best results, do not exceed the MAX fill line.
- 2. Insert Basket:** Slide the air fry basket firmly into the main unit until it clicks into place.
- 3. Power On:** Touch the power icon (U) on the display to turn on the air fryer.
- 4. Select Function:** Choose your desired cooking function by touching one of the preset buttons: Air Fry, Roast, Reheat, or Dehydrate.
- 5. Adjust Time and Temperature:** Use the + and - icons next to 'Time' and 'Temp' to adjust the cooking duration and temperature as needed. The temperature range is 90°F to 400°F.
- 6. Start Cooking:** Touch the 'Start/Pause' button to begin the cooking cycle.
- 7. Pause/Resume:** You can pause cooking at any time by touching the 'Start/Pause' button. Touch it again to resume.
- 8. Shake Reminder:** For some recipes, the air fryer may beep to remind you to shake or flip the food for even cooking. Carefully remove the basket, shake/flip, and reinser.
- 9. Completion:** The air fryer will beep when the cooking cycle is complete and automatically shut off. Carefully remove the basket and transfer food to a serving dish.



Image: A hand demonstrating how to pull out the air fry basket, which contains cooked French fries, for checking or shaking food.



Image: The air fryer in use on a kitchen counter, with a plate of crispy chicken and fries, illustrating its high-performance circular heat technology for even cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- 2. Basket and Tray:** The air fry basket and crisper tray are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. For stubborn food residue, soak in warm water for 10-15 minutes before cleaning.
- 3. Interior:** Wipe the interior of the air fryer with a damp cloth or non-abrasive sponge. Do not use harsh chemicals or abrasive cleaners.
- 4. Exterior:** Clean the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- 5. Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles.
- 6. Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the air fry basket in completely until it clicks.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture; insufficient oil (if applicable); temperature too low.	Pat food dry before cooking. Lightly spray with oil. Increase temperature slightly.
White smoke coming from the air fryer.	Grease residue from previous use; fatty food cooking.	Clean the basket and crisper tray thoroughly. Remove excess fat from food before cooking.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Specification	Detail
Model Name	BEAU6QAIR
Capacity	6 Quarts
Output Wattage	1750 Watts
Voltage	120 Volts
Temperature Range	90°F - 400°F
Control Method	Touch-Activated Display
Material	Stainless Steel
Product Dimensions (LxWxH)	16"D x 12"W x 13"H
Item Weight	19 Pounds
Dishwasher Safe Parts	Yes (Basket, Crisper Tray)
Special Features	Automatic Shut-Off, TurboCrisp Technology



Image: The air fryer with its key dimensions (depth, width, height) indicated for reference.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Beautiful by Drew Barrymore website. Keep your proof of purchase for any warranty claims.

If you require assistance with your Beautiful 6 Qt Digital Air Fryer, please contact the manufacturer's customer service department. Contact details are typically found in the product packaging or on the official brand website.