

[Manuals.plus](#) /

> [Oulice](#) /

> Oulice Replacement Ear and Nose Hair Trimmer Head for Braun Trimmers (Types 5513-5544)

## Oulice Replacement Trimmer Head (Compatible with Braun Trimmer Types 5513-5544 and MGK Series)

# Oulice Replacement Ear and Nose Hair Trimmer Head

### INSTRUCTION MANUAL

#### Introduction

This manual provides instructions for the installation, operation, and maintenance of your Oulice Replacement Ear and Nose Hair Trimmer Head. This replacement head is designed for use with specific Braun electric shaver trimmer types and models, ensuring effective and comfortable grooming.

**Compatibility:** This replacement head is compatible with Braun trimmer types **5513, 5514, 5515, 5516, 5517, 5518, 5541, 5542, 5544**. It is also suitable for Braun MGK models: **MGK 3080, MGK 3980, MGK 5045, MGK 5060, MGK 5245, MGK 5260, MGK 5080, MGK 5280, MGK 7020, MGK 7021, MGK 7220, MGK 7221, MGK 7920, MGK 7921**.





*Image: The Oulice Replacement Ear and Nose Hair Trimmer Head. This image shows the compact design of the replacement head, featuring a conical cutting element for precise hair removal.*

## Setup and Installation

---

Installing the Oulice replacement head is a straightforward process. Ensure your Braun trimmer is turned off and disconnected from any power source before proceeding.

1. **Remove Existing Head:** Gently twist or pull off the current trimmer head from your Braun device according to your device's original instructions.
2. **Attach New Head:** Align the Oulice replacement ear and nose hair trimmer head with the body of your Braun device. Push or twist it firmly until it clicks securely into place.
3. **Verify Attachment:** Lightly tug on the newly installed head to ensure it is securely fastened and will not detach during use.

The replacement head is designed for a precise fit with the specified Braun models.

## Operating Instructions

Once installed, your Oulice replacement head is ready for use. This head is suitable for both wet and dry trimming.

- **Power On:** Turn on your Braun electric shaver device.
- **Trimming Nose Hair:** Carefully insert the trimmer head into your nostril, ensuring not to insert it too deeply. Move the trimmer in a circular motion to trim unwanted hair.
- **Trimming Ear Hair:** Gently guide the trimmer head along the outer and inner edges of your ear to remove visible hair. Do not insert the trimmer deeply into the ear canal.
- **Wet Use:** For a more comfortable trim, especially for sensitive skin, the head can be used with water or shaving foam. Ensure the main device is waterproof if using wet.
- **Dry Use:** The trimmer head can also be used effectively on dry hair for quick touch-ups.

Always use the trimmer gently to avoid irritation or injury. After each use, turn off the device.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and hygiene of your trimmer head.

1. **Rinse After Use:** After each use, turn off the device and detach the trimmer head. Rinse the head thoroughly under running water to remove hair clippings and debris.
2. **Drying:** Shake off excess water and allow the trimmer head to air dry completely before reattaching it to the device or storing it.
3. **Deep Cleaning (Optional):** Periodically, you may use a mild soap solution for a more thorough cleaning. Ensure all soap residue is rinsed off.
4. **Storage:** Store the trimmer head in a clean, dry place, away from direct sunlight and extreme temperatures.

Do not use abrasive cleaners or harsh chemicals on the trimmer head, as this may damage the cutting elements.

## Troubleshooting

Problem	Possible Cause	Solution
Trimmer head does not fit.	Incompatible Braun device model.	Verify your Braun trimmer type or MGK model against the compatibility list in the Introduction section.
Trimmer head does not cut effectively.	Hair clippings obstructing blades; head not securely attached.	Clean the trimmer head thoroughly. Ensure the head is firmly attached to the device.
Irritation during use.	Improper technique; dry trimming on sensitive skin.	Use gentle, circular motions. Consider wet trimming with water or foam for sensitive areas. Ensure the head is clean.

## Specifications

- **Product Type:** Replacement Ear and Nose Hair Trimmer Head
- **Brand:** Oulice

- **Compatibility:**

- Braun Trimmer Types: 5513, 5514, 5515, 5516, 5517, 5518, 5541, 5542, 5544
- Braun MGK Models: MGK 3080, MGK 3980, MGK 5045, MGK 5060, MGK 5245, MGK 5260, MGK 5080, MGK 5280, MGK 7020, MGK 7021, MGK 7220, MGK 7221, MGK 7920, MGK 7921

- **Usage:** Wet and Dry

- **Package Includes:** 1x Ear and Nose Hair Trimmer Head

## Warranty and Support

---

**Warranty Information:** Specific warranty details for this Oulice replacement part are not provided in the product information. Please refer to the seller or your purchase documentation for any applicable warranty terms.

**Customer Support:** For further assistance, questions, or concerns regarding your Oulice Replacement Ear and Nose Hair Trimmer Head, please contact the seller directly through your purchase platform. They will be able to provide the most accurate and timely support.