

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ElecKeys](#) /

› [ElecKeys K10 Cordless Stick Vacuum Cleaner User Manual](#)

ElecKeys K10

ElecKeys K10 Cordless Stick Vacuum Cleaner User Manual

Model: K10

1. INTRODUCTION

Welcome to the ElecKeys K10 Cordless Stick Vacuum Cleaner user manual. ElecKeys is dedicated to making home cleaning efficient and effortless through smart technology. This vacuum cleaner is designed for powerful, quiet, and intelligent cleaning, reflecting simplicity, intelligence, and reliability. This manual provides essential information for the safe and effective use of your new vacuum cleaner.




Image: The ElecKeys K10 Cordless Stick Vacuum Cleaner in a modern living room setting, highlighting its sleek design and ease of use.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Main Vacuum Unit
- Telescopic Extension Tube

- Floor Brush Head with LED Lights
- Flexible Hose Attachment
- Crevice Tool
- 2-in-1 Brush Tool
- Lithium-ion Battery Pack
- Wall Mount for storage and charging
- Power Adapter
- Extra HEPA Filter
- Cleaning Brush/Tool

Your browser does not support the video tag.

Video: Unboxing of the ElecKeys K20 Cordless Vacuum Cleaner, demonstrating the various components included in the package and initial assembly steps. Note: K10 components are similar.

3. SETUP

3.1 Assembly

1. Attach the telescopic extension tube to the main vacuum unit until it clicks securely.
2. Connect the floor brush head to the other end of the telescopic tube.
3. Alternatively, attach desired accessories (flexible hose, crevice tool, 2-in-1 brush) directly to the main unit or the extension tube.

3.2 Battery Installation & Charging

1. Align the grooves on the battery pack with the rails on the main unit's handle. Slide the battery into place until you hear a "Click".
2. To charge, plug the power adapter into the charging port on the battery or the wall mount. A full charge takes approximately 4 hours.



Image: The main unit of the ElecKeys K10 with the battery pack securely installed, ready for use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off & Mode Selection

1. Press the power button on the handle to turn the vacuum on. The LED display will show battery life and current mode.
2. Toggle between cleaning modes (Bare Floor, Carpet, Turbo) by pressing the mode switch button on the LED display.
3. The vacuum features an auto mode that intelligently adjusts suction power based on the amount of debris detected.

4.2 Using Attachments

- **Floor Brush Head:** Ideal for large floor areas. Features green LED lights to illuminate dust and debris.
- **Flexible Hose:** Use with other attachments to reach tight spaces, high shelves, or inside vehicles.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.

- **2-in-1 Brush Tool:** Features a built-in brush for delicate surfaces like keyboards or upholstery.



Image: A woman efficiently vacuuming a floor area with the ElecKeys K10, demonstrating its maneuverability.



Image: The ElecKeys K10 being used with a hose attachment to clean high shelves, showcasing its versatility.



Image: The ElecKeys K10 in handheld mode, cleaning a table surface with precision.

Your browser does not support the video tag.

Video: Demonstration of the ElecKeys K20 Cordless Vacuum Cleaner's features, including different cleaning modes and attachments for various surfaces. Note: K10 features are similar.

5. MAINTENANCE

5.1 Emptying the Dustbin

1. Press the dustbin release button to detach the dustbin from the main unit.
2. Carefully empty the contents into a trash container.

5.2 Cleaning Filters

1. Remove the filters from the dustbin.
2. Tap the filters to remove loose dust or rinse them with water if heavily soiled. Ensure filters are completely dry before re-installing.

5.3 Cleaning the Roller Brush

1. Use the provided cleaning tool to remove tangled hair or debris from the roller brush.
2. The V-shaped roller brush is designed to resist tangles, making cleaning easier.

6. TROUBLESHOOTING

If your vacuum cleaner is not performing as expected, please check the following:

- **No Power:** Ensure the battery is fully charged and correctly installed.

- **Reduced Suction:** Check if the dustbin is full, filters are clogged, or there's a blockage in the tube/brush head.
- **Error Codes:** The LED display provides error codes to indicate specific issues (e.g., overheating, blockage). Refer to the full user manual for detailed explanations.

7. SPECIFICATIONS

- **Brand:** ElecKeys
- **Model:** K10
- **Motor Power:** 580W Brushless Motor
- **Max Suction Power:** Up to 48Kpa
- **Battery:** 29.6V Lithium-ion
- **Runtime:** Up to 60-75 minutes (depending on mode)
- **Filtration:** 6-stage high-efficiency filtration (captures up to 99.9% of debris)
- **Features:** LED display, Auto Mode, Self-standing design, Green LED lights on floor brush.

8. WARRANTY AND SUPPORT

ElecKeys is committed to providing excellent customer service and product reliability.

- **Customer Support:** 24 Hours Dedicated Customer Support
- **Returns & Exchanges:** 30 Days Flexible Returns & Exchanges
- **Product Protection:** 2 Years Official Product Protection

For further assistance, please refer to the contact information provided with your purchase or visit the official ElecKeys website.