

## Lacoste 2011434

# Lacoste LC33 Men's Quartz Analog-Digital Multifunction Watch

Model: 2011434

## INTRODUCTION

This manual provides instructions for the proper use and care of your Lacoste LC33 Analog-Digital Multifunction Watch. This timepiece features a hybrid movement combining traditional analog hands with digital displays for various functions, including alarm, chronograph, and calendar. It is designed for daily wear and is water-resistant up to 10 ATM.

## WATCH COMPONENTS

Familiarize yourself with the main components of your watch:

- **Crown:** Used for setting analog time.
- **Buttons:**
  - **LIGHT Button (Top Left):** Activates the backlight for the digital display.
  - **MODE Button (Bottom Left):** Cycles through digital display modes (Time, Alarm, Chronograph, Date).
  - **START Button (Top Right):** Starts/stops the chronograph, adjusts settings in various modes.
  - **RESET Button (Bottom Right):** Resets the chronograph, confirms settings in various modes.
- **Analog Display:** Hour, minute, and second hands.
- **Digital Display:** Shows time, date, alarm, and chronograph functions.
- **Day Indicator Sub-dial:** Displays the current day of the week.





Front view of the Lacoste LC33 watch, showcasing the navy blue case and strap, analog hands, digital display, and four control buttons.

## SETUP INSTRUCTIONS

### Setting Analog Time

1. Pull the crown out to the first position.
2. Turn the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

### Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display starts flashing (indicating setting mode).
2. Press the **START** button to cycle through the settings (hours, minutes, 12/24-hour format, year, month, day).
3. Use the **RESET** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.



Side view of the watch, highlighting the crown and the four control buttons used for setting and operating functions.

## OPERATING INSTRUCTIONS

### Using the Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds in low-light conditions.

## Using the Alarm Function

1. Press the **MODE** button until "AL" (Alarm) appears on the digital display.
2. Press the **START** button to enter alarm setting mode (hours will flash).
3. Use the **RESET** button to adjust the alarm hour.
4. Press **START** to move to minutes, then use **RESET** to adjust.
5. Press **MODE** to exit alarm setting.
6. To activate/deactivate the alarm, press the **START** and **RESET** buttons simultaneously while in "AL" mode. An alarm icon will appear/disappear.

## Using the Chronograph (Stopwatch)

1. Press the **MODE** button until "ST" (Stopwatch) appears on the digital display.
2. Press the **START** button to begin timing.
3. Press **START** again to pause timing.
4. Press **START** to resume timing from the paused point.
5. To reset the chronograph, press the **RESET** button while the chronograph is stopped.



The Lacoste LC33 watch displayed on a wrist, showing its fit and appearance during wear.

## MAINTENANCE

---

### Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth. For silicone straps, a mild soap solution and water can be used, followed by thorough rinsing and drying. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

### Water Resistance

This watch is water-resistant to 10 ATM (100 meters), making it suitable for swimming, snorkeling, and water sports. **It is not suitable for diving.** Ensure the crown is fully pushed in before any contact with water. Do not operate the buttons while the watch is submerged or wet, as this can compromise the water resistance.

## Battery Replacement

The watch is powered by a quartz battery. When the battery runs low, the digital display may dim or the watch may stop functioning. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving	Low battery; Crown pulled out.	Push the crown in. If the problem persists, replace the battery.
Digital display is blank or dim	Low battery; Extreme temperatures.	Replace the battery. Ensure the watch is within operating temperature range.
Incorrect digital time/date	Incorrect setting.	Refer to "Setting Digital Time and Date" section to re-adjust.
Water inside the watch	Crown not fully pushed in; Buttons operated underwater; Seal damage.	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

## SPECIFICATIONS

Model Number	2011434
Movement Type	Quartz Analog-Digital Hybrid
Case Material	TR90 (Case), Stainless Steel (Case Back)
Case Diameter	44.8 mm
Case Thickness	14.9 mm
Strap Material	Silicone
Band Width	26 mm
Dial Window Material	Mineral Glass
Water Resistance	10 ATM (100 Meters)
Clasp Type	Buckle Tang
Item Weight	61 Grams
Manufacturer	Movado Group Sàrl
Country of Origin	China



Rear view of the watch, displaying the stainless steel case back with engravings including water resistance and model details.

## WARRANTY INFORMATION

---

Your Lacoste LC33 watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Lacoste website for detailed information. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or service inquiries regarding your Lacoste LC33 watch, please contact Lacoste customer service or the authorized retailer from whom you purchased the product. Contact details can typically be found on the official Lacoste website or in your product packaging.