

[Manuals.plus](#) /

> [DREAME](#) /

> DREAME Cordless Stick Vacuum Cleaner Z30 Essential User Manual


DREAME Z30 Essential

DREAME Cordless Stick Vacuum Cleaner Z30 Essential User Manual

Model: Z30 Essential (VZV11B)

WELCOME TO YOUR DREAME Z30 ESSENTIAL

This manual provides detailed instructions for the safe and efficient use of your DREAME Z30 Essential Cordless Stick Vacuum Cleaner. Please read it thoroughly before first use and keep it for future reference.

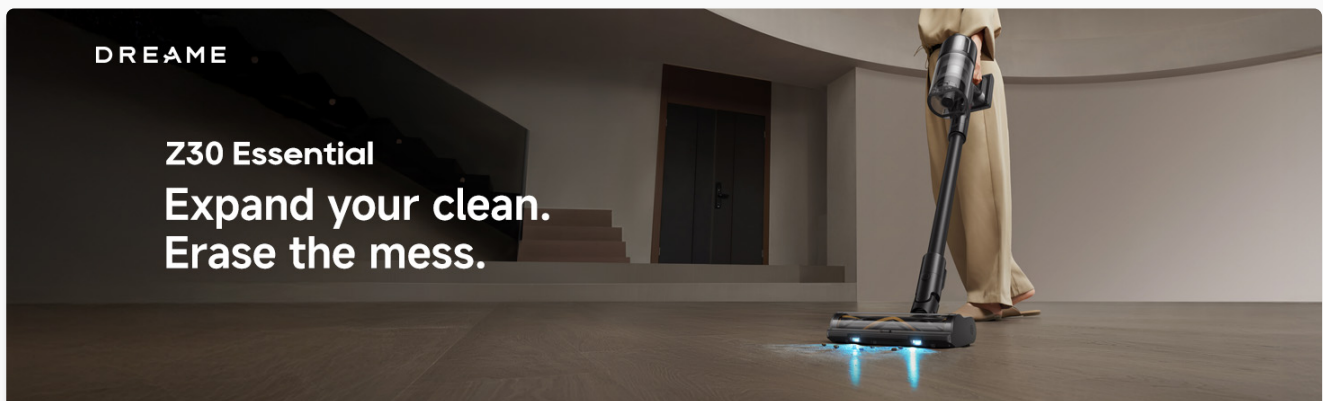

Multi-Surface Brush



140° CelesTect



0.2 Gallons
Dust Cup



Anti-Tangle
Design



210AW Powerful Suction



99.99% (0.3µm)
Filtration Efficiency



90min Maximum
Runtime



Versatile
Attachments

The DREAME Z30 Essential Cordless Stick Vacuum Cleaner, ready for use.

The DREAME Z30 Essential is designed for powerful and versatile cleaning across various surfaces, featuring robust suction, advanced filtration, and intelligent dust detection.

PACKAGE CONTENTS

Verify that all components are present in your package.



Combination Tool



Extension Rod



Main Body



Storing Mount



Wide Combination Tool



Illumination
Multi-Surface Brush



Motorized
Mini-Brush

What's in the Box

Illustration of all parts included in the DREAME Z30 Essential package.

- Main Body
- Extension Rod
- Illumination Multi-Surface Brush
- Motorized Mini-Brush
- Combination Tool
- Wide Combination Tool
- Storing Mount
- Power Adapter

SETUP

Assembling the Vacuum

Connect the Extension Rod to the Main Body until it clicks into place. Attach the desired cleaning head (e.g., Illumination Multi-Surface Brush) to the other end of the Extension Rod.

Installing the Storing Mount

The provided storing mount allows for convenient storage and charging. Securely mount it to a wall near a power outlet.

Streamlined Storage

Including an accessory mount that keeps cleaning attachments neatly stored and instantly accessible, Z30 Essential streamlines your workflow and ensures tools are always within reach.



The DREAME Z30 Essential stored neatly on its wall-mounted charging station.

Once mounted, place the vacuum cleaner onto the storing mount.

Charging the Battery

Connect the power adapter to the storing mount and plug it into a wall outlet. The vacuum will begin charging. Ensure the battery is fully charged before first use. A full charge provides up to 90 minutes of runtime in Eco mode.

OPERATING INSTRUCTIONS

Powering On/Off and Mode Selection

Press the power button on the main body to turn the vacuum on or off. Use the mode selection button to switch between different suction modes (e.g., Eco, Standard, Turbo).

CelesTect Lighting

The Illumination Multi-Surface Brush features CelesTect lighting, which illuminates dust and debris on floors, making hidden dirt visible for thorough cleaning.



140°
CelesTect™



Multi-Surface
Cleaning



Anti-Tangle
Design



Expose Hidden Dust with CelesTect™

CelesTect lighting on the brush head highlights dust particles on the floor.

This technology helps ensure no spot is missed, especially in dimly lit areas or under furniture.

Cleaning Different Surfaces

The multi-surface brush is suitable for both carpets and hard floors. The vacuum automatically adjusts suction power based on the detected debris level in Auto mode.



Consistent Whole House Cleaning

The DREAME Z30 Essential provides consistent whole-house cleaning on various surfaces.

For optimal battery life, utilize Eco mode for lighter cleaning tasks.

Power Through Up to 90 Minutes of Cleaning

In Eco Mode, it provides up to **90 minutes*** of continuous vacuuming and covers up to **-2152ft²*** on a single charge.

*90 minutes: Based on tests in Dreame Lab, in Eco mode with the Combination Tool.
*2152ft²: Based on tests in Dreame Lab, in Eco mode with the two main



The vacuum offers up to 90 minutes of cleaning in Eco mode, covering a large area.

Using Attachments

The DREAME Z30 Essential comes with various attachments for specialized cleaning tasks.



Versatile Home and Vehicle Cleaning

Versatile attachments for cleaning furniture, tight corners, and various surfaces.

- **Combination Tool:** Ideal for cleaning crevices, corners, and delicate surfaces like keyboards.
- **Wide Combination Tool:** Suitable for larger surfaces, upholstery, and car interiors.
- **Motorized Mini-Brush:** Excellent for removing pet hair and deep cleaning fabric surfaces like sofas and mattresses.

To attach, simply click the desired tool onto the main body or extension rod.

MAINTENANCE

Emptying the Dust Cup


The 0.8L dust cup should be emptied regularly to maintain optimal suction performance. Press the release button to open the dust cup and dispose of collected debris.

30%*

More Room for
Debris



Z30 Essential

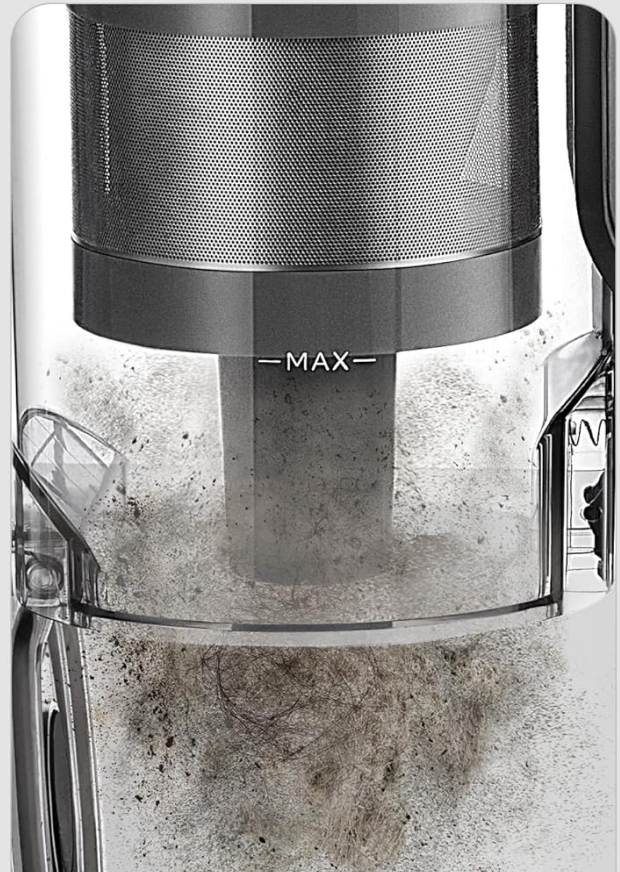

Other Brand

0.2 Gallons Dust Cup Holds More for Longer Sessions

The 0.8L dust cup offers increased capacity for longer cleaning sessions.

It is recommended to empty the dust cup over a trash bin to prevent dust from escaping.

Cleaning the Filters

The vacuum features a multi-layer filtration system, including a HEPA H14 filter, which traps 99.99% of particles down to 0.3 microns. Regular cleaning of the filters is crucial for maintaining filtration efficiency and suction power.



99.99% High-Efficiency Filtration Locks in Dust

The HEPA H14 filtration system ensures 99.99% particle capture.

The dust cup and filter components are washable. Remove them from the main body and rinse under running water. Ensure all parts are completely dry before reassembling.

Wash and Reuse for Effortless Maintenance

Removable & washable components ensure long-term efficiency.



Removable and washable components for effortless maintenance.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Remove the brush roll from the cleaning head and use scissors or the provided cleaning tool to cut and remove any tangled material.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is low or depleted	Charge the vacuum fully.
Low suction power	Dust cup is full	Empty the dust cup.
Low suction power	Filter is clogged	Clean or replace the filters.
Low suction power	Brush roll is tangled	Clean the brush roll.
Low suction power	Obstruction in the nozzle or extension rod	Check for and remove any blockages.
Brush roll not spinning	Obstruction in the brush roll	Remove any tangled hair or debris.
Short runtime	Using high suction mode continuously	Use Eco mode for longer cleaning sessions.

If the issue persists, please contact DREAME customer support.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	Z30 Essential
Model Number	VZV11B
Brand	DREAME
Maximum Suction	210 AW
Motor Speed	120,000 RPM
Dust Cup Capacity	0.8 Liters (0.2 Gallons)
Filtration Efficiency	99.99% (HEPA H14 filter)
Battery Life (Max)	Up to 90 minutes (in Eco mode)
Power Source	Battery Powered

Feature	Detail
Voltage	120 Volts (AC)
Item Weight	8 Kilograms
Dimensions (L x W x H)	10.08" x 10.08" x 49.45"
Surface Recommendation	All floors (Bare Floor, Carpet, Hard Floor, Hardwood, Rug, Tile Floor)
Special Features	Cordless, CelesTect Lighting, Multi-Surface Brush, Anti-Tangle Design

WARRANTY INFORMATION AND CUSTOMER SUPPORT

Your DREAME Z30 Essential Cordless Stick Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical assistance, troubleshooting, or to inquire about replacement parts, please visit the official DREAME website or contact their customer support.

[Visit the DREAME Store on Amazon](#)