

Contixo KC4

Contixo KC4 Kids Instant Print Digital Camera User Manual

Model: KC4

INTRODUCTION

Thank you for choosing the Contixo KC4 Kids Instant Print Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly to ensure proper use and to maximize your child's enjoyment of this product.

WHAT'S IN THE BOX

- 1 x Contixo KC4 Kids Instant Print Camera
- 3 x Printing Paper Rolls
- 1 x Neck Lanyard
- 1 x USB Type-C Charging Cable
- 5 x Markers
- 1 x User Manual
- 1 x SD Card (32GB)



1 × Kids Instant Print Camera



1 × Manual



1 × Charging Cable



3 × Printing Paper



1 × Micro SD Card



1 × Lanyard



5 × Markers



PRINTING PAPER INSTALLATION STEPS



1
Open the paper compartment in the direction of the arrow



2
Insert the roll of thermal printer paper into the compartment



3
Close the paper compartment



4
Tear the photo paper downward when removing the photo

Image: Contents of the Contixo KC4 package, including the camera, paper rolls, lanyard, charging cable, markers, manual, and SD card.

PRODUCT OVERVIEW

The Contixo KC4 camera features a user-friendly design with a 2.4-inch IPS screen and intuitive buttons for easy navigation and operation. It includes a front-facing camera lens, a flash, and a thermal printer output slot.

MULTI-FUNCTIONAL KIDS INSTANT PRINT CAMERA



Camera



Instant Printing



Video Recording



MP3 & Games



HD 1080P



16X Zoom



Multiple Frames & Filters



Playback

Image: Front view of the Contixo KC4 camera highlighting its camera, instant printing, video recording, MP3 & Games, HD 1080P, 16X Zoom, Multiple Frames & Filters, and Playback capabilities.

SETUP

1. Charging the Battery

Connect the provided USB Type-C cable to the camera's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge takes approximately 2 hours and provides up to 5 hours of use.

2. Inserting the SD Card

Locate the SD card slot on the side of the camera. Gently insert the included 32GB SD card until it clicks into place. Ensure the camera is powered off before inserting or removing the SD card.

3. Loading Printing Paper

1. Open the paper compartment by sliding the cover in the direction of the arrow.
2. Insert a roll of thermal printer paper into the compartment, ensuring the paper feeds out from the top.
3. Close the paper compartment cover securely.
4. After printing, gently tear the photo downward to remove it.



1 × Kids Instant Print Camera



1 × Manual



1 × Charging Cable



3 × Printing Paper



1 × Micro SD Card



1 × Lanyard



5 × Markers



PRINTING PAPER INSTALLATION STEPS



1
Open the paper compartment in the direction of the arrow



2
Insert the roll of thermal printer paper paper compartment



3
Close the paper compartment



4
Tear the photo paper downward when removing the photo

Image: Visual instructions for loading the thermal printing paper into the camera's designated compartment.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually marked with a circle and a vertical line) to turn the camera on or off.

2. Navigation

Use the arrow buttons (left/right) to navigate through the menu options on the 2.4-inch IPS screen. The 'OK' or shutter button typically confirms selections.

3. Taking Photos and Instant Printing

From the main menu, select the camera icon. Frame your shot using the screen. Press the shutter button to take a photo. The camera will instantly print a black and white version of the photo. The color version is saved to the SD card.



Image: Comparison of a color image stored internally and its corresponding black and white instant print from the camera.

4. Video Recording

Select the video camera icon from the main menu. Press the shutter button to start recording and press it again to stop. Videos are saved to the SD card in 1080P resolution.

5. Using Filters and Frames

Before taking a photo, navigate to the filter/frame options within the camera mode. Select from various creative filters and frames to add fun effects to your pictures.

6. Playing Games

The camera includes 4 engaging puzzle games. Select the game controller icon from the main menu to access and play these games.

7. Music Player

The built-in music player supports MP3 files. Transfer MP3 files to the SD card to play music directly on the camera. Select the music note icon from the main menu to access the music player.

8. Printing Options

The camera offers two print modes: Grayscale and Dot Matrix. You can also adjust print density (Low, Medium, High) for desired output. These settings can be found in the camera's menu.

TWO PRINT MODES



Yes!

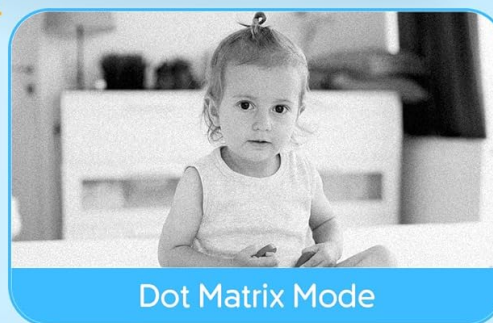


Image: The camera screen illustrating the 'Grayscale Mode' and 'Dot Matrix Mode' for printing, along with options for 'Print Density Low', 'Print Density Medium', and 'Print Density High'.

9. DIY Painting on Printed Photos

Use the included markers to color and personalize your black and white instant prints, adding a creative touch to each photo.

DIY FUNNY PAINTING ON PRINTED PHOTOS



Image: Two children engaged in coloring a black and white instant print from the Contixo KC4 camera using colorful markers.

10. Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the Contixo KC4 Instant Printing Camera for Kids.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Camera does not turn on.	Ensure the battery is charged. Connect to a power source and try again.
Photos are not printing.	Check if printing paper is loaded correctly and if there is enough paper. Ensure the paper compartment is closed.
Poor print quality.	Adjust print density settings in the camera menu. Ensure the thermal paper is not expired or damaged.
SD card error.	Ensure the SD card is inserted correctly. Try reformatting the SD card (this will erase all data). If the issue persists, try a different SD card.
Camera freezes.	Press and hold the power button for 10 seconds to force a restart.

SPECIFICATIONS

Feature	Detail
Model Name	KC4
Screen Size	2.4 Inches IPS
Photo Sensor Resolution	48 MP
Video Resolution	1080p
Optical Zoom	16 x (Digital Zoom)
Memory Storage Capacity	32 GB (SD Card included)
Battery Type	Lithium Ion
Battery Capacity	1500 Milliamp Hours
Battery Average Life	5 Hours
Connectivity Technology	USB
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic
Item Weight	7.34 Ounces
Age Range Description	Kid (3 years and up)

WARRANTY AND SUPPORT

Contixo products are designed for quality and durability. For specific warranty information, please refer to the warranty card included in your product packaging or visit the official Contixo website. If you encounter any issues or require technical assistance, please contact Contixo customer support through their official channels.

