

[Manuals.plus](#) /

› [TABU](#) /

› TABU Compact Washer and Dryer Combo Set User Manual (Model 410014510/410041110)

## TABU 410014510/410041110

# TABU Compact Washer and Dryer Combo Set User Manual

Model: 410014510/410041110

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your TABU Compact Washer and Dryer Combo Set. Please read this manual thoroughly before using the appliance and retain it for future reference.

The TABU Compact Washer features a large stainless steel inner tub with a 19 lbs capacity, offering 10 washing programs and 8 water levels. It includes an automatic balance adjustment mechanism to reduce vibration. The TABU Compact Dryer has a 2.6 Cu Ft capacity and offers 4 drying modes for various fabric types.



*Image 1.1: The TABU Compact Washer and Dryer Combo Set, showcasing both units side-by-side.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing/drying compartment.
- Do not reach into the appliance if the tub or drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.

- Always disconnect the appliance from the power supply before attempting any service or cleaning.

### 3. PRODUCT COMPONENTS

---

Your TABU Compact Washer and Dryer Combo Set includes the following main components:

- **TABU Compact Washer:** A top-load, full-automatic washing machine with a stainless steel inner tub.
- **TABU Compact Dryer:** A front-load dryer with a stainless steel inner tub.
- **Drain Hose:** For the washer's water drainage.



***Drying Tub***



***Outlet Filter***



***Portable Design***



***Front Load Door***



***Friendly-use Control Panel***



***Exhaust Connector***

*Image 3.1: Detailed view of the TABU Compact Dryer's features, including the drying tub, outlet filter, portable design, front load door, control panel, and exhaust connector.*

## 4. INSTALLATION AND SETUP

### 4.1 Unpacking


Carefully remove all packaging materials. Inspect the units for any shipping damage. Report any damage to your retailer immediately.

#### 4.2 Placement

Both the washer and dryer are designed for freestanding installation. Ensure they are placed on a firm, level surface to minimize vibration and noise during operation. Maintain adequate clearance around the units for proper ventilation and access.

- **Washer Dimensions:** 20.07"D x 20.86"W x 35.43"H
- **Dryer Dimensions:** 20.1"W x 18.11"D x 23.7"H

# Product info

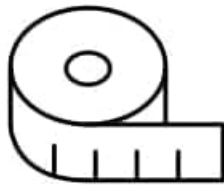

**product dimension**  
**20.86"\*20.07"\*35.43"**



**20LBS**





*Image 4.1: Diagram illustrating the dimensions of the TABU Compact Washer.*



Image 4.2: Diagram illustrating the dimensions of the TABU Compact Dryer.

### 4.3 Electrical Connection

Connect the power cords of both units to grounded electrical outlets. Refer to the specifications section for voltage and current requirements.

### 4.4 Water and Drainage (Washer)

Connect the water inlet hose to a cold water tap and the washer's inlet valve. Securely attach the provided drain hose to the washer's drain outlet and route it into a suitable drain or utility sink, ensuring it is properly secured to prevent dislodging during operation.

4.5 Exhaust Venting (Dryer)

Connect the dryer's exhaust vent to an appropriate external venting system using a rigid or flexible metal duct. Ensure the duct is as short and straight as possible to maximize drying efficiency and prevent lint buildup.

5. OPERATING INSTRUCTIONS

5.1 Washer Operation

The TABU Compact Washer features a user-friendly control panel with an LED display.



Image 5.1: Close-up of the TABU Compact Washer's control panel, showing buttons for water level, program, delay, time

set, and power.

1. **Load Laundry:** Open the top lid and place clothes loosely into the stainless steel tub. Do not overload.
2. **Add Detergent:** Add appropriate detergent to the dispenser.
3. **Select Water Level:** Use the 'Water Level' button to choose from 8 available water levels.
4. **Select Program:** Choose one of the 10 washing programs (e.g., Normal, Delicates, Quick Wash) using the 'Program' button.
5. **Set Delay (Optional):** If desired, use the 'Delay' function to postpone the start of the wash cycle.
6. **Start Cycle:** Press the 'Start/Pause' button to begin the washing cycle. The washer will automatically adjust balance during the cycle to prevent excessive vibration.



Full Automatic



Spin Wash  
& Spin Dry



One Tub



2 in 1

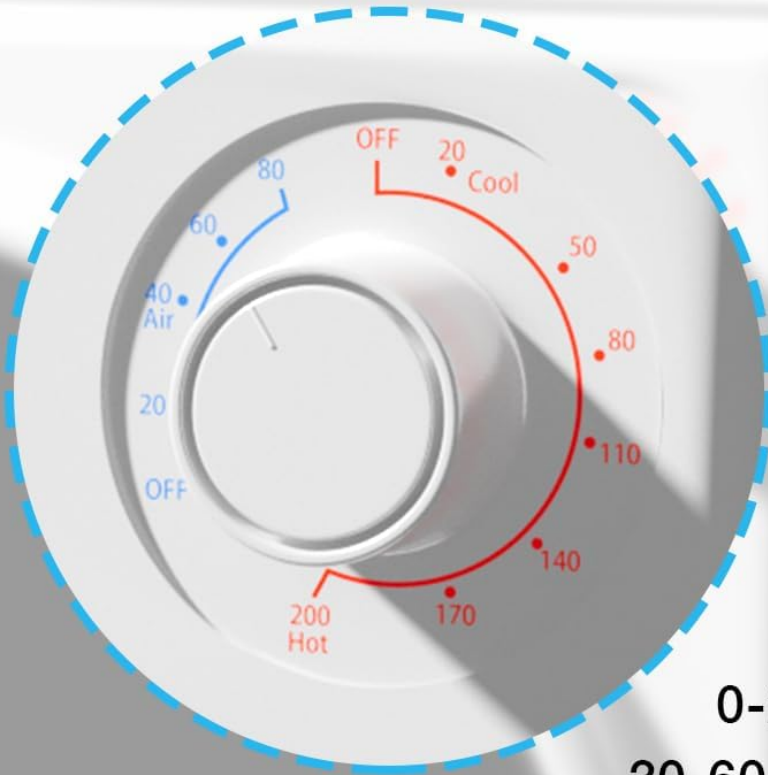


Image 5.2: Visual representation of the TABU Compact Washer's key features: Full Automatic operation, Spin Wash & Spin Dry capability, One Tub design, and 2-in-1 functionality.

## 5.2 Dryer Operation

The TABU Compact Dryer offers multiple drying modes and a simple control dial.

## EASY TO OPERATE



### TIMER

0-20 mins **COOL DOWN**

30-60 mins **ANTI-WRINKLE**

0-80 mins **AIR DRY**

60-150 mins **WARM**

150-200 mins **HOT**

### HEAT

silk, nylon, linen and **SOFT**  
other delicate materials

large size or quantity **STRONG**

Image 5.3: Close-up of the TABU Compact Dryer's control dial, showing various timer and heat settings.

1. **Load Laundry:** Open the front load door and place clothes into the dryer drum. Do not overload to ensure efficient drying.
2. **Select Drying Mode:** Turn the control dial to select one of the following modes:
  - **Auto:** Automatically adjusts drying time based on humidity levels.

- **Delicates Dry:** For small clothes or delicate fabrics.
- **Air Dry:** Uses cool air to freshen clothes without heat.
- **Timer Setting:** Manually set drying time (30/60/90 minutes).

3. **Select Heat Setting (if applicable):** For Timer Setting, choose a heat level:

- **Cool Down (0-20 mins):** For cooling clothes after a hot cycle.
- **Anti-Wrinkle (30-60 mins):** Helps reduce wrinkles.
- **Air Dry (0-80 mins):** No heat, for delicate items.
- **Warm (60-150 mins):** For general drying.
- **Hot (150-200 mins):** For heavy or large items.

4. **Start Cycle:** The dryer will start once the desired settings are selected.

## 6. CARE AND MAINTENANCE

### 6.1 Cleaning the Washer

- Regularly wipe the exterior of the washer with a soft, damp cloth.
- Clean the detergent dispenser periodically to prevent buildup.
- Run a tub clean cycle (if available) or a hot wash with a washing machine cleaner monthly to maintain freshness and prevent odor.

### 6.2 Cleaning the Dryer

- **Lint Filter:** Clean the lint filter before or after every load. Pull out the lint filter and remove any accumulated lint. A clogged lint filter can reduce drying efficiency and increase fire risk.
- **Exhaust Vent:** Periodically check and clean the exhaust vent to ensure proper airflow.
- Wipe the interior and exterior of the dryer with a soft, damp cloth as needed.

## 7. TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following common issues and solutions:

| Problem                     | Possible Cause                                                      | Solution                                                                  |
|-----------------------------|---------------------------------------------------------------------|---------------------------------------------------------------------------|
| Washer does not start       | Power cord unplugged; Lid not closed properly; Water supply off.    | Check power connection; Ensure lid is fully closed; Turn on water supply. |
| Washer vibrates excessively | Uneven load; Unit not level.                                        | Redistribute laundry evenly; Adjust leveling feet.                        |
| Washer does not drain       | Drain hose kinked or clogged; Drain pump filter clogged.            | Check and clear drain hose; Clean drain pump filter.                      |
| Dryer does not heat         | Circuit breaker tripped; Lint filter clogged; Exhaust vent blocked. | Check circuit breaker; Clean lint filter; Clear exhaust vent.             |

| Problem                       | Possible Cause                                                           | Solution                                                                         |
|-------------------------------|--------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| Clothes not drying completely | Overloaded dryer; Clogged lint filter or vent; Incorrect drying program. | Reduce load size; Clean lint filter and vent; Select appropriate drying program. |

## 8. PRODUCT SPECIFICATIONS

| Feature                       | Specification                                     |
|-------------------------------|---------------------------------------------------|
| Brand                         | TABU                                              |
| Model Number                  | 410014510/410041110                               |
| Washer Capacity               | 19 lbs                                            |
| Dryer Capacity                | 2.6 Cu Ft                                         |
| Washer Dimensions (D x W x H) | 20.07" x 20.86" x 35.43"                          |
| Dryer Dimensions (W x D x H)  | 20.1" x 18.11" x 23.7"                            |
| Item Weight                   | 63.8 pounds (combined/approximate)                |
| Drum Material                 | Stainless Steel                                   |
| Operation Mode                | Fully Automatic (Washer)                          |
| Installation Type             | Freestanding                                      |
| Special Features              | Compact, High Efficiency                          |
| Washer Cycle Options          | Normal, Delicates, Quick Wash (10 programs total) |
| Washer Controls Type          | Touch                                             |
| Washer Access Location        | Top Load                                          |
| Dryer Drying Modes            | Auto, Delicates Dry, Air Dry, Timer Setting       |
| UPC                           | 764143648528                                      |

## 9. WARRANTY INFORMATION

Specific warranty details for your TABU Compact Washer and Dryer Combo Set may vary. Please refer to the warranty card included with your product or contact TABU customer support for detailed information regarding warranty coverage, terms, and conditions.

## 10. CUSTOMER SUPPORT

For technical assistance, service, or questions regarding your TABU appliance, please contact TABU customer support.

You may find contact information on the manufacturer's website or through your retailer.  
Online resources and FAQs may also be available on the official TABU website:[Visit the TABU Store on Amazon](#)

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

**Where can I find the part number for a replacement drain hose for the TABU 410014510/410041110 Compact Washer?**

The user manual for the TABU Compact Washer (Model 410014510/410041110) identifies the drain hose as a standard component included with the unit, but it does not list a specific manufacturer part number within the...  
[Read full answer](#)