

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MOVE SPEED](#) /
- › [MOVE SPEED 80000mAh 130W Power Bank \(Model YSPBS80\) Instruction Manual](#)

MOVE SPEED YSPBS80

MOVE SPEED 80000mAh 130W Power Bank (Model YSPBS80) Instruction Manual

Your reliable portable power solution for all your adventures.

1. PRODUCT OVERVIEW

The MOVE SPEED 80000mAh 130W Power Bank (Model YSPBS80) is a high-capacity portable charging station designed to keep your devices powered during outdoor activities, travel, and emergencies. It features multiple output ports with Power Delivery (PD) and Quick Charge (QC) 3.0 technologies for fast and efficient charging.

80,000mAh Huge Capacity for Multiple Devices



iPhone 14
15 Charges



Macbook Air
8 Charges



Lamp
47 Hours



Drone
10 Charges



Camera
40 Charges



Image 1: The MOVE SPEED 80000mAh 130W Power Bank connected to various electronic devices, demonstrating its high capacity and versatility for charging multiple gadgets simultaneously, including a laptop, smartphone, camera, and drone.

2. PACKAGE CONTENTS

Upon opening your MOVE SPEED Power Bank package, you should find the following items:

- 1 x MOVE SPEED 80000mAh Power Bank (Model YSPBS80)
- 1 x 100W USB-A/C-to-C Fast Charging Cable
- 1 x User Manual

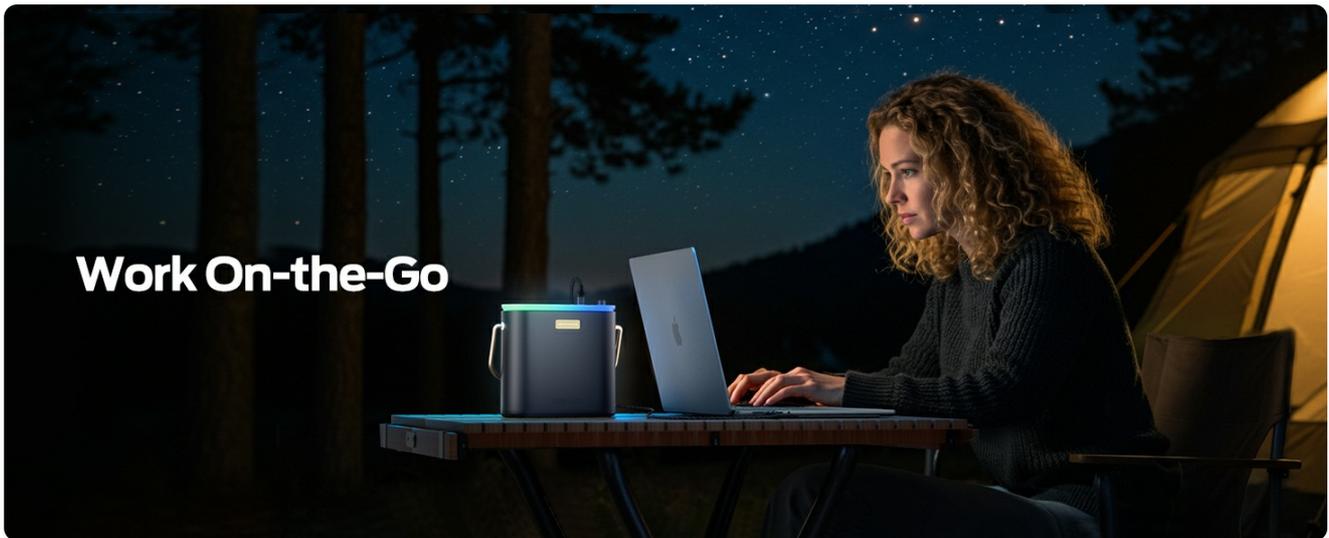


Image 2: An unboxing view showing the MOVE SPEED Power Bank, a USB-A/C-to-C fast charging cable, and the user manual neatly arranged in the product box.

3. SETUP AND INITIAL USE

3.1 Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your MOVE SPEED Power Bank. Use the provided 100W USB-A/C-to-C Fast Charging Cable and a compatible power adapter (not included) to charge the power bank. The LED display will show the charging progress.

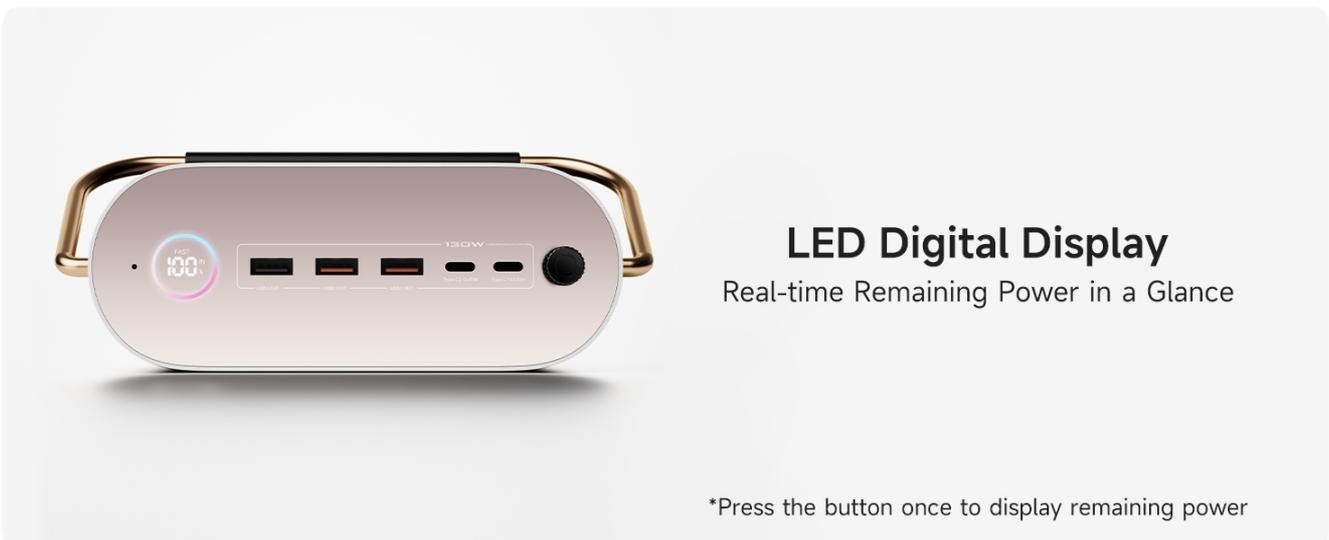


Image 3: The MOVE SPEED Power Bank connected to a wall charger via its USB-C input port, illustrating the recharging process. The LED display shows the charging status.

3.2 Understanding the LED Display

The clear LED screen on the power bank accurately shows the remaining battery percentage, allowing you to monitor the power status and recharge in time. Press the power button once to display the remaining power.



Image 4: A detailed view of the power bank's LED digital display, showing the real-time remaining power percentage and charging indicators.

4. OPERATING INSTRUCTIONS

4.1 Charging Your Devices

The power bank features multiple output ports to charge up to 5 devices simultaneously:

- Two 100W USB-C outputs (Type-C1 OUT/IN, Type-C2 OUT/IN)
- Two 22.5W USB-A outputs (USB1 OUT, USB2 OUT)
- One 10W USB-A output (USB3 OUT)

Connect your device to the appropriate port using its charging cable. The power bank will automatically detect and deliver the optimal charging speed, supporting Power Delivery (PD) and Quick Charge (QC) 3.0 technologies.



Image 5: A diagram illustrating the maximum output wattage for each individual port when used alone, highlighting the 100W capability of the USB-C ports.

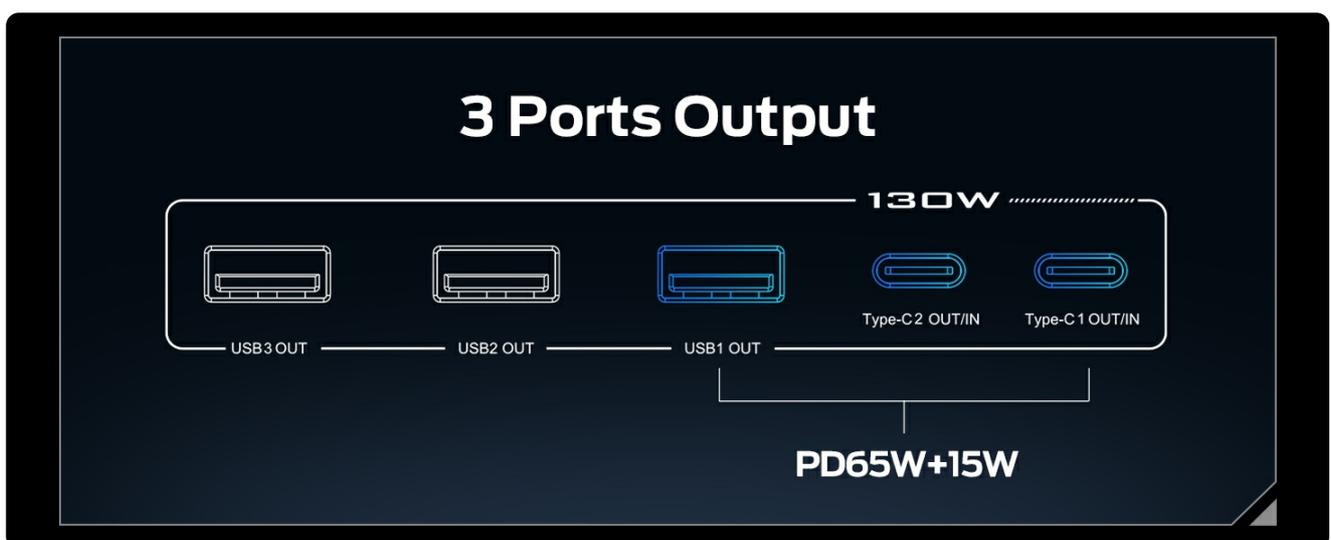


Image 6: A diagram demonstrating the combined output wattage when all five ports are used simultaneously, with power distribution across USB-C and USB-A ports.

4.2 Low Current Mode

For charging low-power devices like earphones or smartwatches, press the knob 4 times to activate Low Current

Mode. This ensures safe and efficient charging for sensitive electronics.

4.3 Using the Integrated Light

The power bank features two modes of integrated light:

- **Soft White Light:** Press the knob 3 times to turn on a soft white light.
- **RGB Light:** Press the knob 2 times to activate RGB light, which flashes with the rhythm of music or sounds.

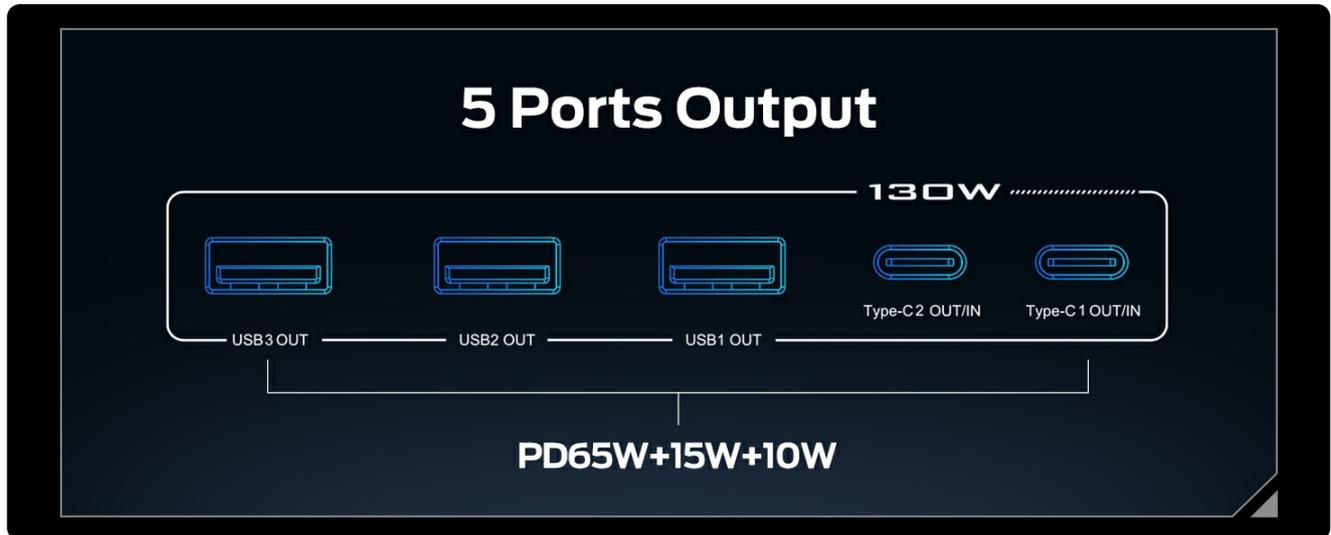


Image 7: An illustration detailing the button presses required to activate the Soft White Light (3 presses) and RGB Light (2 presses) features of the power bank.

4.4 Pass-Through Charging

The MOVE SPEED Power Bank supports pass-through charging, allowing you to charge the power bank itself while simultaneously charging other devices connected to its output ports.

5. MAINTENANCE AND CARE

- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Avoid using harsh chemicals or abrasive materials.
- **Battery Longevity:** To maintain battery health, fully charge the power bank at least once every three months if not in regular use.
- **Safety:** Do not disassemble, puncture, or expose the power bank to fire or water. Keep out of reach of children.

6. TROUBLESHOOTING

- **Device not charging:** Ensure the power bank is sufficiently charged. Check that the charging cable is securely connected to both the power bank and your device. Try a different cable or port.
- **Slow charging:** Verify that your device and cable support fast charging protocols (PD/QC 3.0) if you expect rapid charging. Ensure the power bank is not in Low Current Mode for high-power devices.
- **Power bank not recharging:** Confirm that the charging adapter and cable are functioning correctly and are compatible with the power bank's input requirements.
- **LED display not working:** Press the power button to activate the display. If it remains unresponsive, the power bank may require charging or service.

7. SPECIFICATIONS

Feature	Detail
Model Number	YSPBS80
Battery Capacity	80000mAh / 296Wh
Battery Type	Lithium Polymer
Total Output Power	130W Max
Input Ports	2 x USB-C (Type-C1, Type-C2)
Output Ports	2 x 100W USB-C (Type-C1, Type-C2), 1 x 20W USB-C, 2 x 22.5W USB-A, 1 x 10W USB-A
Dimensions	6.15 x 6.2 x 2.4 inches (approx. 15.6 x 15.7 x 6.1 cm)
Weight	4.18 lbs (approx. 1.9 kg)
Special Features	LED Digital Display, Comfortable Carrying Handle, Soft White & RGB Light Modes, Pass-Through Charging

Note: This power bank is not allowed on airplanes due to its high capacity (296Wh exceeds typical airline limits).



Image 8: A visual representation of the MOVE SPEED Power Bank's dimensions, showing its height (15.6cm) and width (15.7cm).

8. IMPORTANT SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures (above 45°C or below 0°C).
- Avoid dropping, impacting, or disassembling the device.
- Keep away from water, moisture, and flammable materials.
- Use only certified charging cables and adapters.
- Dispose of the power bank responsibly according to local regulations.

9. WARRANTY AND SUPPORT

MOVE SPEED offers a 30-day 100% refund policy if you are not satisfied with your purchase. For any inquiries or assistance, our customer service team is available 24/7 to address your concerns within 24 hours. Please refer to the official MOVE SPEED website or your purchase platform for detailed warranty terms and contact information.

10. PRODUCT VIDEO

Video 1: An official product video demonstrating the high capacity and fast charging capabilities of the MOVE SPEED 80000mAh USB-C PD Power Bank.

© 2025 MOVE SPEED. All rights reserved.