

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Nonbliep](#) /
- › [Nonbliep Wireless Controller for Xbox 360 and PC: User Manual](#)

Nonbliep Nonbliep Xbox 360 Wireless Controller

Nonbliep Wireless Controller for Xbox 360 and PC: User Manual

Model: Nonbliep Xbox 360 Wireless Controller

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the Nonbliep Wireless Controller, designed for use with Xbox 360, Xbox 360 Slim, and PC running Windows 11, 10, 8, or 7. Please read this manual thoroughly before using your controller to ensure proper setup and operation.



Image 1.1: Nonbliep Wireless Controllers (Two-Pack)

2. SETUP

2.1 Package Contents

- 2 x Nonbliep Wireless Controllers
- 2 x 2.4GHz Wireless Receivers
- User Manual

2.2 Powering the Controller

The controller requires two AA batteries or a compatible rechargeable battery pack (not included). To install batteries:

1. Locate the battery compartment on the back of the controller.
2. Press the release tab and remove the battery cover.
3. Insert two AA batteries, ensuring correct polarity (+/-). Alternatively, insert a compatible rechargeable battery pack.
4. Replace the battery cover until it clicks into place.

POWERD BY 2*AA BATTERIES OR RECHARGEABLE BATTERY PACK

Batteries are NOT included



Image 2.1: Battery Installation

2.3 Connecting to Xbox 360 / PC

The Nonbliep Wireless Controller uses a 2.4GHz wireless connection for stable, lag-free gameplay up to 30 feet. Each controller requires its own wireless receiver.



Image 2.2: Compatibility Overview

1. Plug the 2.4GHz wireless receiver into an available USB port on your Xbox 360 console or PC.
2. Turn on the controller by pressing the central Guide button (the Xbox logo button). The lights around the Guide button will flash.
3. Press the sync button on the wireless receiver. The light on the receiver will flash.
4. Press the sync button on the top edge of the controller (a small button near the charging port). The lights on the controller will flash rapidly.
5. Once the controller and receiver are paired, one of the quadrant lights around the Guide button will remain solid, indicating a successful connection.



Image 2.3: Wireless Connection to PC



Image 2.4: 30-Foot Wireless Coverage

3. OPERATING INSTRUCTIONS

3.1 Controller Layout

Familiarize yourself with the buttons and controls of your Nonbliep Wireless Controller:



Image 3.1: Controller Button Layout

- **Left/Right Joysticks:** For movement and camera control.
- **D-Pad (Directional Pad):** For precise directional input.
- **A, B, X, Y Buttons:** Action buttons for in-game commands.
- **LB/RB (Left/Right Bumper):** Shoulder buttons for various actions.
- **LT/RT (Left/Right Trigger):** Analog triggers for precise input, such as acceleration or aiming.
- **Guide Button:** Central button for accessing system menus and powering on/off.
- **Start/Back Buttons:** For pausing games, accessing menus, or specific in-game functions.

3.2 Key Features

- **Ergonomic Design:** The controller is designed to fit comfortably in your hands for extended gaming sessions.

EXCELLENT ERGONOMIC DESIGN

Perfectly fits your hands, delivering a super comfy holding



Image 3.2: Ergonomic Design

- **Dual Vibration Motors:** Experience dynamic vibration feedback for immersive gameplay, reacting to in-game events like explosions and impacts.



Image 3.3: Dual Vibration Feature



Image 3.4: Dynamic Vibration Feedback

- **Accelerometer/G-Sensor:** Utilize tilt control for specific game mechanics, such as steering in racing games or aiming in shooters.



Image 3.5: Accelerometer/G-Sensor for Tilt Control

- **2.5mm Audio Jack:** Connect headphones for private chat or enhanced audio immersion.



Image 3.6: 2.5mm Audio Jack

- **High-Precision Joysticks:** Enjoy ultra-sensitive and responsive controls for precise movements and aiming, minimizing input lag.



Image 3.7: High-Precision Joysticks

- **Multiplayer Ready:** The two-pack allows for immediate split-screen, co-op, or competitive gaming with friends and family.



Image 3.8: Dual Controllers for Multiplayer



Image 3.9: Application Scenarios

4. MAINTENANCE

4.1 Battery Care

- Remove batteries if the controller will not be used for an extended period to prevent leakage.
- Replace both AA batteries at the same time. Do not mix old and new batteries.
- If using a rechargeable pack, follow the manufacturer's instructions for charging and care.

4.2 Cleaning

- Use a soft, dry cloth to clean the controller's surface.
- For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- Do not allow liquids to enter the controller's openings.

4.3 Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller.

5. TROUBLESHOOTING

5.1 Controller Not Connecting / Frequent Disconnections

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Re-sync:** Follow the pairing steps in Section 2.3 to re-establish the connection.
- **Receiver Placement:** Ensure the wireless receiver is plugged directly into the console/PC and is not obstructed. Try a different USB port.
- **Interference:** Move closer to the receiver. Other 2.4GHz devices (Wi-Fi routers, cordless phones) can cause interference. Try to minimize these nearby.
- **Driver Installation (PC):** For PC use, ensure the necessary drivers are installed. Windows typically installs these automatically upon connecting the receiver. If not, check Windows Update or the Nonbliep support website.

5.2 Buttons or Joysticks Unresponsive

- **Check Connection:** Ensure the controller is properly connected and not experiencing disconnections.
- **Restart:** Power off and then power on the controller.
- **Clean:** Ensure no debris is lodged around the buttons or joysticks.

5.3 Vibration Not Working

- **Game Support:** Verify that the game you are playing supports vibration feedback.
- **In-Game Settings:** Check the game's settings to ensure vibration is enabled.
- **Battery Level:** Low battery power can sometimes affect vibration functionality.

6. SPECIFICATIONS

Feature	Detail
Brand	Nonbliep
Compatibility	Xbox 360, Xbox 360 Slim, PC (Windows 11/10/8/7)
Connectivity	2.4GHz Wireless
Wireless Range	Up to 30 feet
Power Source	2 x AA Batteries or Rechargeable Battery Pack (not included)
Special Features	Dual Vibration, Accelerometer/G-Sensor, 2.5mm Audio Jack
Dimensions (per controller)	Approximately 6.85 x 5.47 x 4.88 inches
Weight (per controller)	Approximately 1.21 pounds

7. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Nonbliep website. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in this manual, please contact Nonbliep customer service for assistance.

8. SAFETY INFORMATION

- Do not attempt to disassemble or modify the controller. This may cause damage and void the warranty.

- Keep the controller away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- Dispose of batteries responsibly according to local regulations.