

## SEYVUM RLLM40D380-6

# SEYVUM 40V 16-inch Cordless Lawn Mower User Manual

Model: RLLM40D380-6

## IMPORTANT SAFETY INFORMATION

---

Read all instructions carefully before operating the lawn mower. Failure to follow these instructions may result in serious injury or property damage. Keep this manual for future reference.

- Always wear appropriate personal protective equipment (PPE) including safety glasses, hearing protection, and sturdy footwear when operating the mower.
- Ensure the work area is clear of debris, stones, wires, and other objects that could be thrown by the blade.
- Do not operate the mower in wet grass or rain.
- Keep hands and feet away from the cutting blade. Disconnect the battery before performing any maintenance or clearing blockages.
- Never allow children or untrained individuals to operate the lawn mower.
- Operate the mower only in daylight or good artificial light.
- Avoid operating on slopes greater than 15 degrees. Mow across the face of slopes, never up and down.
- Store the mower and batteries in a dry, secure location, out of reach of children.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- SEYVUM 40V 16-inch Cordless Lawn Mower Unit
- 2 x 20V 4.0Ah Lithium-Ion Batteries
- 2.4A Fast Charger
- 45L Grass Collection Bag
- User Manual (this document)



Image: Contents of the SEYVUM 40V 16-inch Cordless Lawn Mower package, including the mower, two 20V 4.0Ah batteries, a dual fast charger, and the grass collection bag.

## ASSEMBLY

Follow these steps to assemble your SEYVUM Cordless Lawn Mower:

1. **Unpack Components:** Carefully remove all components from the packaging. Inspect for any damage.



Image: Labeled diagram showing key components of the SEYVUM lawn mower, including the upper push bar, safety lock button, cable clips, carrying handle, battery compartment lid, cutting height adjustment, grass box, wheel, 2x 4.0Ah batteries, charger, and mower deck.

2. **Attach Handle:** Secure the upper push bar (handle) to the mower body using the provided quick-assembly set. Ensure cable clips are used to manage the wiring neatly.





Image: Visual guide demonstrating how to unfasten the buckle to fold or adjust the angle of the mower handle for assembly and storage.

3. **Assemble Grass Collection Bag:** Assemble the 45L grass collection bag according to the instructions provided with the bag. Ensure the buckle is installed correctly for secure attachment to the mower.



Please make sure the buckle is installed correctly

Image: Close-up view emphasizing the correct installation of the grass collection bag buckle to ensure it is securely attached to the mower.

## CHARGING THE BATTERY

Your SEYVUM lawn mower is powered by two 20V 4.0Ah lithium-ion batteries. It is recommended to fully charge the batteries before first use.

1. **Connect Charger:** Plug the 2.4A Fast Charger into a standard electrical outlet.
2. **Insert Batteries:** Insert the 20V 4.0Ah batteries into the charging slots on the charger. Ensure they are seated firmly.



Image: Two 20V 4.0Ah SEYVUM batteries placed on their dual fast charger, indicating the charging process.

3. **Charging Indicators:** The charger will indicate the charging status (e.g., red for charging, green for fully charged). A full charge typically takes approximately 2 hours.
4. **Remove Batteries:** Once fully charged, remove the batteries from the charger.





Image: Illustration of the dual 20V 4.0Ah battery system, highlighting their capacity for 30 minutes of garden lawn mowing or 25 minutes of hard thatch cutting, with a 2-hour fast charging time.

## OPERATION

### Inserting Batteries and Safety Key

Before operating, ensure both charged batteries are inserted into the battery compartment and the safety key is engaged.



Image: Visual instruction to insert the safety key into the battery compartment before use and to remove it when storing the mower.

### Starting and Stopping the Mower

1. **To Start:** Push the button to turn ON, then push the trigger to start the mower.
2. **To Stop:** Release the trigger to turn OFF the mower.



Image: Step-by-step diagram illustrating how to operate the mower: 1) Push the button to turn ON, 2) Push the trigger to start, and 3) Release the trigger to turn OFF. Also notes to insert the safety key before use.

## Adjusting Cutting Height

The mower offers 6 adjustable cutting heights from 0.98 inches to 2.95 inches.

1. **Locate Adjustment Lever:** The cutting height adjustment lever is located on the mower deck.
2. **Select Height:** Move the lever to the desired height setting. Refer to the markings on the mower for specific height measurements.



# 6-Position Cutting Height



Image: A visual representation of the SEYVUM lawn mower's 6-position cutting height adjustment, ranging from 0.98 inches to 2.95 inches, with corresponding gear settings.

## 6-Position Cutting Height Adjustment

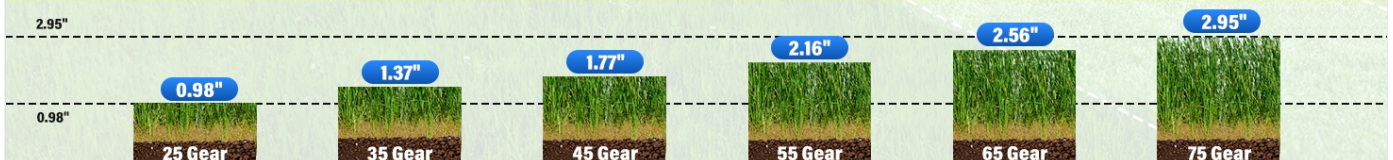




Image: Detailed illustration of the 6-position cutting height adjustment mechanism, showing different grass lengths corresponding to settings from 0.98" to 2.95".

## Using the Grass Collection Bag

The 45L grass collection bag efficiently collects clippings, reducing cleanup time.

1. **Attach Bag:** Ensure the grass collection bag is securely attached to the mower before operation.
2. **Monitor Fill Level:** Periodically check the bag's fill level. Empty the bag when it is full to maintain optimal mowing performance.



Image: A user attaching or detaching the 45L grass collection bag from the SEYVUM lawn mower, demonstrating its large capacity.

3. **Emptying:** Disconnect the battery, then remove the grass bag and empty its contents. Reattach securely before resuming operation.





Image: A visual reminder to regularly remove weeds and grass clippings from the grass collection bag to maintain efficiency.



Image: An illustration emphasizing the 45L large capacity grass collection bag, with warnings against mowing over stones, irrigation sprinklers, slopes greater than 15 degrees, wet lawns, or electric cables.

## Mowing Tips

- For best results, mow when the grass is dry.
- Do not attempt to cut more than one-third of the grass blade length at a time.
- Overlap cutting swaths slightly to ensure even coverage.
- Avoid sudden turns or stops while mowing.
- The 16-inch cutting width is ideal for small to medium-sized lawns.



# 16 inch Cutting Width



Image: A person operating the SEYVUM lawn mower, highlighting its 16-inch cutting width for efficient grass cutting.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Cleaning:** After each use, disconnect the battery and clean the mower deck and grass collection bag. Use a damp cloth to wipe down surfaces. Do not use water jets or harsh chemicals.
- **Blade Care:** Periodically inspect the cutting blade for sharpness and damage. A dull blade can tear grass, leading to an unhealthy lawn. If necessary, have the blade sharpened or replaced by a qualified service technician.
- **Battery Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, charge batteries to approximately 50% capacity.
- **Storage:** For convenient storage, the mower handle can be folded. Ensure the safety key is removed and batteries are disconnected before folding. Store the mower in a dry, secure location.



Image: The SEYVUM lawn mower with its handle folded, demonstrating its compact design for convenient storage in small spaces.

- **General Inspection:** Regularly check all nuts, bolts, and fasteners for tightness. Ensure all safety features are functioning correctly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mower does not start	Battery not inserted correctly	Ensure batteries are fully seated.
	Battery discharged	Charge batteries.
	Safety key not inserted	Insert safety key fully.
	Safety lock button not pressed	Press safety lock button before engaging trigger.
Poor cutting performance	Dull or damaged blade	Sharpen or replace blade.
	Grass too wet or tall	Mow when grass is dry; cut in smaller increments.
	Grass collection bag full	Empty grass collection bag.
Mower stops unexpectedly	Battery overheated or discharged	Allow batteries to cool; recharge if necessary.
	Motor overloaded (e.g., thick grass)	Reduce cutting load; raise cutting height.

SPECIFICATIONS

Feature	Detail
Brand	SEYVUM
Model Number	RLLM40D380-6
Power Source	Battery Powered (2 x 20V 4.0Ah Lithium-Ion)
Cutting Width	16 Inches
Cutting Height Adjustment	6 Positions (0.98 - 2.95 Inches)
Grass Collection Bag Capacity	45 Liters
Item Weight	33 Pounds



Feature	Detail
Product Dimensions	16.9"D x 28.3"W x 14.5"H
Material	Metal
Color	Light Green







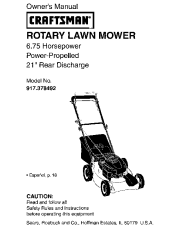

Image: The SEYVUM 40V 16-inch Cordless Lawn Mower, showcasing its design along with the included 20V 4.0Ah batteries and charger.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official SEYVUM website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For additional support or to purchase replacement parts, visit the [SEYVUM Store on Amazon](#).

## Related Documents - RLLM40D380-6

	<p><a href="#">solo by AL-KO Lawn and Garden Equipment 2019 Catalog</a></p> <p>Discover the 2019 range of solo by AL-KO lawn and garden equipment, featuring robotic lawnmowers, battery-powered tools, ride-on mowers, tractors, and petrol machines for professional and home use.</p>
	<p><a href="#">Craftsman 6.0 HP 21\" Multi-Cut Rotary Lawn Mower Owner's Manual</a></p> <p>Comprehensive owner's manual for the Craftsman 6.0 HP 21" Multi-Cut Rotary Lawn Mower (Model No. 917.388732), covering safety, assembly, operation, maintenance, troubleshooting, and parts. Includes warranty information and safety warnings.</p>
	<p><a href="#">MATEIN Laptop Bag User Manual - 15.6 Inch Water Resistant Briefcase</a></p> <p>User manual for the MATEIN 15.6 inch laptop bag. Features include water resistance, large capacity, organized pockets, padded compartment, and a luggage strap. Learn about product specifications, functions, and carry options.</p>
	<p><a href="#">CRAFTSMAN 917.271051 Lawn Tractor Owner's Manual</a></p> <p>This owner's manual provides essential safety rules, assembly instructions, operation guidelines, maintenance schedules, and troubleshooting tips for the CRAFTSMAN 15.5 HP Electric Start 42" Mower Lawn Tractor (Model No. 917.271051).</p>
	<p><a href="#">Craftsman 917.378492 Rotary Lawn Mower Owner's Manual</a></p> <p>Official owner's manual for the Craftsman 917.378492 Rotary Lawn Mower. Contains detailed instructions on operation, safety precautions, maintenance schedules, troubleshooting tips, and parts lists. Essential guide for proper use and care.</p>
	<p><a href="#">Craftsman 14.5 HP Electric Start 42\" Lawn Tractor Owner's Manual (Model 917.270513)</a></p> <p>Owner's manual for the Craftsman 14.5 HP Electric Start 42" Lawn Tractor (Model 917.270513). Covers safety, assembly, operation, maintenance, product specifications, and troubleshooting. Includes warranty details and support contact information from Sears, Roebuck and Co.</p>