

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Aspes](#) /

› [Aspes AL9403AIDV 9kg Front Load Washing Machine User Manual](#)

Aspes AL9403AIDV

Aspes AL9403AIDV 9kg Front Load Washing Machine

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Aspes AL9403AIDV 9kg Front Load Washing Machine. Please read these instructions carefully before installation and use, and keep them for future reference. This appliance is designed for household use only.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Keep the area around the washing machine clear of flammable materials.
- Do not open the detergent dispenser or door during a wash cycle if the water level is visible.

SETUP

1. Unpacking and Transport Bolts

Carefully remove all packaging materials. Before using the washing machine, **it is crucial to remove the transport bolts** located at the rear of the appliance. These bolts secure the drum during transit and must be removed to prevent damage during operation. Store the bolts for future transport if needed.

2. Location and Leveling

Place the washing machine on a firm, level surface. Ensure there is adequate ventilation around the appliance. Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. An unbalanced machine can cause excessive vibration and noise.

3. Water Connection

- Connect the cold water inlet hose to the cold water tap and the corresponding inlet valve on the back of the machine.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

4. Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.

5. First Use

Before washing clothes for the first time, run an empty wash cycle (e.g., a quick wash program) without laundry or detergent to clean the drum and internal components.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel features a program selector knob, function buttons, and a digital display. Familiarize yourself with these components before operation.



Image: Close-up of the Aspes AL9403AIDV washing machine control panel, showing the program selector knob, digital display, and various function buttons for delay, rinse, spin, and temperature settings.

2. Loading Laundry

Open the washing machine door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

3. Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to their respective compartments. Refer to your detergent packaging for recommended dosages.

4. Program Selection

Turn the program selector knob to choose one of the 16 available wash programs. Common programs include:

- **Normal:** For daily cottons and mixed fabrics.
- **Heavy:** For heavily soiled items.
- **Delicate:** For fragile garments requiring gentle care.
- **Quick:** For lightly soiled items needing a fast wash.

- Additional programs for specific fabric types and needs.

5. Function Selection

Use the function buttons to customize your wash cycle. Available functions may include:

- **Temperature:** Adjust the wash water temperature.
- **Spin Speed:** Select the desired spin speed (up to 1400 rpm).
- **Delay Start:** Postpone the start of the wash cycle.
- **Stop&Go Function:** Allows you to pause the cycle and add forgotten items.

6. Start the Cycle

Press the Start/Pause button to begin the selected wash program. The machine will automatically proceed through the wash, rinse, and spin phases.

7. End of Cycle

Once the cycle is complete, the machine will signal with an audible alert or display a message. Open the door and remove your laundry promptly to prevent wrinkles and odors.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

1. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent detergent residue buildup. Rinse it under running water and dry before reinserting.

2. Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent or white vinegar) every few months to clean the drum and remove any residue or odors.

3. Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Open the cover, drain any residual water, and carefully remove and clean the filter of lint, coins, or other debris. Reinstall securely.

4. Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

5. Door Seal Care

After each wash, wipe the rubber door seal to remove any moisture or lint, which helps prevent mold and odors.

TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
No water intake	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check household water pressure.
Machine vibrates excessively	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check and clear drain hose, clean the drain pump filter.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Model: AL9403AIDV

Capacity: 9 kg

Maximum Spin Speed: 1400 rpm

Motor Type: Inverter Motor

Energy Efficiency Class: A

Noise Level (Spin): 76 dB

Dimensions (H x W x D): 850 x 595 x 560 mm

Weight: 63 kg

Color: White

Number of Programs: 16

Special Functions: Stop&Go

Control Type: Push button



ENERG ⚡



aspes

AL9403AIDV






44 kWh / 



9,0 kg

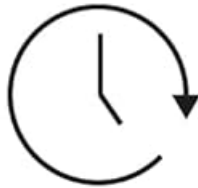

3:48



50 L



A **B** C D E F G



76 dB
A **B** C D

2019/2014

Image: EU Energy Label for the Aspes AL9403AIDV washing machine, indicating an 'A' energy efficiency class, 44 kWh/100 cycles, 9.0 kg capacity, 3:48 cycle duration, 50 L water consumption, and 76 dB noise level. For more details, scan the QR code or visit eprel.ec.europa.eu/qr/2284802.

WARRANTY

The Aspes AL9403AIDV washing machine comes with a standard product warranty. Additionally, the Inverter Motor is covered by a **10-year warranty**, ensuring its high functionality and durability. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card

included with your appliance or contact Aspes customer service.

SUPPORT

For further assistance, technical support, or spare parts, please contact Aspes customer service. Have your model number (AL9403AIDV) and serial number ready when you call.

© 2024 Aspes. All rights reserved.