

## LABIGO KS-2619

# LABIGO Electric Spin Scrubber LA1 Pro Instruction Manual

Model: KS-2619


## 1. PRODUCT OVERVIEW

---

The LABIGO Electric Spin Scrubber LA1 Pro is a cordless cleaning tool designed to simplify household cleaning tasks. It features an ergonomic design to reduce physical strain, making it ideal for various surfaces such as shower bathrooms, bathtubs, tiles, and floors.

### Key Features:

- **Efficient Cleaning:** Streamlines cleaning, reducing the need for bending or kneeling.
- **Powerful Performance:** Equipped with a high-speed motor rotating at up to 400RPM for thorough cleaning.
- **Cordless Operation:** Provides up to 90 minutes of cleaning after 3.5 hours of rapid charging.
- **Versatile Brush Heads:** Includes 4 replaceable brush heads tailored for diverse cleaning scenarios.
- **Extendable Handle:** Features a detachable and retractable metal extension rod for reaching tight corners and high spots.
- **Low Noise:** Operates at under 70dB.

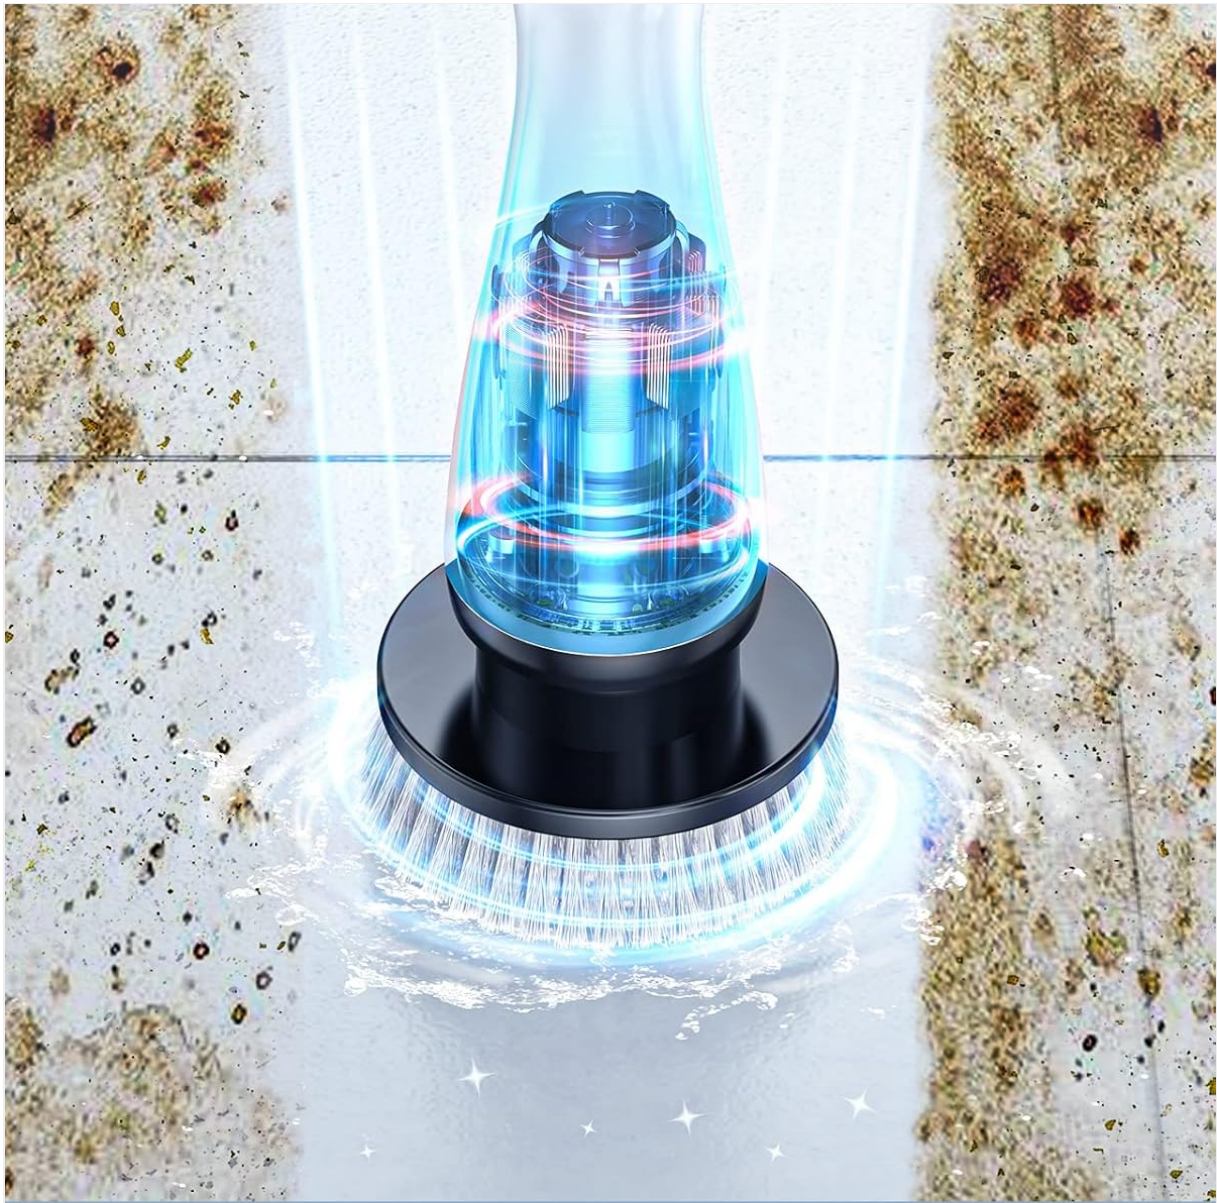

# Power Scrubber



**3.5h**  
Fast Charge



**90min**  
Runtime

Image 1.1: The LABIGO Electric Spin Scrubber LA1 Pro demonstrating its powerful cleaning action on a dirty tiled floor, highlighting its fast charge and long runtime.

# New Way To Clean

More Efficient, Less Effort



Image 1.2: A visual comparison showing the ease of cleaning with the LABIGO Electric Spin Scrubber versus traditional manual scrubbing, emphasizing reduced effort.

## 2. PACKAGE CONTENTS

Please ensure all items are present in the package before assembly and use:

- 1 x LABIGO Electric Spin Scrubber (Main Unit)
- 1 x Extension Rod
- 1 x Charger
- 1 x User Manual
- 4 x Replaceable Brush Heads (Dome Brush, Large Flat Brush, Small Flat Brush, Corner Brush)



Image 2.1: The electric spin scrubber positioned in a bathtub, with an inset displaying the three distinct brush heads included for various cleaning tasks.

### 3. ASSEMBLY INSTRUCTIONS

---

Follow these steps to assemble your LABIGO Electric Spin Scrubber:

1. **Attach the Extension Rod:** Align the connection points of the main scrubber unit with the extension rod. Push them together until you hear a click, ensuring a secure connection.
2. **Select and Attach Brush Head:** Choose the appropriate brush head for your cleaning task. Align the brush head with the rotating shaft on the main unit and push firmly until it locks into place.
3. **Adjust Handle Length (Optional):** If using the extension rod, you can adjust its length by releasing the locking mechanism, extending or retracting the rod to your desired length, and then securing the lock.

# Flexible Cleaning

Extendable Handle & Adjustable Angle



Image 3.1: The electric spin scrubber illustrating its flexible, extendable handle with three distinct length options for reaching various areas.

## 4. CHARGING THE DEVICE

Before first use, fully charge the scrubber. The device is cordless and requires charging for optimal performance.

1. Locate the charging port on the handle of the main unit.
2. Connect the provided charger to the port and plug it into a standard electrical outlet.
3. A full charge takes approximately 3.5 hours. The indicator light will change to show charging status.
4. Once fully charged, the scrubber provides up to 90 minutes of continuous use.



Image 4.1: The electric spin scrubber shown plugged into a wall outlet for charging, ready for use after its fast charge cycle.

## 5. OPERATING THE SPIN SCRUBBER

---

To achieve the best cleaning results and ensure the longevity of your device, follow these operating guidelines:

1. **Prepare the Surface:** For tough stains, pre-soak the area with detergent or a cleaning solution for approximately 5 minutes before using the scrubber.
2. **Turn On:** Press the power button located on the handle to activate the scrubber.
3. **Apply Light Pressure:** Guide the rotating brush head over the surface to be cleaned. Apply only light pressure; the motor's rotation is designed to do the work. Excessive pressure may cause the brush to slow down or stop.

4. **Move Systematically:** Work in small sections, moving the scrubber steadily to ensure even cleaning.
5. **Rinse:** After scrubbing, rinse the cleaned surface thoroughly with water.

### Using Different Brush Heads:

- **Dome Brush:** Ideal for curved surfaces like bathtubs and sinks, providing comprehensive coverage.
- **Large Flat Brush:** Best for large, flat areas such as floors, walls, and shower doors.
- **Small Flat Brush:** Suitable for smaller flat surfaces, mirrors, and areas requiring more focused cleaning.
- **Corner Brush:** Specifically designed for grout lines, corners, and tight crevices where other brushes cannot reach effectively.



Image 5.1: The electric spin scrubber showcasing its interchangeable brush heads, highlighting its adaptability for various cleaning needs around the home.

## 6. MAINTENANCE AND CARE

---

Proper maintenance ensures the longevity and performance of your LABIGO Electric Spin Scrubber:

- **Cleaning Brush Heads:** After each use, detach the brush head and rinse it thoroughly under running water to remove any soap residue or debris. Allow to air dry completely before storing.
- **Cleaning the Main Unit:** Wipe the main unit and extension rod with a damp cloth. Do not submerge the main unit in water.
- **Storage:** Store the scrubber in a dry place, away from direct sunlight and extreme temperatures. The included hanging attachment can be used for convenient storage.
- **Battery Care:** Recharge the battery when the power is low. Avoid completely draining the battery frequently to prolong its lifespan.
- **Brush Head Replacement:** Brush heads are replaceable. If bristles become worn or damaged, new brush heads can be purchased separately.

## 7. TROUBLESHOOTING COMMON ISSUES

---

If you encounter any issues with your LABIGO Electric Spin Scrubber, refer to the following:

- **Scrubber Stops During Use:** This often occurs if too much pressure is applied to the brush head. Reduce pressure and allow the motor to do the work. Ensure the battery is sufficiently charged.
- **Brush Head Not Spinning:** Check if the brush head is securely attached to the main unit. Ensure the battery is charged and the power button is pressed.
- **Reduced Performance:** If the scrubber's power seems diminished, ensure it is fully charged. Worn brush heads can also reduce cleaning effectiveness; consider replacing them.
- **Charging Issues:** Verify that the charger is properly connected to both the scrubber and the power outlet. Ensure the outlet is functional.

For issues not covered here, please contact customer support.

## 8. PRODUCT SPECIFICATIONS

---

<b>Brand</b>	LABIGO
<b>Model Number</b>	KS-2619
<b>Color</b>	Deep Black
<b>Handle Material</b>	Metal
<b>Product Dimensions</b>	16.14"L x 6.22"W x 5.39"H
<b>Material</b>	Nylon, Stainless Steel, Wire
<b>Item Weight</b>	3.58 pounds (1.63 Kilograms)
<b>Battery Life</b>	Up to 90 minutes runtime
<b>Charging Time</b>	Approx. 3.5 hours
<b>Motor Speed</b>	Up to 400RPM
<b>Noise Level</b>	Under 70dB

## 9. WARRANTY AND CUSTOMER SUPPORT

---

LABIGO is committed to providing durable and high-quality products. Your Electric Spin Scrubber is backed by our quality assurance.

If you have any questions, requests, or encounter any issues with your product, please do not hesitate to contact our customer support team. We are dedicated to resolving your concerns within 24 hours.

For support, please refer to the contact information provided in your product packaging or visit the official LABIGO website.