



Manuals.plus /

› **BOJUK** /

› BOJUK Scrub & Steam Mop F2-D2 User Manual

BOJUK F2-D2

BOJUK Scrub & Steam Mop F2-D2 User Manual

Model: F2-D2 | Brand: BOJUK

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Always use the appliance on a grounded outlet.
- Do not leave the steam mop unattended while powered on.
- Do not direct steam at people, animals, or electrical outlets.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup and ensure optimal performance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from outlet when not in use and before servicing.
- Do not operate with a damaged cord or plug.
- Do not use on unsealed hardwood floors or surfaces that are sensitive to heat or moisture.

PRODUCT OVERVIEW

The BOJUK Scrub & Steam Mop F2-D2 is designed for effective cleaning of various hard floor surfaces using high-temperature steam and rotating mop pads. Its features include LED headlights, a large water tank, and swivel steering for enhanced usability.



Figure 1: BOJUK Scrub & Steam Mop F2-D2 and accessories. This image displays the main unit of the steam mop along with six reusable mop pads.

Components:

- Main Mop Unit
- Handle Assembly
- 6 Mop Pads (reusable and washable)
- Water Filling Flask

SETUP

Follow these steps to prepare your BOJUK Scrub & Steam Mop for first use:

1. **Assemble the Handle:** Carefully insert the handle assembly into the main mop unit. Push firmly until you hear a click, indicating it is securely locked into place.
2. **Attach Mop Pads:** Align the mop pads with the rotating discs on the bottom of the mop head. Press them firmly onto the discs; they will attach via hook-and-loop fasteners. Ensure they are centered and fully secured.
3. **Fill Water Tank:**

- Locate the water tank cap on the main unit and open it.
- Use the provided filling flask to fill the water tank with distilled or demineralized water. The tank capacity is 15 ounces. Do not overfill.
- Securely close the water tank cap.



Figure 2: Illustration of filling the water tank. The image shows the water tank being filled with water using the provided flask.

OPERATING INSTRUCTIONS

Once assembled and filled, your steam mop is ready for use:

1. **Power On:** Plug the power cord into a grounded electrical outlet. The LED headlights will illuminate, indicating the unit is receiving power.
2. **Heat Up:** The mop will begin to heat the water. Steam will be ready in approximately 30 seconds.
3. **Select Cleaning Mode:** The mop features fingertip mode controls on the handle. Press the appropriate buttons to adjust the steam level and pad rotation speed according to your cleaning needs and floor type.
4. **Begin Cleaning:** Gently guide the mop across the floor surface. The motorized drive will assist in forward movement, reducing physical effort. The combination of rotating pads and high-temperature

steam will clean the surface.

5. **Maneuvering:** Utilize the 90° swivel head for easy navigation around furniture legs, into corners, and under cabinets.
6. **LED Headlights:** The integrated LED headlights help illuminate dirt, dust, and debris on the floor, ensuring thorough cleaning even in dimly lit areas.
7. **Power Off:** When cleaning is complete, unplug the power cord from the electrical outlet.



Figure 3: The steam mop in operation, highlighting the LED headlights. This image demonstrates the mop cleaning a floor, with its LED lights illuminating the path.



Figure 4: Swivel steering capability of the steam mop. The image illustrates the mop head pivoting to navigate around obstacles.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam mop:

1. **Empty Water Tank:** After each use, unplug the mop and allow it to cool completely. Empty any remaining water from the tank to prevent stagnant water and potential mineral buildup.
2. **Clean Mop Pads:** Remove the mop pads from the unit. The pads are reusable and washable. Machine wash them with similar colors using a mild detergent. Air dry thoroughly. Do not use bleach or fabric softener, as these can damage the pad material.
3. **Wipe Down Unit:** Wipe the exterior surfaces of the mop with a soft, damp cloth. Do not immerse the main unit or handle in water.
4. **Storage:** Store the mop in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is neatly wrapped to prevent damage.

6 Reusable Washable Pads: Multi-Surface Magic!



Deep Cleaning Power

Textured scrub strips lift tough grime



Ultra Absorption

Microfiber traps 3X more liquid instantly



No-slippage

Locking clips hold firmly even on fast moves



Breathable

Highly breathable material conducts large amounts of vapor

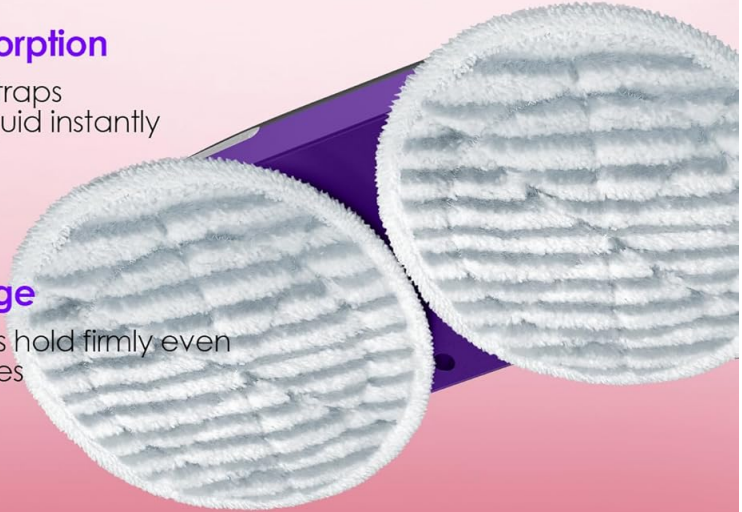


Figure 5: Reusable and washable mop pads. This image shows the texture and design of the mop pads, emphasizing their reusability.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
No Steam Produced	Water tank empty; Unit not plugged in; Unit not heated sufficiently; Mineral buildup in heating element.	Refill water tank with distilled water; Ensure power cord is securely plugged into a grounded outlet; Allow at least 30 seconds for heating; Perform descaling procedure (consult manufacturer's website for detailed instructions).
Mop Pads Not Spinning	Power not on; Obstruction preventing rotation; Motor malfunction.	Ensure unit is powered on and plugged in; Check for and remove any debris or obstructions around the pads; If issue persists, contact customer support.
Poor Cleaning Performance	Mop pads dirty or worn; Insufficient steam output; Incorrect cleaning mode selected.	Replace or clean mop pads; Ensure water tank is full and unit is fully heated; Select a higher steam or scrubbing mode for tougher stains.
Water Leaking from Unit	Water tank cap not securely closed; Overfilling the water tank; Damaged water tank or seal.	Ensure water tank cap is tightly closed; Do not overfill the tank; Inspect tank and seals for damage and contact support if necessary.

SPECIFICATIONS

- **Model:** F2-D2
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 1500 watts
- **Heat Time:** Approximately 30 Seconds
- **Maximum Temperature:** 230 Degrees Fahrenheit (110°C)
- **Tank Volume:** 15 ounces (approx. 443 ml)
- **Item Weight:** 10 pounds (approx. 4.5 kg)
- **Product Dimensions:** 11"D x 10"W x 45"H (approx. 27.9cm D x 25.4cm W x 114.3cm H)
- **Included Components:** 6 Mop Pads, Filling Flask
- **Surface Recommendation:** Sealed Hardwood, Marble, Tile, Stone, Laminate, Vinyl

WARRANTY AND SUPPORT

For warranty information, product registration, or technical assistance, please refer to the documentation included with your purchase or visit the official BOJUK website.

Online Support: Check the BOJUK website for frequently asked questions (FAQs), troubleshooting guides, and contact information for customer service.