

[Manuals.plus](#) /

› [SAVILAND](#) /

› SAVILAND Professional 40000 RPM Electric Nail Drill Instruction Manual

SAVILAND 02 (SA-NM-0021_01)

SAVILAND Professional 40000 RPM Electric Nail Drill Instruction Manual

Brand: SAVILAND | Model: 02 (SA-NM-0021_01)

INTRODUCTION

The SAVILAND Professional 40000 RPM Electric Nail Drill is designed for efficient and precise nail care, suitable for both home and professional salon use. This portable device offers rapid filing and removal of various nail enhancements, including hard gel and acrylics, significantly reducing service time.

Key features include an impressive 40,000 RPM speed for smooth operation without lagging, an ergonomic design for comfortable extended use with low vibration, and an aluminum alloy construction that ensures low heat and quiet operation. The kit comes complete with a full range of nail bits to cater to diverse manicure and pedicure needs.

PRODUCT COMPONENTS

Your SAVILAND Professional Electric Nail Drill kit includes the following items:

- Main Control Unit (with LED display)
- Nail Drill Handpiece
- Ceramic Nail Bits (various shapes for different tasks)
- Sanding Bands
- USB-C Charging Cable
- Handpiece Connection Cable
- User Manual



Image: Overview of the SAVILAND Professional Electric Nail Drill kit, including the main unit, handpiece, and accessories.



30s Thick Acrylic Nail Removal, Efficiency Soars

Nail Refresh, Speed is Key

Image: Detailed view of the comprehensive set of drill bits included, illustrating their diverse applications.

Video: An unboxing demonstration of the SAVILAND 40000 RPM Nail Drill, showcasing all included tools and components.

SETUP

1. **Unlock the Handpiece:** Rotate the handpiece clockwise until you hear a click to unlock the core.
2. **Insert/Replace Drill Bit:** Pull out any existing drill bit. Select the desired drill bit and insert it into the handpiece.
3. **Lock the Drill Bit:** Rotate the handpiece counter-clockwise to fix and secure the drill bit in place.
4. **Connect Power:** Connect the handpiece cable to the designated port on the main control unit. Ensure the USB-C charging cable is connected to the control unit for power.

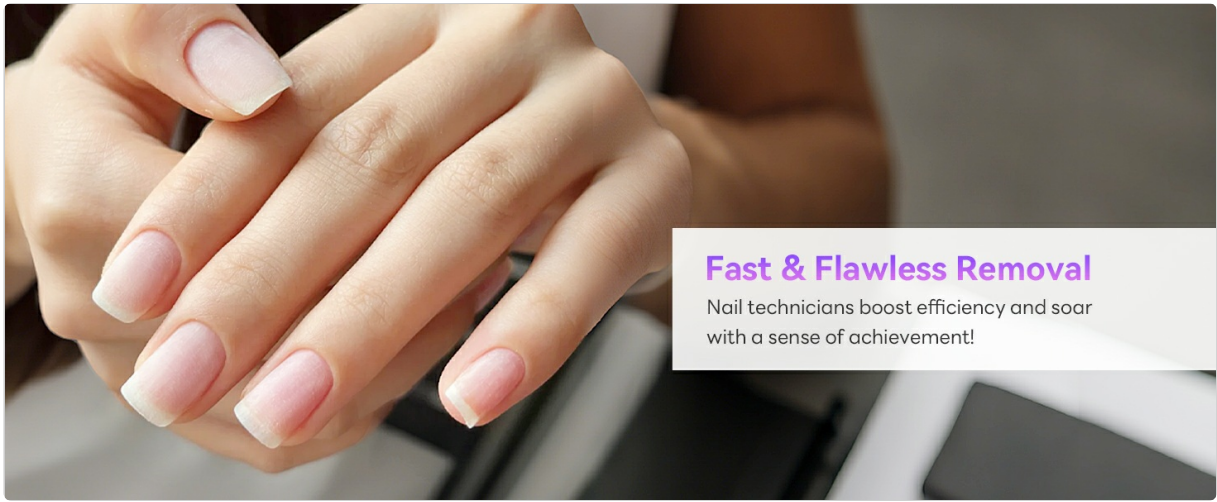


Image: Step-by-step visual guide for setting up the nail drill and preparing it for use.

Video: A step-by-step demonstration of how to change drill bits and connect the handpiece to the control unit.

OPERATING INSTRUCTIONS

1. **Power On:** Turn the control knob on the main unit to power on the device. The LED screen will display the current RPM and battery life.
2. **Adjust Speed:** Rotate the control knob to adjust the rotational speed (RPM) of the drill bit. Start with a low speed and gradually increase as needed.
3. **Change Rotation Direction:** Use the F/R button on the side of the control unit to switch between forward (F) and reverse (R) rotation.
4. **Pause Function:** The control unit features a pause button for temporary of operation.
5. **Begin Polishing:** Gently apply the rotating drill bit to the nail surface. Use appropriate bits for tasks such as grinding, carving, cutting, polishing, and removing gel polish, cuticles, or dead skin.

Saviland

Advanced 30s Quick-Removal Nail Drill



30s
Quick-Removal



40000 RPM
No-Lag Polishing



Low Vibration &
Heat



Low Noise for
Shared Spaces



Full Set Drill Bits
for Tasks



One Charge
Work a Week

Image: The nail drill in action, highlighting its powerful and stable performance.

Video: A demonstration of the nail drill's features and its effectiveness in various nail care procedures.

MAINTENANCE

- Keep the nail drill clean and dry when not in use.
- Regularly clean drill bits after each use to prevent buildup and maintain efficiency.
- Store the device and its accessories in a cool, dry place away from direct sunlight and humidity.

SAFETY INFORMATION

- Always wear safety glasses when using the nail drill.
- Do not touch the rotating bit or motor with bare hands.
- Keep the nail drill clean and dry when not in use.
- Do not use the nail drill if the bit or motor is damaged or worn out.
- Keep away from children.
- Keep away from humidity and avoid electric shock.
- For initial use, start from a low speed and slowly adapt, then adjust as appropriate.

- Do not use the drill in the same place on the nail for too long to avoid damage.
- The switch needs to be turned off before changing the drill bit.
- Use carefully; do not apply too much pressure, especially with pointy bits.
- High-speed motors generate heat; avoid prolonged continuous use.

TROUBLESHOOTING

- **Drill not turning on:** Ensure the device is fully charged or connected to a power source. Check all cable connections.
- **Bit not rotating:** Verify the drill bit is correctly inserted and locked into the handpiece.
- **Excessive heat:** Reduce the speed setting or take short breaks during prolonged use. Ensure proper ventilation around the device.
- **Unusual noise or vibration:** Check if the drill bit is bent or damaged. Replace if necessary. Ensure the bit is securely locked.

SPECIFICATIONS

- **Product Dimensions:** 3.5 x 3.48 x 4.5 inches
- **Weight:** 1.1 Pounds
- **Material:** Metal
- **Input Power:** 150 Watts
- **Maximum Rotational Speed:** 40000 RPM

WARRANTY & SUPPORT

For any questions, concerns, or support regarding your SAVILAND Professional Electric Nail Drill, please contact our customer service team.

Customer Service Email: support@saviland.com