

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Shark](#) /
- › [Shark Rechargeable Floor Sweeper V2700Z Instruction Manual](#)

## Shark V2700Z

# Shark Rechargeable Floor Sweeper

MODEL: V2700Z

### 1. Product Overview

---

The Shark V2700Z Rechargeable Floor Sweeper is designed for quick and efficient cleaning across various floor types. It features a motorized brushroll for effective pickup of debris, dust, and pet hair. Its compact and swivel design allows for easy maneuverability around furniture and in tight spaces, offering a 10-inch cleaning path for balanced coverage and precision. The cordless design and rechargeable battery provide freedom of movement, and the easy-empty dust cup simplifies disposal.



## Motorized brushroll

Consistently cleans while picking up debris, dust, and pet hair.

Image: The Shark V2700Z Rechargeable Floor Sweeper in blue, being used on a hard floor and partially on a rug, demonstrating its compact design and ease of use.

## 2. Safety Instructions

Please read all instructions carefully before using your Shark V2700Z Rechargeable Floor Sweeper. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the sweeper is turned off before performing any maintenance or cleaning.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Do not immerse the sweeper in water or other liquids.
- Do not pick up flammable or combustible materials, such as lighter fluid, gasoline, or kerosene, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Supervise children to ensure they do not play with the appliance.
- Store the appliance indoors in a cool, dry place.

## 3. Package Contents

Verify that all components are present in the package:

- Sweeper Unit (main body with motorized brushroll)
- Handle (top section with grip)
- Three Handle Extension Pieces
- Battery Charging Cord
- Owner's Guide / Instruction Booklet

Your browser does not support the video tag.

Video: An unboxing and overview of the Shark Cordless Floor & Carpet Sweeper, showing all included parts: the sweeper unit, handle, handle extension pieces, charging cord, and instruction manual.

## 4. Assembly

---

Follow these steps to assemble your Shark V2700Z Floor Sweeper:

1. Insert the lower handle extension tube into the body of the sweeper unit.
2. Connect the remaining two handle extension tubes together.
3. Attach the assembled handle section to the top extension tube.
4. Ensure all connections are secure before use.

## 5. Charging

---

Before first use, fully charge the sweeper for approximately 7 hours. To charge, connect the charging cord to the charging port on the sweeper unit and plug the adapter into a standard electrical outlet. The charging indicator light will illuminate during charging.

## 6. Operating Instructions

---

The Shark V2700Z is designed for versatile cleaning on various surfaces.

### General Operation:

- To turn on the sweeper, press the power button located on the unit.
- Gently push the unit forward over the surface you wish to clean. The motorized brushroll will activate to pick up debris.
- The compact swivel design allows for easy navigation around furniture and obstacles.



## 10" cleaning path

Features a sleek, compact design suitable for all floor types.

Image: A person using the Shark V2700Z sweeper to clean around the legs of a dining table, highlighting its versatile and quick cleaning capabilities with a compact swivel design.

### **Cleaning Path:**

The sweeper features a 10-inch cleaning path, providing efficient coverage for various areas.



## Tackle messes wherever they happen

Move freely with a cordless design and rechargeable battery.

Image: The Shark V2700Z sweeper positioned on a patterned rug, demonstrating its 10-inch cleaning path for effective debris collection.

### **Motorized Brushroll:**

The motorized brushroll consistently cleans by picking up debris, dust, and pet hair from various surfaces.



## Versatile and quick cleaning

Boasts a compact swivel design for easy furniture navigation.

Image: The Shark V2700Z sweeper in action, showing its motorized brushroll effectively cleaning a transition area between a hard floor and a rug.

### **Cordless Design:**

Move freely with the cordless design and rechargeable battery, allowing you to tackle messes wherever they happen without being tethered to an outlet.



## Minimal disruption

Avoid disturbing family or pets while cleaning.

Image: A person using the Shark V2700Z sweeper to clean spilled coffee grounds on a kitchen floor, illustrating the convenience of its cordless design for quick cleanups.

### **Minimal Disruption:**

The sweeper operates with minimal noise, allowing you to clean without disturbing family or pets.



## Easy to store

Fits into tight spaces, closets, and laundry rooms.

Image: A woman using the Shark V2700Z sweeper on a rug while a child and dog are nearby, demonstrating its quiet operation and minimal disruption.

### 7. Maintenance

#### Easy-Empty Dust Cup:

The sweeper features an easy-empty dust cup for mess-free disposal of collected dirt and debris. Simply remove the dust cup and empty its contents into a trash receptacle.



## Easy-empty dust cup

Dispose of dust and dirt without the mess.

Image: A hand demonstrating how to easily empty the dust cup of the Shark V2700Z sweeper into a trash can, showing the collected debris.

### **Brushroll Cleaning:**

Periodically check the brushroll for any tangled hair, strings, or debris. Use scissors to carefully cut away any obstructions. Ensure the brushroll spins freely.

### **Storage:**

The slim and lightweight design allows for easy storage in tight spaces, closets, or laundry rooms.



Image: The Shark V2700Z sweeper stored upright against a wall next to a laundry basket and shelving, demonstrating its easy-to-store, compact design.

## 8. Troubleshooting

- **Sweeper not turning on:** Ensure the battery is fully charged. Check that the power button is pressed firmly.
- **Poor debris pickup:** Empty the dust cup. Check the brushroll for any obstructions and remove them. Ensure the unit is fully charged.
- **Battery not charging:** Verify the charging cord is securely connected to both the sweeper and the power outlet. Check the power outlet for functionality.

## 9. Specifications

<b>Brand</b>	Shark
<b>Model Name</b>	Rechargeable Floor Sweeper
<b>Item Model Number</b>	V2700Z
<b>Special Feature</b>	Motorized Brushroll
<b>Power Source</b>	Battery Powered
<b>Is Cordless?</b>	Yes
<b>Surface Recommendation</b>	For All Floor Types
<b>Cleaning Path</b>	10 inches
<b>Item Weight</b>	2.61 pounds
<b>Product Dimensions</b>	20.6 x 20.6 x 44 inches

## 10. Warranty and Support

For warranty information or customer support, please refer to the official Shark website or contact their customer service department. Keep your purchase receipt as proof of purchase.