

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher](#) /

› [Fisher Portable Bluetooth Speaker SBT294 User Manual](#)

Fisher SBT294

Fisher Portable Bluetooth Speaker SBT294 User Manual

Model: SBT294

INTRODUCTION

Thank you for purchasing the Fisher Portable Bluetooth Speaker SBT294. This manual provides important information regarding the setup, operation, and maintenance of your speaker. Please read it thoroughly before use and retain it for future reference.

The Fisher SBT294 is a compact, IPX5 waterproof and dustproof portable speaker featuring Bluetooth 5.3 connectivity, 10W peak power, and an integrated FM radio. It is designed for versatile use, both indoors and outdoors.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- Fisher Portable Bluetooth Speaker SBT294
- USB-C Charging Cable
- User Manual (this document)
- Warranty Card

Premium Wireless Audio


Wireless Range
32.8ft


Charge time
2 hours


Wireless
Streaming


Dustproof



Image: Contents of the product packaging.

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.

Speaker Components



Image: Front view of the Fisher SBT294 speaker.

- **Speaker Grille:** Protects the internal speaker driver.
- **Control Buttons:** For power, volume, track control, and mode selection.
- **Carrying Strap:** For easy portability and attachment.
- **USB-C Port:** For charging the speaker.

Control Buttons

Bluetooth 5.3

Quick pairing, stable transmission up to 33ft



Image: Detailed view of the speaker's control buttons.

- **'+' Button:** Short press for next track, long press to increase volume.
- **'Play/Pause' Button:** Short press to play/pause, long press for power on/off. Short press to answer/end calls. Double press to switch modes (Bluetooth/FM).
- **'-' Button:** Short press for previous track, long press to decrease volume.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. A full charge takes approximately 2 hours.

1. Connect the supplied USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.



Image: Speaker connected to a USB-C charging cable.

2. Power On/Off

- **To Power On:** Long press the 'Play/Pause' button until you hear a power-on tone.
- **To Power Off:** Long press the 'Play/Pause' button until you hear a power-off tone.

3. Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED). If not, double press the 'Play/Pause' button to switch modes.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "SBT294" from the list of devices.
4. Once paired, the speaker will emit a confirmation tone, and the LED will stop flashing.



Image: Bluetooth pairing with a smartphone.

4. True Wireless Stereo (TWS) Pairing

For an enhanced stereo experience, you can pair two SBT294 speakers together.

1. Ensure both SBT294 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the 'Play/Pause' button until you hear a TWS pairing tone. The speaker will search for another SBT294.
3. The two speakers will automatically connect to each other. A confirmation tone will sound once connected.
4. Now, connect your device to the primary speaker via Bluetooth as described in step 3. Both speakers will play audio in stereo.

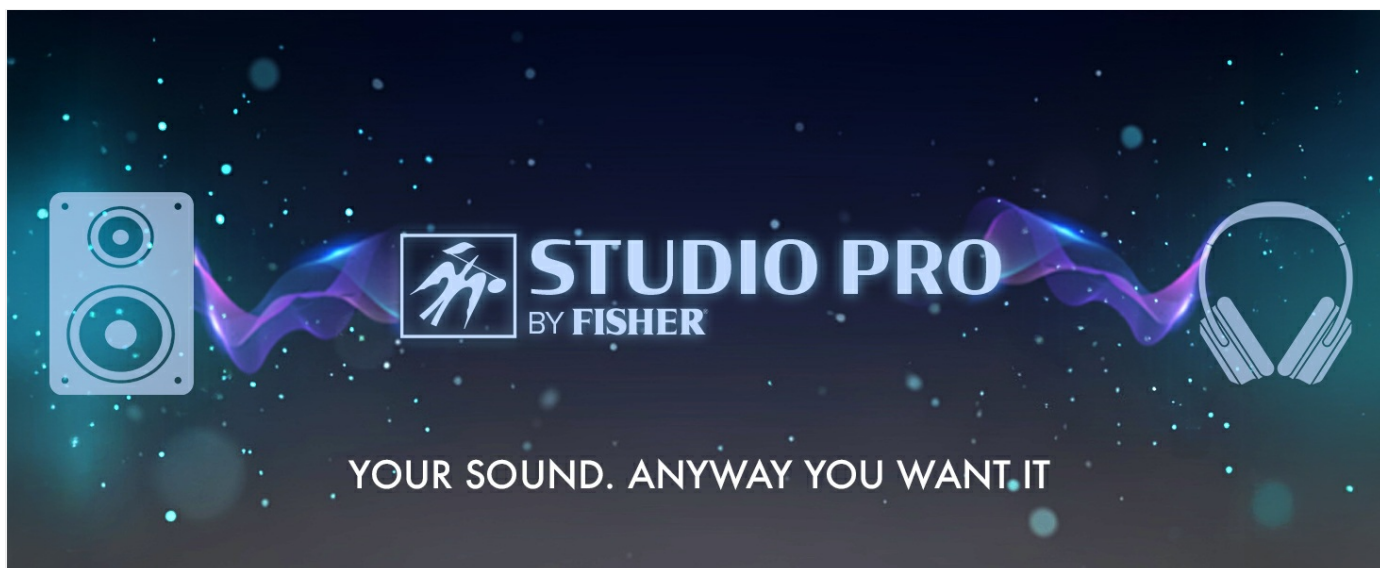


Image: Two speakers paired for True Wireless Stereo with a laptop.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Short press the 'Play/Pause' button.
- **Next Track:** Short press the '+' button.
- **Previous Track:** Short press the '-' button.
- **Volume Up:** Long press the '+' button.
- **Volume Down:** Long press the '-' button.

FM Radio Mode

To switch to FM radio mode:

1. Double press the 'Play/Pause' button to cycle through modes until you hear the FM radio prompt.
2. In FM mode, short press the 'Play/Pause' button to auto-scan and save available stations.
3. Use the '+' and '-' buttons to navigate between saved stations.

Hands-Free Calling

When connected to a smartphone via Bluetooth:

- **Answer Call:** Short press the 'Play/Pause' button when an incoming call rings.
- **End Call:** Short press the 'Play/Pause' button during a call.
- **Reject Call:** Long press the 'Play/Pause' button when an incoming call rings.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is IPX5 waterproof, meaning it can resist a sustained, low-pressure water jet spray. Do not submerge the speaker in water. Ensure the charging port cover is securely closed before exposure to water.
- **Storage:** Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.



IPX5 Waterproof and Dustproof

Keep the music Playing at beach, by the pool or even if it starts raining

Image: Speaker in an outdoor, poolside environment, highlighting its waterproof design.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source using the USB-C cable.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> • Ensure the speaker is in Bluetooth pairing mode (flashing LED). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device (within 33 feet). • Forget "SBT294" from your device's Bluetooth list and try pairing again. • Ensure no other devices are currently connected to the speaker.
No sound or low volume.	<ul style="list-style-type: none"> • Increase the volume on both the speaker and your connected device. • Ensure the speaker is properly paired. • Check if the speaker is muted.
FM radio reception is poor.	<ul style="list-style-type: none"> • Move the speaker to an open area, away from obstructions or interference. • Perform an auto-scan for stations again.
TWS pairing fails.	<ul style="list-style-type: none"> • Ensure both speakers are SBT294 models. • Make sure both speakers are not connected to any other Bluetooth device before initiating TWS pairing. • Place speakers close to each other during pairing.

SPECIFICATIONS

Feature	Detail
Model Number	SBT294
Brand	Fisher
Connectivity Technology	Bluetooth 5.3, USB
Speaker Output Power	5W RMS, 10W Peak
Audio Driver Size	45 mm
Frequency Response	13 KHz
Waterproof Rating	IPX5
Battery Capacity	1200 mAh
Battery Life	Up to 5-6 hours (at 50% volume)
Charging Time	Approximately 2 hours
Bluetooth Range	Up to 33 feet (10 meters)
Dimensions (W x H x D)	4.44" x 3.04" x 1.76"
Weight	0.55 lbs
Additional Features	FM Radio, True Wireless Stereo (TWS) Pairing

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Keep the speaker away from strong magnetic fields.
- Use only the provided USB-C cable for charging.
- Avoid listening at high volumes for extended periods to prevent hearing damage.
- Dispose of the speaker and its battery responsibly according to local regulations.

WARRANTY AND SUPPORT

This product comes with a limited warranty. Please refer to the included Warranty Card for details regarding coverage and terms.

For technical support or customer service, please contact the manufacturer, Migear Intl, LLC, or refer to the contact information provided on your warranty card or the official Fisher website.

Manufacturer: Migear Intl, LLC

Warranty Type: Limited



