

[manuals.plus](#) /› [DERMALOGIC](#) /› [DERMALOGIC SKYE Plumbing Head Spa Instruction Manual XSH-HSPA-05-BLKWHT-KIT](#)**DERMALOGIC XSH-HSPA-05-BLKWHT-KIT**

DERMALOGIC SKYE Plumbing Head Spa Instruction Manual

Model: XSH-HSPA-05-BLKWHT-KIT

1. PRODUCT OVERVIEW

The DERMALOGIC SKYE Plumbing Head Spa is a U-shape water massage shampoo backwash unit designed for professional salon and spa environments. This unit integrates advanced features for head therapy, including consistent water circulation, temperature control, and a revitalization therapy machine with steamer and medication functions. It features a durable ABS basin and UPC certified plumbing components.

Key Features:

- U-shape spa head with 22 outlet holes for consistent water circulation.
- Integrated time and temperature control for customized treatments.
- Advanced Revitalization Therapy Machine for deeper relaxation, including steamer and medication functions.
- Durable ABS basin with a 30-liter basic capacity.
- UPC certified faucet and shower head for reliable plumbing.
- Includes a bowl cover and a 2-liter capacity fumigator steamer.



Figure 1.1: Front view of the DERMALOGIC SKYE Plumbing Head Spa, showcasing its compact design and control panel.

2. SAFETY INFORMATION

Please read all safety instructions carefully before installation and operation to prevent injury or damage to the unit. Keep this manual for future reference.

General Safety Precautions:

- **Electrical Hazard:** Ensure the unit is connected to a properly grounded electrical outlet (AC 110V-220V). Do not operate with wet hands or in excessively damp environments.
- **Water Safety:** Always ensure there is adequate water in the basin before activating the water circulation function. Operating the pump dry can cause severe damage.
- **Temperature Control:** Exercise caution when setting water temperature to prevent burns. Always test water temperature before use.
- **Maintenance:** Disconnect power before performing any maintenance or cleaning.
- **Supervision:** Do not allow children or individuals with reduced physical, sensory, or mental capabilities to

operate the unit without supervision.

- **Disassembly:** Disassembly by non-professionals is strictly prohibited. Refer all servicing to qualified personnel.

3. SETUP AND INSTALLATION

The SKYE Plumbing Head Spa requires proper plumbing and electrical connections. Professional installation is recommended.

Unpacking and Placement:

1. Carefully remove all components from the packaging. Inspect for any shipping damage.
2. Place the unit on a stable, level surface in the desired location. Ensure sufficient space around the unit for access and ventilation. The unit dimensions are approximately 25.6" (Length) x 24.5" (Width) x 24.5" (Height) and it weighs 71 pounds.

Plumbing Connections:

1. Connect the hot and cold water supply lines to the designated inlets on the unit. Use appropriate plumbing fittings and ensure all connections are watertight.
2. Connect the drain hose from the basin to a suitable wastewater drainage system. Ensure proper slope for efficient drainage.
3. Verify all plumbing connections for leaks before proceeding.

Electrical Connection:

1. Plug the power cord into a grounded AC 110V-220V electrical outlet. Ensure the outlet meets local electrical codes.





Figure 3.1: Side view of the head spa unit, showing the overall structure and potential connection points.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and functions before operating the unit.

Control Panel Overview:



Figure 4.1: Close-up of the control panel, displaying time and temperature settings, and function buttons.

1. **Power On/Off:** Press the 'Power Switch' button to turn the unit on or off.
2. **Fill Basin:** Ensure the basin is filled with water to the appropriate level before activating water circulation. The basic capacity is 30 liters.
3. **Set Time:** Use 'Time +' and 'Time -' buttons to adjust the duration of the treatment.
4. **Set Temperature:** Use 'Temp +' and 'Temp -' buttons to adjust the water temperature. Always verify the temperature before client use.
5. **Water Circulation:** Press 'Water Circulation' to activate the U-shape spa head's water flow. The system output is 800-1000 Watts.
6. **Water Intensity:** Adjust the intensity of the water massage using the 'Water Intensity' button.
7. **LED Light:** Press 'LED Light' to turn the internal LED lighting on or off.
8. **Revitalization Therapy Machine (Fumigator):** The unit includes a separate fumigator steamer with a 2-liter capacity. Fill the fumigator with water and any desired medication (if applicable and safe for use). Place the fumigator cover over the basin. Activate the fumigator as per its specific instructions. The system output is 1000 Watts.



Figure 4.2: The head spa unit shown with its protective cover and the separate fumigator steamer.



Figure 4.3: Detailed view of the U-shape basin, showing the faucet, shower head, and water outlets.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your head spa unit.

Daily Cleaning:

- After each use, drain the water from the basin.
- Wipe down the basin and exterior surfaces with a mild, non-abrasive cleaner and a soft cloth.
- Clean the shower head and faucet to prevent mineral buildup.

Weekly Maintenance:

- Inspect all plumbing connections for any signs of leaks.
- Clean the fumigator steamer thoroughly, removing any residue.
- Check the water circulation outlets for blockages and clear if necessary.

Long-Term Storage:

- If storing the unit for an extended period, ensure it is completely drained and dry.
- Store in a clean, dry environment away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your SKYE Plumbing Head Spa.

Problem	Possible Cause	Solution
Unit does not power on.	No power supply; loose connection; faulty power switch.	Check power cord connection and wall outlet. Ensure power switch is pressed. If issue persists, contact support.
No water circulation.	Insufficient water in basin; pump blockage; faulty pump.	Ensure basin has adequate water. Check for blockages in water outlets. WARNING: Do not activate water circulation without water.
Water temperature is incorrect.	Incorrect temperature setting; water heater issue.	Adjust temperature using control panel. Verify hot/cold water supply.
Fumigator not producing steam.	No water in fumigator; heating element issue.	Fill fumigator with water. Ensure it is properly connected and powered on.
Water leaks from connections.	Loose plumbing connections; damaged seals.	Tighten all plumbing connections. Inspect seals and replace if damaged. Professional assistance may be required.

7. SPECIFICATIONS

Technical specifications for the DERMALOGIC SKYE Plumbing Head Spa.

Specification	Detail
Model Number	XSH-HSPA-05-BLKWHT-KIT
Rated Input/Output Voltage	AC 110V-220V
Water Circulation System Output	800-1000 Watts
Revitalization Therapy Machine System Output	1000 Watts
IP (Ingress Protection) Level	X2
Basic Water Capacity	30 Liters

Specification	Detail
Fumigator Capacity	2 Liters
Product Dimensions	25.6 x 24.5 x 24.5 inches (Length x Width x Height)
Item Weight	71 pounds
Material	Metal (frame), ABS (basin)
Color	Black Base, White Bowl
Manufacturer	Dermalogic

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact the seller, Madison & Park, or the manufacturer, DERMALOGIC, directly. Please have your model number (XSH-HSPA-05-BLKWHT-KIT) and purchase date available when contacting support.

The product is from a small business brand. Your support is appreciated.

© 2026 DERMALOGIC. All rights reserved.

For further assistance, please refer to the official DERMALOGIC website or contact your distributor.