

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [olayks.](#) /

› [olayks. OLK-JS2202-FBM Cold Press Slow Masticating Juicer Instruction Manual](#)

olayks. OLK-JS2202-FBM

olayks. Cold Press Slow Masticating Juicer

MODEL: OLK-JS2202-FBM

User Instruction Manual

1. Important Safety Instructions

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use may result in injury or damage to the appliance.

- Always ensure the juicer is correctly assembled before operation.
- Do not operate the appliance with a damaged cord or plug. Contact customer support for assistance.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the food pusher provided.
- Ensure the appliance is switched off and unplugged before assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or any other liquid.
- This appliance is for household use only. Do not use outdoors.
- Avoid juicing hard seeds, frozen fruits, or ice, as this may damage the auger.
- The juicer is equipped with intelligent protection chips and will stop automatically after 20 minutes of continuous operation. Allow it to cool down before resuming.

2. Product Overview

The olayks. Cold Press Slow Masticating Juicer is designed to efficiently extract juice from various fruits and vegetables, preserving nutrients and flavor. Key components include:

- **Motor Base:** Houses the powerful and quiet motor.
- **Feeding Chute:** Where fruits and vegetables are inserted.
- **Auger:** The upgraded 7-auger grinds produce slowly.
- **Filter-Free Design:** Simplifies cleaning and prevents clogging.

- **Juice Outlet:** For extracted juice.
- **Pulp Outlet:** For expelled pulp.
- **Juice Cup & Pulp Container:** Collects juice and pulp separately.
- **Food Pusher:** Assists in feeding produce into the chute.
- **Control Panel:** Features REV (Reverse), OFF, SOFT, and HARD modes.

2 Masticating Speeds

Suitable for different fruits & vegetable



Image: All components of the olayks. Slow Masticating Juicer, including the motor base, auger, filter, juice and pulp containers, and food pusher.

Image: Detailed view of the upgraded 7-auger, highlighting its thick cutting kerf, larger diameter, and fixed plate for efficient juicing.

3. Setup

Follow these steps to assemble your juicer before first use:

1. Place the motor base on a stable, flat surface.
2. Insert the filter-free juicing chamber onto the motor base, aligning the arrows and twisting until it locks into place.
3. Insert the auger into the juicing chamber.

4. Attach the feeding chute assembly to the juicing chamber, aligning the arrows and twisting to secure.
5. Place the juice cup under the juice outlet and the pulp container under the pulp outlet.
6. Ensure the anti-drip stopper on the juice outlet is open before starting.



Image: Visual guide for quick setup and disassembly, illustrating the modular design of the juicer components.

4. Operating Instructions

Prepare your fruits and vegetables by washing them thoroughly. For best results, peel citrus fruits and remove large seeds or hard pits. Cut produce into smaller chunks to fit the feeding chute and prevent clogging.



REVERSE MODE

Note: Before plug in, comfrm that it is switched to "OFF"

Image: Preparing produce by cutting carrots into smaller pieces, demonstrating the recommended size for efficient juicing.

4.1 Power On and Mode Selection

- Plug the juicer into a power outlet.
- Turn the power switch on the back of the unit to the 'ON' position.
- Select the appropriate mode on the control panel:
 - **SOFT Mode (80-100 RPM):** Ideal for soft and juicy fruits and vegetables like watermelon, orange, grape, celery, and cucumber.
 - **HARD Mode (95-110 RPM):** Suitable for harder fruits and vegetables such as apples, pears, carrots, beets, ginger, and kale.



Higher Drier Pulp

Upgraded filter extracts purest juicer

Image: The juicer's control panel with SOFT and HARD mode selections, illustrating suitable produce for each setting.

4.2 Juicing Process

- Slowly feed the prepared produce into the feeding chute.
- Use the food pusher to gently guide the produce down. Do not force it.
- The juicer will extract juice into the juice cup and separate pulp into the pulp container.

4.3 Reverse Function

- If the juicer becomes clogged or stops during operation, press and hold the 'REV' (Reverse) button. This will rotate the auger in the opposite direction to clear any blockages.
- Release the 'REV' button and select your desired juicing mode to resume.

4.4 Quiet Operation

The olayks. juicer operates at a low decibel level ($\leq 60\text{dB}$), ensuring a quiet juicing experience that won't disturb your household, even during early mornings or late nights.

Video: A short clip demonstrating the quiet operation of the olayks. juicer, allowing for peaceful mornings.

Video: A demonstration of the olayks. Slow Masticating Juicer in action, showcasing its soft and hard modes for various produce.

5. Cleaning and Maintenance

Regular cleaning ensures the longevity and hygienic operation of your juicer. The filter-free design makes cleanup simple.

1. Switch off and unplug the juicer from the power outlet.
2. Disassemble the juicer by pressing the release button and twisting the components counter-clockwise.
3. Rinse all detachable parts (juicing chamber, auger, feeding chute, cups) under running water.
4. Use the provided cleaning brush to remove any remaining pulp or residue.
5. Most detachable parts are dishwasher safe for added convenience.
6. Wipe the motor base with a damp cloth. Never immerse the motor base in water.
7. Allow all parts to dry completely before reassembling or storing.



Image: Cleaning instructions, showing how to clean the auger with a brush and that parts are dishwasher safe.

6. Troubleshooting

- **Juicer does not turn on:** Ensure the juicer is properly assembled and all parts are locked into place. Check if the power cord is securely plugged into a working outlet.
- **Juicer stops during operation:** The intelligent protection chip may have activated after 20 minutes of continuous use. Turn off the juicer, unplug it, and allow it to cool down for 15-20 minutes before resuming.
- **Clogging or slow juicing:** Use the 'REV' (Reverse) function to clear blockages. Ensure produce is cut into smaller pieces and fed slowly. Avoid overfilling the feeding chute.
- **Excessive foam:** While masticating juicers produce less foam than centrifugal juicers, some foam is normal. Ensure produce is fresh and not overripe.

7. Specifications

- **Brand:** olayks.
- **Model Name:** OLK-JS2202-FBM
- **Color:** Black
- **Special Feature:** Easy to Clean
- **Product Dimensions:** 4.72"D x 11.03"W x 13.39"H
- **Finish Type:** Brushed
- **Product Care Instructions:** Dishwasher Safe (detachable parts)

- **Maximum Power:** 150 Watts
- **Power Source:** AC
- **Blade Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Voltage:** 119.99 Volts
- **Number of Speeds:** 2 (Soft & Hard)
- **Item Weight:** 7.41 pounds
- **ASIN:** B0FC9NB4XL

8. Warranty and Support

Your olayks. Juicer comes with Lifelong Technical Support & 24 Hours PREMIUM SERVICE. If you encounter any issues with your slow juicer, please contact us first, and we will provide a satisfactory solution as soon as possible.

For customer support, please refer to the contact information provided in your purchase documentation or visit the official olayks. website.