

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KEMEI](#) /

› [KEMEI KM-2272 Professional Hair Clippers Instruction Manual](#)

KEMEI KM-2272

KEMEI KM-2272 Professional Hair Clippers

INSTRUCTION MANUAL

[Overview](#) [Setup](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

Introduction

Thank you for choosing the KEMEI KM-2272 Professional Hair Clippers. This manual provides essential information for the safe and effective use of your new hair clipper. Please read it thoroughly before first use and retain it for future reference.

Important Safety Information

- Read all instructions before using this appliance.
- Keep the appliance away from water. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance immediately after use and before cleaning.
- Do not use the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- Keep the cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual.

Package Contents

Verify that all items are present in your package:

- KEMEI KM-2272 Hair Clipper
- 4 Guide Combs (3mm, 6mm, 10mm, 13mm)
- USB Type-C Charging Cable
- Cleaning Brush
- Lubricating Oil
- Instruction Manual



Image: KEMEI KM-2272 Hair Clipper with its included accessories, including guide combs, charging cable, cleaning brush, and oil.

Product Overview

The KEMEI KM-2272 is a professional-grade cordless hair clipper designed for efficient and precise hair

and beard trimming. It features durable stainless steel blades, a powerful motor, and a smart LED display.

USB charging

Large battery for durability and easy charging



- Car charger
- Mobile power
- Computer
- Plug

3.5 Hours
Charging time

200Minutes
Working time

2000mAh
Battery percentage

Charging port

Image: Front view of the KEMEI KM-2272 Hair Clipper, highlighting the blade and adjustable lever.

Professional Hair Clipper

For you Hairdresser designed



- Sharp blade
- Digital Display
- USB charge
- Save time
- Limit combs
- Powerful motor

Image: Diagram illustrating the professional, sharp, and adjustable blade of the KEMEI KM-2272 clipper.



Image: Diagram highlighting the powerful motor operating at 6500 RPM within the KEMEI KM-2272 clipper.

Setup

Charging the Clipper

Before first use, fully charge the clipper for approximately 3.5 hours. The clipper features a USB Type-C charging port for convenience.

- Connect the USB Type-C cable to the charging port at the bottom of the clipper.
- Connect the other end of the USB cable to a compatible USB power source (e.g., computer, mobile power bank, car charger, wall adapter).
- The LED display will indicate the charging status and battery percentage.
- A full charge provides up to 200 minutes of usage time.

Digital Display

Intelligent display, always keep track of the status of the work in progress



Battery percentage



Oil Reminder



Charging Reminder



Image: KEMEI KM-2272 Hair Clipper with the USB-C charging cable inserted into its port.



Image: Diagram illustrating the USB charging capabilities of the KEMEI KM-2272, showing charging time, working time, and battery capacity.

Attaching Guide Combs

The clipper comes with four guide combs (3mm, 6mm, 10mm, 13mm) to achieve desired hair lengths.

- Ensure the clipper is turned off before attaching or detaching guide combs.
- Align the guide comb with the clipper blade and push it firmly until it clicks into place.
- To remove, gently pull the comb away from the blade.



Image: KEMEI KM-2272 Hair Clipper displayed with its set of four limit combs, showing different lengths.

Operation

Turning On/Off

Locate the power switch on the side of the clipper. Slide it up to turn the clipper ON and down to turn it OFF.

Adjusting Blade Length

The clipper features an adjustable lever on the side, allowing for fine-tuning of the cutting length without a guide comb. Move the lever up or down to adjust the blade position for closer or longer cuts.



Image: Diagram illustrating the adjustable cutter head mechanism on the KEMEI KM-2272 clipper.

Using the Guide Combs

For consistent hair lengths, attach the desired guide comb as described in the Setup section. Always start with a longer comb if you are unsure of the desired length.

LED Display

The smart LED display provides important information:

- **Battery Percentage:** Shows the remaining power.
- **Charging Reminder:** Indicates when the battery is low and needs charging.
- **Blade Lubrication Reminder:** Prompts you to oil the blades for optimal performance.

Limit Combs

Freedom to control the length easy and simple



3mm/0.12inch



6mm/0.24inch



10mm/0.39inch



13mm/0.51inch



Image: Close-up of the KEMEI KM-2272 Hair Clipper's LED display, showing battery percentage and indicators for oil and charging reminders.

Perfect Gift

for father, husband
boy-friend, friends
etc



Image: The KEMEI KM-2272 Hair Clipper being used for a haircut, demonstrating the application of guide combs for different lengths.

Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the KEMEI KM-2272 Hair Clipper in use, showcasing its features and performance.

Maintenance

Cleaning the Blades

Regular cleaning ensures optimal performance and hygiene.

- Turn off and unplug the clipper.
- Use the provided cleaning brush to remove any loose hairs from the blades.
- For a more thorough cleaning, you may carefully detach the blade assembly (refer to specific instructions if provided with your model for blade removal).

Lubricating the Blades

To maintain blade sharpness and smooth operation, lubricate the blades regularly, especially when the LED display shows an oil reminder.

- Apply a few drops of the provided lubricating oil onto the blades.
- Turn on the clipper for a few seconds to allow the oil to distribute evenly.
- Wipe off any excess oil with a soft cloth.

Storage

Store the clipper in a dry place, away from direct sunlight and out of reach of children.

Troubleshooting

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper runs slowly or pulls hair.	Blades are dirty or not lubricated.	Clean and lubricate the blades.
Clipper is not charging.	Charging cable or adapter is faulty.	Check the cable and adapter. Try a different USB power source.
Unusual noise during operation.	Blades may be misaligned or require lubrication.	Turn off the clipper, check blade alignment, clean, and lubricate. If problem persists, contact support.

Specifications

- **Model Number:** KEMEI-2272

- **Power Source:** Battery Powered
- **Battery Type:** 1 A battery (included)
- **Battery Capacity:** 2000 mAh (approximate)
- **Charging Time:** Approximately 3.5 hours
- **Usage Time:** Up to 200 minutes
- **Blade Material:** 440C Stainless Steel
- **Motor Speed:** 6500 RPM (approximate)
- **Item Weight:** 630 Grams (1.39 Pounds)
- **Package Dimensions:** 8.9 x 4.61 x 3.03 inches
- **Color:** Black Purple

4.5cm/1.77inch



17.1cm/6.73inch

Image: Diagram showing the physical dimensions of the KEMEI KM-2272 Hair Clipper.

Warranty & Support

KEMEI products are manufactured with high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official KEMEI website. Our professional support team is available to assist you with any issues or questions.