

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gotrax](#) /

› [Gotrax WG1 Electric Wiggle Car Instruction Manual](#)

Gotrax WG1

Gotrax WG1 Electric Wiggle Car Instruction Manual

Model: WG1 | Brand: Gotrax

INTRODUCTION

Thank you for choosing the Gotrax WG1 Electric Wiggle Car. This manual provides essential information for the safe assembly, operation, and maintenance of your new ride-on toy. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- **Age Recommendation:** Suitable for ages 36 months and up.
- **Adult Supervision:** To reduce the risk of injury, adult supervision is required at all times during operation.
- **Operating Environment:** Do not use on public roads, near motor vehicles, on steep slopes or steps, or in proximity to swimming pools or other bodies of water. Use on flat, dry surfaces.
- **Weight Limit:** The maximum weight capacity is 132 lbs.
- **Protective Gear:** Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.

WHAT'S IN THE BOX

Please ensure all components are present before beginning assembly:

- Electric Wiggle Car (main body)
- Charger
- User Manual

SETUP AND ASSEMBLY

The Gotrax WG1 Electric Wiggle Car is designed for easy assembly, typically taking around 5 minutes. Follow these steps:

1. **Attach the Handlebar:** Secure the handlebar to the front of the car using the provided screws.
2. **Install the Rear Wheel Set:** Fix the rear wheel set to the base of the car with the appropriate screws.

3. **Connect the Wires:** Plug the wheel's motor wire into the motor adapter cable. Ensure a secure connection.

Your Electric Wiggle Car is now ready for use after initial charging.

2 Wheels Flashing LED Lights

With rear flash wheels, add fun to the ride.

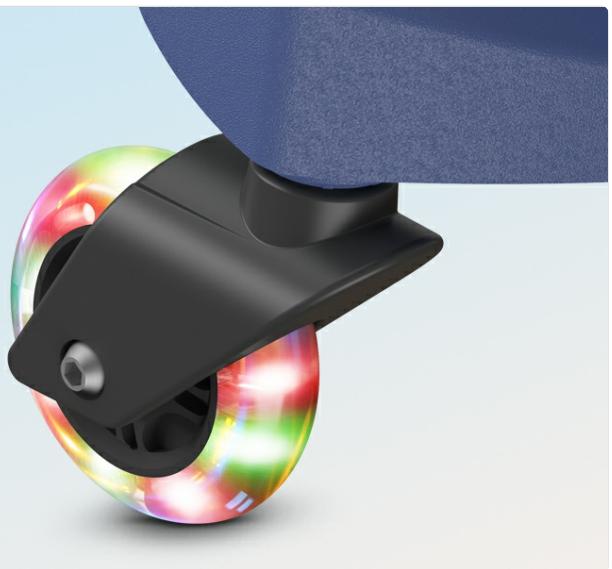


Image: Diagram illustrating the correct and incorrect ways to connect the motor adapter cable. The correct connection shows the front wheel motor wire fully inserted into the horizontal line position, ensuring normal acceleration. The incorrect connection shows the wire not seated in the horizontal line position, which would prevent acceleration.

OPERATING INSTRUCTIONS

The Gotrax WG1 offers an engaging riding experience with intuitive controls:

- **Power On/Off:** Use the main power switch to turn the car on or off.
- **Acceleration:** Press the pedal throttle to accelerate. The car has a maximum speed of 2.5 mph.
- **Steering:** The 360° swivel wheels and handlebar allow for sharp turns and drifts.
- **Music Speaker:** The built-in music speaker offers 2 modes and allows for volume adjustment and song selection.
- **Light-Up Rear Wheels:** The colorful LED lights on the rear wheels activate during operation, enhancing visibility and fun.
- **Battery Display:** Monitor the battery level via the integrated display to know when recharging is needed.



Image: A detailed view of the control panel on the Gotrax WG1 Electric Wiggle Car. It highlights buttons for turning the headlight on/off, adjusting volume, pausing music, skipping tracks, and switching between different modes. A battery indicator is also visible.



Image: Two children are shown happily riding their Gotrax WG1 Electric Wiggle Cars outdoors. Music notes are graphically overlaid, emphasizing the built-in music speaker feature for enhanced riding excitement.



Image: A close-up shot of the rear wheels of the Gotrax WG1 Electric Wiggle Car, showcasing the colorful flashing LED lights that add fun and improve visibility during rides.

Official Product Video: Funzooka 12V Electric Wiggle Car

Video Description: This video provides a general overview of a 12V electric wiggle car, demonstrating its features and how it operates. While not specific to the Gotrax WG1, it illustrates the typical functionality and enjoyment of such a product.

MAINTENANCE

- **Battery Charging:** The 12V lead-acid rechargeable battery provides up to 120 minutes of continuous ride time under a 110 lbs load. Recharge the battery fully after each use.
- **Battery Swaps:** The quick-replace design allows for easy battery swaps if needed.
- **Cleaning:** Wipe the car body with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the car in a dry, cool place away from direct sunlight and moisture.

TROUBLESHOOTING

- **Car Not Moving:** Check all wire connections, especially the motor adapter cable, to ensure they are securely

plugged in. Verify the battery is charged.

- **Lights Not Working:** Ensure the car is powered on and the light feature is activated via the control panel.
- **Music Not Playing:** Check volume settings and ensure the music feature is activated.

If issues persist, please contact Gotrax customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	30.7 x 13.38 x 8.46 inches
Item Weight	14.33 pounds
Item Model Number	WG1
Manufacturer Recommended Age	3 years and up
Battery Type	1 x 12V battery (included)
Max Speed	2.5 mph
Max Load	132 lbs

WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your Gotrax WG1 Electric Wiggle Car, please refer to the official Gotrax website or contact their customer service directly. Contact details are typically found on the product packaging or the brand's official online channels.