

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Polibi](#) /

› [Polibi 71.2" Rustic Display Cabinet with Glass Doors - Instruction Manual](#)

## Polibi B0FCC8X5F3

# Polibi 71.2" Rustic Display Cabinet with Glass Doors - Instruction Manual

Model: B0FCC8X5F3

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Polibi 71.2" Rustic Display Cabinet with Glass Doors. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

- **Read all instructions:** Ensure you understand all steps before assembly.
- **Two-person assembly:** Assembly is recommended with two adults to prevent injury and damage.
- **Glass handling:** Handle glass doors and shelves with extreme care. Tempered glass is designed to shatter into small, less harmful pieces if broken, but sharp edges can still occur.
- **Anti-tip kit:** Always secure the cabinet to a wall using the provided anti-tip hardware to prevent tipping, especially in households with children or pets.
- **Weight limits:** Do not exceed the recommended weight capacity for shelves. Distribute weight evenly.
- **Placement:** Place the cabinet on a flat, level, and stable surface.
- **Ventilation:** Ensure adequate ventilation around the cabinet if storing electronics.

## 3. PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present. If any items are missing or damaged, contact Polibi customer support.

### 3.1 Components:

- Side Panels (2)
- Top Panel (1)
- Bottom Panel (1)
- Back Panels (multiple sections)
- Fixed Shelves (2)
- Adjustable Shelves (2)
- Glass Doors (2)
- Door Handles (2)

### 3.2 Hardware:

- Cam Locks and Cam Bolts
- Wood Dowels
- Screws (various sizes)
- Shelf Pins
- Door Hinges
- Anti-tip Kit (wall anchor, strap, screws)
- Allen Wrench (if required)

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully. Lay out all parts on a soft, clean surface to prevent scratches.

### Step 1: Attach Cam Bolts and Dowels to Panels

Insert cam bolts and wood dowels into the pre-drilled holes of the side, top, and bottom panels as indicated in the assembly diagram. Ensure they are fully seated.

### Step 2: Assemble Base Frame

Connect the bottom panel to the side panels using cam locks. Tighten cam locks securely with a screwdriver. Ensure the structure is stable.

### Step 3: Install Fixed Shelves

Slide the fixed shelves into their designated grooves or attach them using cam locks and dowels. These shelves provide structural integrity.

### Step 4: Attach Top Panel

Secure the top panel to the side panels using cam locks and dowels, similar to the base frame assembly.

### Step 5: Install Back Panels

Carefully align and attach the back panels to the rear of the cabinet using small screws or nails. Ensure the cabinet is square before securing the back panels to prevent warping.

# Product Dimension:

33" w x 15.75" d x 71.2" h



*Image: The Polibi display cabinet with both glass doors open, revealing four internal shelves. This view illustrates the internal structure and shelf placement.*

## Step 6: Attach Door Hinges to Doors

Mount the hinges to the glass doors using the provided screws. Ensure hinges are oriented correctly for proper door swing.

## Step 7: Attach Doors to Cabinet

With assistance, carefully attach the doors to the cabinet frame by securing the hinges to the pre-drilled holes on

the side panels. Adjust hinges as needed to ensure doors are level and close properly.

### Step 8: Install Door Handles

Attach the door handles to the glass doors using the provided screws. Ensure they are tightened securely but do not overtighten, which could damage the glass or frame.



*Image: A close-up view of the black metal handles on the wooden-framed glass doors of the Polibi display cabinet. This shows the design and attachment point of the handles.*

### Step 9: Install Adjustable Shelves

Insert shelf pins into the desired holes on the side panels. Place the adjustable shelves onto the pins. Ensure all four pins are fully inserted and the shelf is level before placing items on it.

### Step 10: Secure Cabinet with Anti-Tip Kit

Position the cabinet in its final location. Attach the anti-tip strap to the top rear of the cabinet and secure the other end to a wall stud using the provided wall anchor and screw. This step is crucial for safety.

## 5. OPERATING INSTRUCTIONS

### 5.1 Opening and Closing Doors:

Gently pull or push the door handles to open and close the glass doors. Avoid slamming the doors to prevent damage to hinges and glass.

### 5.2 Adjusting Shelves:

To adjust the height of the adjustable shelves, first remove all items from the shelf. Carefully lift the shelf and remove the four shelf pins. Reinsert the pins into the desired new holes, ensuring they are level, then place the shelf back onto the pins.

## 6. MAINTENANCE

### 6.1 Cleaning the Cabinet:

- Wood Surfaces:** Wipe with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish. Dry immediately with a clean cloth.
- Glass Doors:** Use a standard glass cleaner and a lint-free cloth. Spray cleaner onto the cloth, not directly onto the glass, to prevent overspray from damaging wood finishes.

### 6.2 General Care:

- Periodically check all screws and cam locks to ensure they remain tight. Retighten if necessary.
- Avoid exposing the cabinet to direct sunlight or extreme temperature changes, which can cause warping or fading.
- Do not place hot items directly on the cabinet surface without protection.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose hardware; uneven floor; back panels not fully secured.	Ensure all cam locks and screws are tightened. Place shims under the base if the floor is uneven. Verify back panels are securely fastened.
Doors do not close properly or are misaligned.	Hinges are not adjusted correctly; cabinet is not square.	Adjust the screws on the door hinges to align the doors. Ensure the cabinet is square during assembly, especially when attaching back panels.
Shelves are not level.	Shelf pins not fully inserted; pins inserted into different height holes.	Ensure all four shelf pins are fully inserted into the same level of holes.

## 8. SPECIFICATIONS

**Brand:** Polibi

**Model:** B0FCC8X5F3

**Product Dimensions:** 33"W x 15.75"D x 71.2"H

**Material:** Engineered Wood, Bamboo, Tempered Glass

**Color:** White+Brown

**Number of Shelves:** 4 (2 fixed, 2 adjustable)

**Assembly Required:** Yes

**Mounting Type:** Freestanding (wall anchor recommended)

*Image: A diagram illustrating the dimensions of the Polibi display cabinet. It shows the overall width (33"), depth (15.75"), and height (71.2"), along with internal shelf depths and door frame width.*

## 9. WARRANTY AND SUPPORT

Polibi products are manufactured with quality and care. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Polibi website. If you encounter any issues or require assistance with assembly or parts, please contact Polibi customer support through the retailer where the product was purchased or via the contact information provided on the Polibi website.

For additional resources and product information, visit: [Polibi Official Store](#)