

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Severin](#) /

› [Severin Black Line Dual Hot Air Fryer FR 2463 Instruction Manual](#)

## Severin FR 2463

# Severin Black Line Dual Hot Air Fryer FR 2463 Instruction Manual

*Model: FR 2463*

## 1. GENERAL SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Pass them on to any subsequent user.

- This appliance is intended for domestic use only.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always supervise the appliance when in use.
- Keep the appliance and its cord out of reach of children.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Allow adequate space (at least 10 cm) around the appliance for proper ventilation.
- Do not cover the air inlet or outlet vents during operation.
- The surfaces may become hot during use. Use oven mitts when handling hot components.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not use abrasive cleaning agents or harsh chemicals on the appliance.

## 2. PRODUCT OVERVIEW

The Severin Black Line Dual Hot Air Fryer FR 2463 features two independent cooking zones, allowing for versatile meal preparation. Familiarize yourself with the main components:

- **Main Unit:** Houses the heating elements and control panel.
- **Control Panel:** Digital display with touch controls for temperature, time, and cooking programs.
- **Cooking Baskets (x2):** Removable 4-liter capacity baskets for food.
- **Crisper Plates:** Inserted into the cooking baskets for optimal air circulation.

- **Handles:** For safely pulling out and inserting the cooking baskets.



*Image 2.1: Front view of the Severin Dual Hot Air Fryer with its illuminated digital control panel. The display shows temperature and time settings for both cooking baskets.*



*Image 2.2: Angled view of the air fryer, highlighting the sleek design and the active digital display.*



*Image 2.3: The air fryer with both 4-liter cooking baskets fully extended, revealing the crisper plates inside.*

### **3. SETUP AND FIRST USE**

#### **3.1 Unpacking**

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Retain the packaging for future storage or disposal.

#### **3.2 Placement**

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is at least 10 cm of free space around the appliance for adequate air circulation. Do not place it directly against a wall or under cabinets.
- Keep the appliance away from heat sources and flammable materials.

### 3.3 Initial Cleaning

1. Before first use, clean the cooking baskets and crisper plates with warm soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

### 3.4 First Operation (Burn-in)

It is recommended to run the air fryer empty for about 10-15 minutes on a high temperature (e.g., 180°C) during its first use. This helps to burn off any manufacturing residues and odors. Ensure good ventilation during this process.

---

## 4. OPERATION

### 4.1 Basic Cooking Steps

1. **Prepare Food:** Place your ingredients into one or both cooking baskets. Do not overfill.
2. **Insert Baskets:** Slide the cooking baskets firmly into the main unit.
3. **Power On:** Plug the appliance into a suitable power outlet. The display will illuminate.
4. **Select Basket:** If using only one basket, select it on the control panel (e.g., "1" or "2").
5. **Set Temperature & Time:** Use the temperature and time controls (usually '+' and '-' buttons) to adjust settings. The maximum temperature is 200°C.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
7. **Shake/Flip (Optional):** For even cooking, some foods may require shaking or flipping halfway through. Carefully pull out the basket, shake, and reinsert. The cooking will resume automatically.
8. **Finish:** The appliance will beep when cooking is complete. Carefully remove the baskets and transfer food.



Image 4.1: User interacting with the touch control panel to set cooking parameters.



Image 4.2: Both cooking baskets are pulled out, demonstrating simultaneous cooking of different food items like french fries and chicken wings.

## 4.2 Special Functions

- **Sync Cook:** This function allows you to duplicate the cooking settings (temperature and time) from one basket to the other. Ideal for cooking larger quantities of the same food.
  - a. Set desired temperature and time for Basket 1.
  - b. Press the "Sync Cook" button. The settings will be copied to Basket 2.
  - c. Press Start to begin cooking both baskets with identical settings.
- **Sync Finish:** This function ensures that both cooking baskets complete their cooking cycles at the same time, even if they have different temperature and time settings. This is useful for preparing different dishes that need to be served together.
  - a. Set desired temperature and time for Basket 1.
  - b. Set desired temperature and time for Basket 2.
  - c. Press the "Sync Finish" button. The appliance will automatically adjust the start times to ensure simultaneous completion.
  - d. Press Start to begin cooking.
- **Automatic Programs:** The appliance features 10 pre-set automatic programs for common dishes.

Refer to the control panel for specific program icons and their default settings. Select a program by pressing the "Menu" button and then the Start button.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### 5.1 Before Cleaning

- Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.

### 5.2 Cleaning the Cooking Baskets and Crisper Plates

- The removable cooking baskets and crisper plates feature a PTFE-free non-stick coating and are dishwasher-safe.
- Alternatively, wash them by hand with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reassembling.
- Do not use metal utensils or abrasive cleaning materials, as these can damage the non-stick coating.

### 5.3 Cleaning the Main Unit

- Wipe the exterior of the main unit with a damp cloth. For stubborn stains, use a mild detergent.
- Do not immerse the main unit in water or any other liquid.
- Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residues from the heating element, ensuring the appliance is unplugged and cool.

### 5.4 Storage

- Ensure the appliance is clean and dry before storing.
- Store the air fryer in a cool, dry place, away from direct sunlight and moisture.

## 6. TROUBLESHOOTING

If you encounter issues with your air fryer, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Check if the power cord is securely plugged in. Test the outlet with another appliance. If still not working, contact customer support.
Food is not cooked evenly.	Baskets overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload baskets. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the baskets and crisper plates thoroughly after each use. For fatty foods, ensure crisper plate is in place to allow fat to drip below.

Problem	Possible Cause	Solution
Appliance emits unusual odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The odor should dissipate after a few uses.

## 7. TECHNICAL SPECIFICATIONS

**Model:** FR 2463

**Brand:** Severin

**Color:** Black

**Capacity:** 8 Liters (2 x 4L cooking chambers)

**Material:** Stainless Steel (housing), Non-stick coating (baskets)

**Output Wattage:** 2600 Watts

**Voltage:** 230 Volts

**Item Weight:** 7 Kilograms (15.4 pounds)

**Max Temperature Setting:** 200°C

**Product Dimensions (D x W x H):** 148.03" x 155.51" x 117.32" (Note: These dimensions appear unusually large and may be subject to unit conversion interpretation. Please refer to product packaging for exact measurements.)

**Non-stick Coating:** Yes (PTFE-free)

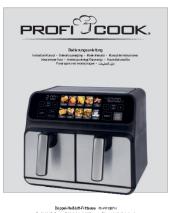
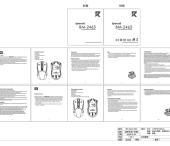
**Dishwasher Safe Parts:** Removable cooking baskets and crisper plates. Main unit is NOT dishwasher safe.

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Severin website. If you have any questions, require technical assistance, or need to report a fault, please contact Severin customer support.

### Severin Customer Support:

- Refer to your product packaging or the official Severin website for contact details specific to your region.

	<p><a href="#"><b>Profi Cook PC-FR 1242 H Double Hot Air Fryer: User Manual &amp; Operation Guide</b></a></p> <p>Explore the Profi Cook PC-FR 1242 H Double Hot Air Fryer with this comprehensive user manual. Learn about its dual-basket functionality, automatic programs, safe operation, cleaning, and troubleshooting tips for efficient cooking.</p>
	<p><a href="#"><b>Profi Cook PC-FR 1287 H Bedienungsanleitung</b></a></p> <p>Umfassende Bedienungsanleitung für die Profi Cook PC-FR 1287 H Doppel-Heißluft-Fritteuse. Enthält detaillierte Anweisungen zur sicheren Verwendung, Bedienung, Reinigung und Fehlerbehebung in mehreren Sprachen.</p>
	<p><a href="#"><b>Redragon BM-2463 2.4G Wireless Mouse: Operating Instructions and Features</b></a></p> <p>Official operating instructions, features, connection guide, and troubleshooting for the Redragon BM-2463 2.4G Wireless Mouse. Includes warranty information, safety guidelines, and FCC compliance.</p>
	<p><a href="#"><b>SEVERIN PG 8575 Quickstart Guide</b></a></p> <p>A concise guide to setting up and operating the SEVERIN PG 8575 air fryer oven, covering unboxing, cleaning, basic functions, and pizza baking.</p>
	<p><a href="#"><b>Tristar FR-6956 Air Fryer: User Manual and Operating Instructions</b></a></p> <p>Comprehensive user manual for the Tristar FR-6956 Air Fryer, covering safety precautions, parts description, usage instructions, cooking guide, cleaning, and maintenance.</p>
	<p><a href="#"><b>Tristar FR-6956 Air Fryer Instruction Manual</b></a></p> <p>Comprehensive user guide for the Tristar FR-6956 Air Fryer, covering safety instructions, parts description, usage, cooking settings, cleaning, and maintenance.</p>

Documents - Severin – FR 2463



## [Severin Neuheiten 2. HJ 2025: Haushaltsgeräte für Wohlbefinden, Reinigung und Küche](#)

Entdecken Sie die neuesten Innovationen von Severin für die zweite Jahreshälfte 2025. Von Beauty- und Haarpflegeprodukten über leistungsstarke Haushaltsreiniger bis hin zu modernen Küchengeräten – Severin bietet Qualität und Komfort für Ihr Zuhause.

lang:de **score:15** filesize: 16.9 M page\_count: 68 document date: 2025-09-04

## [\[pdf\]](#)

Direttiva sulla progettazione ecocompatibile Ali di pollo croccanti e patatine fritte dalla friggitrice ad aria  
SEVERIN Official EcoDesign Richtlinie 05 2025 severin |||

ERP Ecodesign Requirements 2023/826 Category Haushalt / Beauty Haushalt /  
Beauty Haushalt / Beauty Haushalt / Beauty Haushalt / Beauty Haushalt / Beauty  
Haushalt / Beauty Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen  
Microwave Toasting oven Microwave Toasting oven Microwave ...

lang:de **score:10** filesize: 162.11 K page\_count: 7 document date: 2025-05-08