

[Manuals.plus](#) /

› [Poedagar](#) /

› Poedagar E106 Men's Rectangle LED Display Watch User Manual

Poedagar E106

Poedagar E106 Men's Rectangle LED Display Watch User Manual

Model: E106 (936)

1. PRODUCT OVERVIEW

The Poedagar E106 is a versatile men's watch featuring a unique rectangular design, a dual display combining analog-style quartz movement with digital LED functions, and a comfortable silicone strap. It is designed for everyday use, offering both style and practical features like water resistance, date, and week display.



Image: The Poedagar E106 watch, showcasing its rectangular case, dual display, and green silicone strap.

Key Features:

- **Dual Display:** Combines traditional quartz analog time with a digital LED display for time, date, and week.
- **Waterproof Design:** Rated for 30 meters (3 ATM) water resistance, suitable for splashes, hand washing, and rain.
- **Comfortable Silicone Strap:** Lightweight, flexible, and sweat-resistant for extended wear.
- **Luminous Effect:** Fluorescent paint on pointers and an LED backlight for visibility in low light conditions.
- **Durable Construction:** Features a Hardlex dial window material.

2. INITIAL SETUP

2.1 Unboxing

Your Poedagar E106 watch package includes: the watch itself, a gift box, and a cleaning cloth. Please inspect all items upon receipt.

2.2 Setting Analog Time

To set the analog hands (hour and minute):

1. Locate the crown (middle wheel) on the right side of the watch case.
2. Gently pull the crown slightly outward to the first or second click position (depending on the model, one click usually adjusts date/day, the outermost click adjusts time).
3. Rotate the crown to move the hour and minute hands to the desired time.
4. Once the time is set, push the crown back in completely to secure the setting and start the watch movement.

2.3 Setting Digital Time, Date, and Week

The digital display offers time, date, and week functions. To set these:

1. Press and hold the 'Light' button (typically located on the top left or bottom left) for a few seconds until the digital display starts flashing, indicating it is in setting mode.
2. Use the 'Mode' or 'Adjust' button (typically on the top right) to cycle through the settings (hours, minutes, date, week, etc.).
3. Use the 'Start' or 'Reset' button (typically on the bottom right) to increase or decrease the flashing value.
4. Once all settings are correct, press the 'Light' button again to exit the setting mode.

3. OPERATING INSTRUCTIONS

3.1 Reading Dual Time

The Poedagar E106 features both analog hands and a digital LED display. The analog hands provide a traditional time display, while the digital display offers precise time, date, and day of the week at a glance. Ensure both are synchronized during setup for consistent timekeeping.

3.2 Using Alarm, Stopwatch, and Signal Functions

Your watch includes additional digital functions such as an alarm, stopwatch, and hourly signal. To access and operate these features:

- Press the 'Mode' button (usually top right) repeatedly to cycle through the different digital modes (Time, Alarm, Stopwatch, etc.).
- Once in the desired mode (e.g., Stopwatch), use the 'Start' or 'Reset' button (usually bottom right) to activate or reset the function.
- For the Alarm, enter the alarm setting mode (usually by holding 'Mode' or 'Light' in alarm display) and use the 'Start' button to adjust the alarm time.

3.3 Water Resistance

The Poedagar E106 watch is rated for 3 ATM (30 meters) water resistance. This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water, such as during hand washing or car washing. It is **not** recommended for swimming, diving, or showering with hot water, as steam and prolonged water exposure can compromise the seals.



Image: The watch demonstrating its 3ATM water resistance against splashes from rain, hand washing, and car washing.

3.4 Luminous Display

The watch features a strong luminous effect. The fluorescent paint layer on the analog pointers, combined with the LED backlight for the digital display, ensures that the time is easily visible in dark environments. To activate the LED backlight, press the 'Light' button.

-WATERPROOF- 3ATM Deep Waterproof

Nano-level sealed water release, precise waterproof performance, innovation and enhancement of anti-fog.



Image: The watch's display illuminated in the dark, highlighting its luminous hands and LED digital display.

4. CARE AND MAINTENANCE

4.1 Cleaning

Regularly clean your watch to maintain its appearance. Use the provided cleaning cloth to gently wipe the case, crystal, and strap. For stubborn dirt, a slightly damp, soft cloth can be used, followed by drying with a clean, dry cloth. Avoid harsh chemicals or abrasive materials.

4.2 Battery Care

The Poedagar E106 is battery-powered. While designed for long-lasting performance, if the watch stops or the display dims significantly, it may require a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.

4.3 Water Resistance Precautions

To preserve the water resistance of your watch:

- Ensure the crown is fully pushed in at all times, especially after adjusting the time.
- Avoid operating buttons while the watch is wet or submerged.
- Do not expose the watch to extreme temperature changes, such as moving from a hot shower to a cold environment, as this can affect seals.
- Have the water resistance seals checked periodically by a professional, especially after battery changes.

5. TROUBLESHOOTING

If you encounter issues with your Poedagar E106 watch, please refer to the following common problems and solutions:

Issue	Possible Cause	Solution
Analog hands not moving or incorrect time.	Crown not pushed in, low battery, or internal malfunction.	Ensure crown is fully pushed in. If not, try setting the time again. If issue persists, battery replacement or professional inspection may be needed.
Digital display is blank or dim.	Low battery or display setting.	Press the 'Light' button to check if it illuminates. If still dim or blank, the battery may need replacement.
Digital time/date is incorrect.	Incorrect setting during initial setup.	Refer to Section 2.3 "Setting Digital Time, Date, and Week" and re-adjust the settings.
Buttons are unresponsive.	Watch is wet, or internal issue.	Ensure the watch is dry before operating buttons. If the issue persists, seek professional assistance.
Moisture or condensation inside the watch.	Water resistance compromised.	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

6. PRODUCT SPECIFICATIONS

-LUMINOUS EFFECT- Strong Luminous

The fluorescent paint layer of the pointer plus
the luminous lamp of the LED display
screen makes it easy to see the time at night



Image: A visual summary of key features including water resistance, dial material, luminous effect, and strap type.

Feature	Detail
Model Name	E106
Item Model Number	936
Display Type	Analog-Digital
Movement Type	Quartz
Power Source Type	Battery Powered
Strap Type	Silicone Strap
Water Resistance Depth	30 Metres (3 ATM)

Feature	Detail
Water Resistance Level	Waterproof (Splash, Rain, Hand Washing, Car Washing)
Clasp Type	Tang Buckle
Case Shape	Rectangular
Crystal Material	Mineral Glass (Hardlex Dial Window)
Case Diameter	47 mm
Case Thickness	15 mm
Band Width	25 mm
Item Weight	200 g
Product Dimensions (LxWxH)	24 x 4.7 x 1.5 cm
Manufacturer	Poedagar
Country of Origin	India

7. WARRANTY INFORMATION

This Poedagar E106 watch comes with a manufacturer's warranty. For specific details regarding the warranty period, coverage, and claims process, please refer to the warranty card included with your purchase or contact the seller directly.

8. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact the packer/seller:

Vasmyst

11/268 Civil Lines

Kanpur - 208001

Uttar Pradesh, India

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question