

[Manuals.plus](#) /

› [Poedagar](#) /

› Poedagar E106 Men's Rectangle LED Display Watch User Manual

Poedagar 936

Poedagar E106 Men's Rectangle LED Display Watch User Manual

Model: 936

1. INTRODUCTION

Thank you for choosing the Poedagar E106 Men's Rectangle LED Display Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Front view of the Poedagar E106 watch, showcasing its rectangular blue dial, silver-tone case, and blue silicone strap, resting on a textured dark surface.

2. PRODUCT FEATURES

- **Modern Rectangle LED Display:** Sleek rectangular dial with a digital LED screen for time, date, and day.
- **Waterproof (3ATM):** Designed for daily wear, resistant to splashes, rain, and brief immersion. Not suitable for swimming or diving.
- **Comfortable Silicone Strap:** Lightweight, breathable, and durable for extended wear.
- **Quartz Accuracy with Dual Display:** Combines traditional quartz precision for analog hands with digital LED functionality.
- **Long Battery Life:** Equipped with a durable battery for reliable, long-term use.
- **Strong Luminous Effect:** Fluorescent paint on pointers and an illuminated LED display for visibility in low light conditions.
- **Hardlex Dial Window Material:** Provides enhanced scratch resistance.



A composite image highlighting key features of the Poedagar E106 watch: 3ATM Deep Waterproof, Hardlex Dial Window Material, Strong Luminous display, and Comfortable Silicone Strap.

3. PACKAGE CONTENTS

Upon opening your package, please ensure all the following items are present:

- 1 x Poedagar E106 Men's Watch
- 1 x Watch Wipe

4. WATCH COMPONENTS

Familiarize yourself with the main components and controls of your Poedagar E106 watch:

- **Analog Display:** Traditional hour and minute hands.
- **Digital LED Display:** Shows digital time, date, and day.
- **Crown (Middle Right):** Used for setting the analog time.

- **Button A (Top Left):** Typically used for activating the backlight or cycling through display modes.
- **Button B (Top Right):** Used for adjusting settings in digital mode or starting/stopping functions.
- **Button C (Bottom Left):** Typically used for changing modes (Time, Alarm, Stopwatch).
- **Button D (Bottom Right):** Used for resetting functions or confirming selections.

5. SETUP INSTRUCTIONS

5.1. Setting Analog Time

1. Gently pull the Crown (middle right button) slightly outwards until you feel a click.
2. Rotate the Crown in either direction to move the hour and minute hands to the desired time.
3. Once the analog time is set, push the Crown back in to secure the setting and start the analog movement.

5.2. Setting Digital Time, Date, and Day

1. In normal time display mode, press and hold **Button A (Top Left)** for a few seconds until the digital display starts flashing, indicating it is in setting mode.
2. Press **Button C (Bottom Left)** repeatedly to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day. The currently selected item will flash.
3. Use **Button B (Top Right)** to increase the value of the flashing item. Use **Button D (Bottom Right)** to decrease the value (if applicable) or to reset seconds to zero.
4. Once all settings are adjusted, press **Button A (Top Left)** again to exit the setting mode.

6. OPERATING INSTRUCTIONS

6.1. Switching Display Modes

Press **Button C (Bottom Left)** to cycle through the different digital display modes: Normal Time Display → Alarm Setting Mode → Stopwatch Mode.

6.2. Using the Alarm Function

1. Press **Button C (Bottom Left)** until you reach the Alarm Setting Mode (indicated by 'AL' or a bell icon).
2. Press and hold **Button A (Top Left)** until the alarm hour starts flashing.
3. Use **Button B (Top Right)** to set the desired alarm hour.
4. Press **Button C (Bottom Left)** to move to the alarm minute setting.
5. Use **Button B (Top Right)** to set the desired alarm minute.
6. Press **Button A (Top Left)** to exit alarm setting mode.
7. To turn the alarm ON/OFF, in Alarm Mode, press **Button B (Top Right)**. An alarm icon will appear/disappear.

6.3. Using the Stopwatch Function

1. Press **Button C (Bottom Left)** until you reach the Stopwatch Mode (indicated by 'ST' or '00:00:00').
2. Press **Button B (Top Right)** to start the stopwatch.
3. Press **Button B (Top Right)** again to pause the stopwatch.
4. Press **Button D (Bottom Right)** to reset the stopwatch to zero while it is paused.
5. To resume timing after a pause, press **Button B (Top Right)**.

6.4. Activating Luminous Display

Press **Button A (Top Left)** briefly to illuminate the digital LED display for a few seconds, enhancing visibility in dark environments. The analog hands feature fluorescent paint that glows after exposure to light.

-LUMINOUS EFFECT- Strong Luminous

The fluorescent paint layer of the pointer plus
the luminous lamp of the LED display
screen makes it easy to see the time at night



Close-up of the Poedagar E106 watch dial in darkness, demonstrating the strong luminous effect of the hands and the illuminated LED digital display.

6.5. Water Resistance Guidelines (3ATM)

Your Poedagar E106 watch is rated for 3ATM water resistance. This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water. It is **not** recommended for showering, swimming, diving, or any water sports where it might be exposed to high-pressure water or prolonged submersion. Do not operate buttons while the watch is wet.

-WATERPROOF- 3ATM Deep Waterproof

Nano-level sealed water release, precise waterproof performance, innovation and enhancement of anti-fog.



Image illustrating the 3ATM deep waterproof capability of the Poedagar E106 watch, showing it resistant to rain, hand washing, and car washing.

7. MAINTENANCE

7.1. Cleaning Your Watch

Wipe your watch regularly with the provided watch wipe or a soft, dry cloth to remove dust and smudges. For the silicone strap, a damp cloth with mild soap can be used, followed by thorough drying.

7.2. Battery Care

The watch is powered by a long-lasting battery. When the display becomes dim or the watch stops functioning, it indicates that the battery needs replacement. It is recommended to have the battery replaced by a professional watch technician to maintain water resistance and ensure proper handling.

7.3. General Care

- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.
- Keep the watch away from strong magnetic fields.

- Avoid harsh chemicals, solvents, or detergents that may damage the watch case or strap.

8. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Solution
Analog hands are not moving or are inaccurate.	Check if the Crown is pushed in completely. If it is, the battery may be low or depleted.
Digital display is blank or dim.	The battery may be low or depleted. Replace the battery.
Digital time is incorrect.	Refer to Section 5.2 "Setting Digital Time, Date, and Day" to reset the time.
Watch fogs up internally.	This may indicate a breach in water resistance. Avoid further water exposure and seek professional inspection.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	936
Product Dimensions	24 x 4.7 x 1.5 cm
Item Weight	200 g
Case Diameter	47 mm
Watch Movement Type	Quartz
Water Resistance Depth	3 ATM (30 meters)
Band Material Type	Silicone
Dial Window Material Type	Hardlex
Manufacturer	Poedagar
Country of Origin	India

10. WARRANTY INFORMATION

This Poedagar E106 watch comes with a manufacturer's warranty. Please refer to the warranty card or documentation included in your product packaging for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Poedagar E106 watch, please contact the seller or the manufacturer directly. Contact details can typically be found on the product packaging or the seller's official website.



© 2025 Poedagar. All rights reserved.