

## Fricparts Fricpart-153060

# Fricparts Fricpart-153060 Dishwasher Water Drain Pump Motor Instruction Manual

Model: Fricpart-153060 | Compatible with Whirlpool WDF540PADM2 Dishwashers

[Introduction](#) [Safety](#) [Contents](#) [Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

## 1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the Fricparts Fricpart-153060 Dishwasher Water Drain Pump Motor. This component is designed as a replacement part for specific dishwasher models, including the Whirlpool WDF540PADM2.

Before proceeding with any installation or repair, please read this manual thoroughly and ensure you understand all instructions and safety warnings. Proper installation is crucial for the correct function and longevity of the part.

**Important Compatibility Note:** Appliance parts can appear similar. Always verify that the model number of your appliance (Whirlpool WDF540PADM2) matches the compatibility information for this replacement part (Fricpart-153060) before installation.

## 2. SAFETY INFORMATION

**WARNING:** Disconnect power to the dishwasher before attempting any installation, maintenance, or repair. Failure to do so can result in electric shock, personal injury, or death.

- Always wear appropriate personal protective equipment (PPE), such as gloves and safety glasses, during installation.
- Ensure the work area is dry and well-lit.
- If you are unsure about any step or procedure, consult a qualified appliance repair technician.
- Keep children and pets away from the work area.
- Handle the pump motor carefully to avoid damage to the component or personal injury.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon receipt.

- 1 x Fricparts Fricpart-153060 Dishwasher Water Drain Pump Motor

## 4. SETUP AND INSTALLATION

This section provides general guidance for replacing a dishwasher drain pump motor. Specific steps may vary depending on your dishwasher model. Refer to your dishwasher's service manual for detailed instructions.

### 4.1 Tools Required (Typical)

- Screwdrivers (Phillips and Flathead)
- Pliers
- Towels or sponges for water absorption

- Bucket or shallow pan

## 4.2 Installation Steps

1. **Disconnect Power:** Unplug the dishwasher from the electrical outlet or turn off the circuit breaker supplying power to the dishwasher.
2. **Shut Off Water Supply:** Turn off the water supply valve to the dishwasher.
3. **Access the Drain Pump:** Depending on your dishwasher model, you may need to pull the dishwasher out from its cabinet, or access the pump from the front or bottom. This often involves removing the lower access panel.
4. **Drain Residual Water:** Place towels or a shallow pan under the pump area to catch any residual water.
5. **Disconnect Hoses and Wiring:** Carefully disconnect the drain hoses and electrical wiring connected to the old drain pump. Note their positions for reassembly.
6. **Remove Old Pump:** Unmount the old drain pump from its housing. This usually involves twisting or unlatching mechanisms.
7. **Install New Pump:** Position the Fricparts Fricpart-153060 drain pump motor into the housing. Ensure it is securely latched or mounted according to the dishwasher's design.
8. **Connect Hoses and Wiring:** Reconnect the drain hoses and electrical wiring to the new pump. Double-check all connections for security.
9. **Reassemble Dishwasher:** Reattach any panels or components that were removed to access the pump.
10. **Restore Power and Water:** Turn on the water supply and restore electrical power to the dishwasher.



Figure 1: Fricparts Fricpart-153060 Dishwasher Water Drain Pump Motor. This image displays the replacement drain pump motor, featuring a gray main body and a yellow impeller.

## 5. OPERATING INSTRUCTIONS

After successful installation of the Fricparts Fricpart-153060 drain pump motor, the dishwasher should resume normal operation. The drain pump functions automatically as part of the dishwasher's wash cycle to remove wastewater.

1. **Test Cycle:** Run a short wash cycle (e.g., Rinse Only) to verify that the dishwasher fills, washes, and drains properly.
2. **Check for Leaks:** During and after the test cycle, carefully inspect all connections around the drain pump for any

signs of water leaks.

3. **Listen for Abnormal Noises:** The new pump should operate smoothly. Listen for any unusual grinding, buzzing, or excessive noise, which could indicate an issue with installation or the pump itself.

If any issues are observed, refer to the Troubleshooting section or consult a qualified technician.

## 6. MAINTENANCE

The Fricparts Fricpart-153060 drain pump motor is designed for reliable operation and generally requires no specific maintenance beyond ensuring the dishwasher's drainage system remains clear.

- **Regular Cleaning:** Periodically clean the dishwasher's filter and drain area to prevent food particles or debris from accumulating and potentially obstructing the pump impeller.
- **Avoid Overloading:** Do not overload the dishwasher, as this can hinder proper drainage and put undue stress on the pump.
- **Proper Scrapping:** Scrape large food particles off dishes before loading them into the dishwasher to minimize debris entering the drain system.

## 7. TROUBLESHOOTING

If your dishwasher is not draining properly after installing the new pump, consider the following common issues:

Problem	Possible Cause	Solution
Dishwasher not draining	<ul style="list-style-type: none"><li>◦ Clogged drain hose</li><li>◦ Clogged air gap (if applicable)</li><li>◦ Debris in pump impeller</li><li>◦ Improper wiring connection</li></ul>	<ul style="list-style-type: none"><li>◦ Inspect and clear the drain hose.</li><li>◦ Clean the air gap.</li><li>◦ Disconnect power and check the pump impeller for obstructions.</li><li>◦ Verify electrical connections to the pump.</li></ul>
Loud noise during drain cycle	<ul style="list-style-type: none"><li>◦ Debris caught in impeller</li><li>◦ Pump not securely mounted</li></ul>	<ul style="list-style-type: none"><li>◦ Disconnect power and inspect impeller for foreign objects.</li><li>◦ Ensure the pump is correctly seated and latched in its housing.</li></ul>
Water leaking from pump area	<ul style="list-style-type: none"><li>◦ Loose hose connections</li><li>◦ Damaged pump seal (unlikely for new part)</li></ul>	<ul style="list-style-type: none"><li>◦ Tighten all hose clamps and connections.</li><li>◦ If leak persists, inspect the pump for manufacturing defects or damage during installation.</li></ul>

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance repair technician or the seller for further assistance.

## 8. SPECIFICATIONS

- **Part Model Number:** Fricpart-153060
- **Compatible Dishwasher Model:** Whirlpool WDF540PADM2
- **Manufacturer:** Fricparts
- **Part Type:** Dishwasher Water Drain Pump Motor

## 9. WARRANTY INFORMATION

This replacement part is typically covered by a limited manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the documentation provided with your purchase or contact the seller directly.

## 10. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding the Fricparts Fricpart-153060 Dishwasher Water Drain Pump Motor that are not addressed in this manual, please contact your seller or the manufacturer for assistance.

When contacting support, please have the following information ready:

- Product Model Number: Fricpart-153060
- Date of Purchase

- Description of the issue