

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Basike](#) /
- › [Basike Ba-CAM215 4K UHD 64MP Digital Camera Instruction Manual](#)

Basike Ba-CAM215

Basike Ba-CAM215 4K UHD 64MP Digital Camera User Manual

Model: Ba-CAM215 | Brand: Basike

1. INTRODUCTION

Thank you for choosing the Basike Ba-CAM215 4K UHD 64MP Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image 1.1: Front and back view of the Basike Ba-CAM215 Digital Camera, showcasing its compact design and dual screens.

2. PRODUCT FEATURES

- **High-Resolution Imaging:** Capture stunning 4K UHD videos and detailed 64MP photos with an advanced CMOS sensor.
- **Dual Screen Design:** Features a 2.8-inch rear display and a 1.4-inch front screen for easy selfies and vlogging.
- **18X Digital Zoom:** Magnify distant subjects with 18X digital zoom for clear, detailed shots.
- **Integrated Flash:** Automatic flash ensures well-lit photos in low-light conditions.
- **Creative Modes:** Explore time-lapse, self-timer, and various image effects.
- **Auto and Manual Focus:** Intelligent auto-focus for instant clarity, with manual focus option for greater control.
- **Portable and Durable:** Compact, lightweight, and resistant design, ideal for travel and daily use.

64 Megapixels

Capture momentos excepcionais!



Image 2.1: The camera highlights its 64 Megapixel capability for exceptional photo quality.

CMOS Professional

Processamento premium: detalhes realistas!

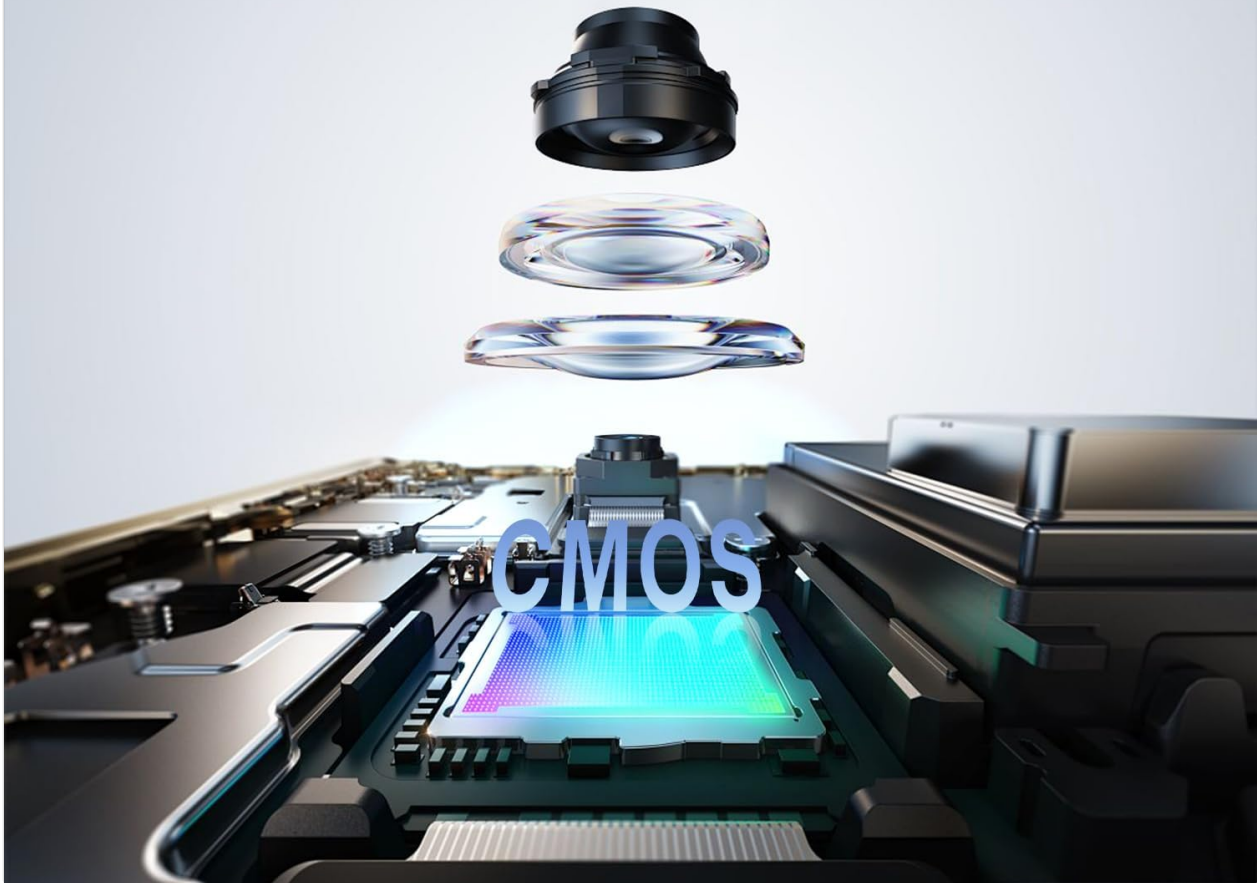


Image 2.2: Diagram illustrating the professional CMOS sensor for realistic detail processing.

3. SETUP

3.1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the provided Lithium-Ion battery, ensuring the correct polarity.
3. Close the battery compartment cover securely.

3.2. Memory Card Installation

The camera supports SD/TF cards from 8GB up to 128GB (not included).

1. Locate the memory card slot, usually next to the battery compartment.
2. Insert the memory card with the metal contacts facing the correct direction until it clicks into place.
3. To remove, press the card gently until it springs out.

3.3. Charging the Battery

The camera charges via USB-C and takes approximately 2 hours for a full charge.

1. Connect the USB-C cable to the camera's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer.
3. The charging indicator light will illuminate during charging and turn off when fully charged.



basike

Carregamento Rápido

Recarga ultrarrápida USB-C

1200mAh

Resistente para uso intenso!

Image 3.1: The camera connected to a USB-C cable for fast charging.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the Power button (usually marked with a circle and a line) to turn the camera on or off.

4.2. Basic Photography (Photo/Video Modes)

1. Turn on the camera.
2. Use the Mode button (often labeled 'M') to switch between photo and video modes.
3. In photo mode, press the Shutter button halfway to focus, then fully to capture a photo.
4. In video mode, press the Shutter button to start recording, and press it again to stop.

4.3. Zoom Function

The camera features 18X digital zoom.

1. While in photo or video mode, use the Zoom In/Out buttons (often marked 'W' for Wide and 'T' for Telephoto) to adjust the zoom level.



Image 4.1: Illustration of the 18x digital zoom capability, showing how to magnify subjects.

4.4. Flash Control

The camera has an integrated flash with an effective range of less than 1.5 meters.

1. In photo mode, press the Flash button (often marked with a lightning bolt icon) to cycle through flash modes (e.g., Auto, Fill-in, Red-eye Reduction, Off).

4.5. Dual Screen Function

Utilize both the front and rear screens for versatile shooting.

1. To activate the front screen for selfies or vlogging, press and hold the 'OK' button for 3 seconds.
2. The camera will automatically switch to the front display.

Display Duplo

Crie fotos e vídeos impecáveis com duas telas!



Image 4.2: The camera's dual display in action, facilitating perfect selfies and video recording.

4.6. Creative Modes and Focus

The camera offers various creative options and flexible focus control.

- **Self-Timer:** Set a delay of 3s, 5s, 10s, or 20s before a photo is taken. Access this through the menu settings.
- **Time-Lapse:** Capture a series of photos over time to create a time-lapse video. Refer to the on-screen menu for settings.
- **Auto-Focus:** The camera automatically focuses on the subject. Press the shutter button halfway to engage auto-focus.
- **Manual Focus:** For more precise control, press the shutter button halfway and adjust the focus manually if the camera supports this feature via menu options.

Temporizador (Off/3s/5s/10s/20s)

Disparo Contínuo + Time Lapse professional



Image 4.3: The camera's timer settings (Off/3s/5s/10s/20s) for continuous shooting and time-lapse photography.



Auto-Foco Inteligente

Macro e capturas rápidas com precisão!

Image 4.4: The camera's intelligent auto-focus feature, enabling quick and precise macro captures.

4.7. Menu Navigation

Use the 'Menu' button to access camera settings. Navigate using the directional buttons and confirm selections with the 'OK' button.

5. MAINTENANCE

5.1. Cleaning

- Use the provided cleaning cloth to gently wipe the camera body and screens.
- For the lens, use a specialized lens cleaning solution and cloth to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

5.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery to prevent leakage.
- Use the carrying case to protect the camera from dust and impacts.

6. TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Cannot take photos/videos:** Check if a memory card is inserted and has sufficient free space. Format the card if necessary (this will erase all data).
- **Blurry images:** Ensure the lens is clean. Check focus settings (auto-focus or manual). Ensure sufficient lighting.
- **Short battery life:** Fully charge the battery before use. Reduce screen brightness or disable unnecessary features to conserve power.
- **Camera freezing:** Remove and reinsert the battery to reset the camera.

For persistent issues, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Zoom	Up to 18X Digital
Focus Range	1 meter to infinity
Lens	Fixed 3.76mm, Aperture F/3.2
Sensor	High-definition CMOS, up to 64MP
ISO Sensitivity	Auto / 100 / 200 / 400 / 800 / 1600 / 3200
Photo Resolution	JPG (3MP to 64MP)
Video Recording	MP4 (4K@30FPS, 2.7K@30FPS, 1080P@60/30FPS, 720P@120/60/30FPS)
Screen	Dual – Front 1.4", Rear 2.8"
Flash	Integrated, effective range <1.5m
Exposure Compensation	Adjustable from -3.0 to +3.0 EV
Self-Timer	3s / 5s / 10s / 20s / Off
Auto Power Off	After 1, 3, 5 minutes or manual
White Balance	Auto, Sun, Cloud, Incandescent, Fluorescent
Storage	Supports SD/TF cards (8GB to 128GB, not included)
Battery	1200mAh Lithium-Ion, up to 30 min continuous use
Charging	USB-C, approx. 2 hours
Dimensions	103 × 60 × 18 mm
Weight	150g
Material	Acrylonitrile Butadiene Styrene (ABS)

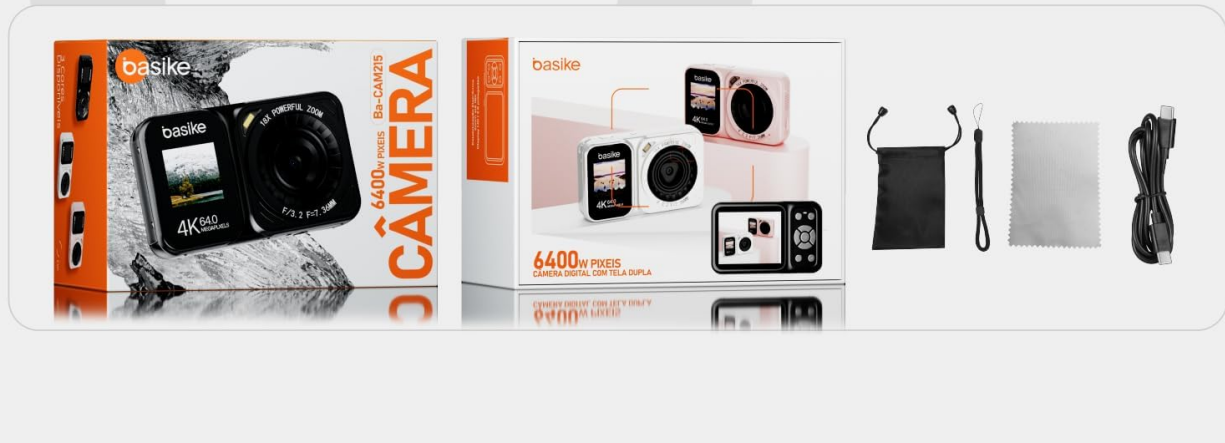


Image 7.1: Visual representation of the camera's dimensions and included accessories.

8. PACKAGE CONTENTS

The following items are included in your Basike Ba-CAM215 Digital Camera package:

- 1x Basike Digital Camera
- 1x Lithium-Ion Battery
- 1x USB-C Charging Cable
- 1x Wrist Strap
- 1x Cleaning Cloth
- 1x Carrying Case
- 1x User Manual

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Your Basike Ba-CAM215 Digital Camera comes with a **1-year warranty** against manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

9.2. Customer Support

For any questions, technical assistance, or warranty inquiries, please contact our customer support team. We offer **24/7 customer support** to assist you.

- **Online Support:** Visit the official Basike website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or warranty card for contact email.