

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TECURS](#) /

› [TECURS Wireless Keyboard User Manual](#)

TECURS KC009

TECURS Wireless Keyboard User Manual

Model: KC009

1. PRODUCT OVERVIEW

The TECURS Wireless Keyboard is designed to enhance the functionality of your Microsoft Surface Pro tablet, offering a comfortable typing experience and a responsive trackpad. This ultra-thin, rechargeable keyboard features a 7-color LED backlight, making it suitable for various lighting conditions.

Key Features:

- Bluetooth Connection for seamless pairing.
- Magnetic attachment for easy setup and portability.
- 7-Color LED Backlight with 3 levels of brightness adjustment.
- Responsive Trackpad supporting scrolling, zooming, and multi-touch gestures.
- Ultra-slim and lightweight design for enhanced portability.



Figure 1: TECURS Wireless Keyboard with 7-color backlight and integrated trackpad.

2. SETUP GUIDE

2.1. Compatibility Check

This keyboard is specifically designed for Microsoft Surface Pro 7, Pro 7+, Pro 6, Pro 5, Pro 4, and Pro 3 (12.3-inch models). It is **NOT** compatible with Surface Pro 11/10/9/8/X (13-inch) or other models.

To confirm your Surface Pro model:

1. Go to **Settings** on your Surface Pro.
2. Select **System**.
3. Click on **About** to view your model name.

Note: Please check if your device is Surface Pro 7/7+/6/5/4/3

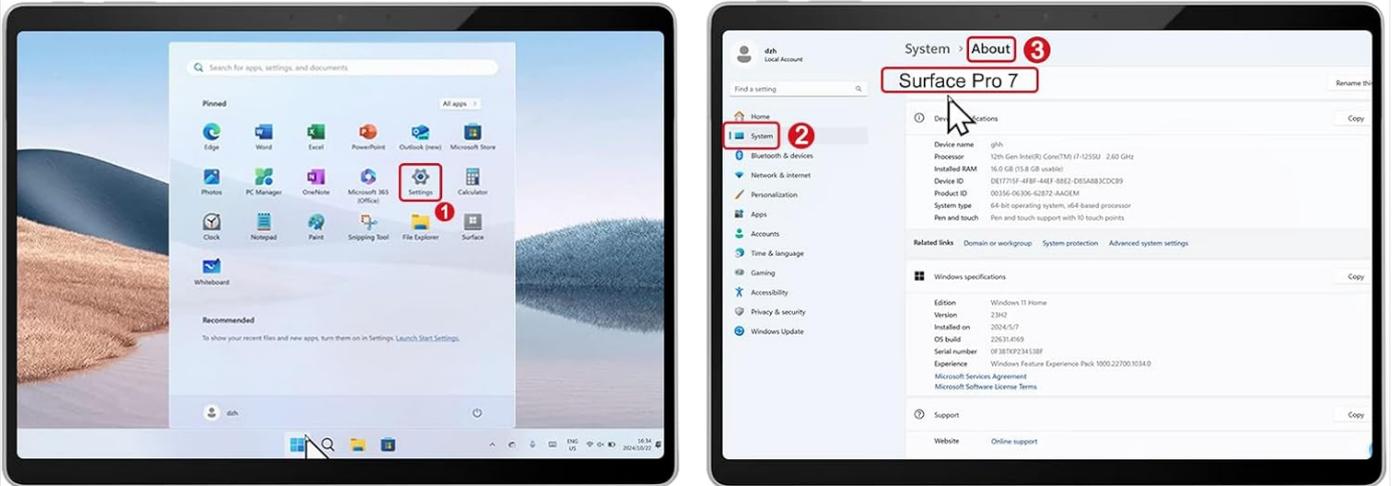


Figure 2: Steps to verify your Microsoft Surface Pro model for compatibility.

COMPATIBLE MODELS!



- Fits for Surface Pro 7
- Fits for Surface Pro 7+
- Fits for Surface Pro 6
- Fits for Surface Pro 5
- Fits for Surface Pro 4
- Fits for Surface Pro 3



- ✗ Not For Surface Pro 12
- ✗ Not For Surface Pro 8
- ✗ Not For Surface Pro 11
- ✗ Not For Surface Pro X
- ✗ Not For Surface Pro 10
- ✗ Not For Surface GO 4/3/2/1
- ✗ Not For Surface Pro 9
- ✗ Not For Surface Book

Figure 3: Visual guide to compatible and incompatible Surface Pro models.

2.2. Physical Attachment

The keyboard attaches magnetically to your Surface Pro tablet. Simply align the magnetic strip at the top of the keyboard with the bottom edge of your tablet until it snaps into place. The magnetic strip is for physical attachment only and does not provide charging or data connection.

! IMPORTANT NOTE

The **Magnet Strip** is only used to fix the keyboard and the tablet.
It Cannot Charge or Connect to the Tablet.

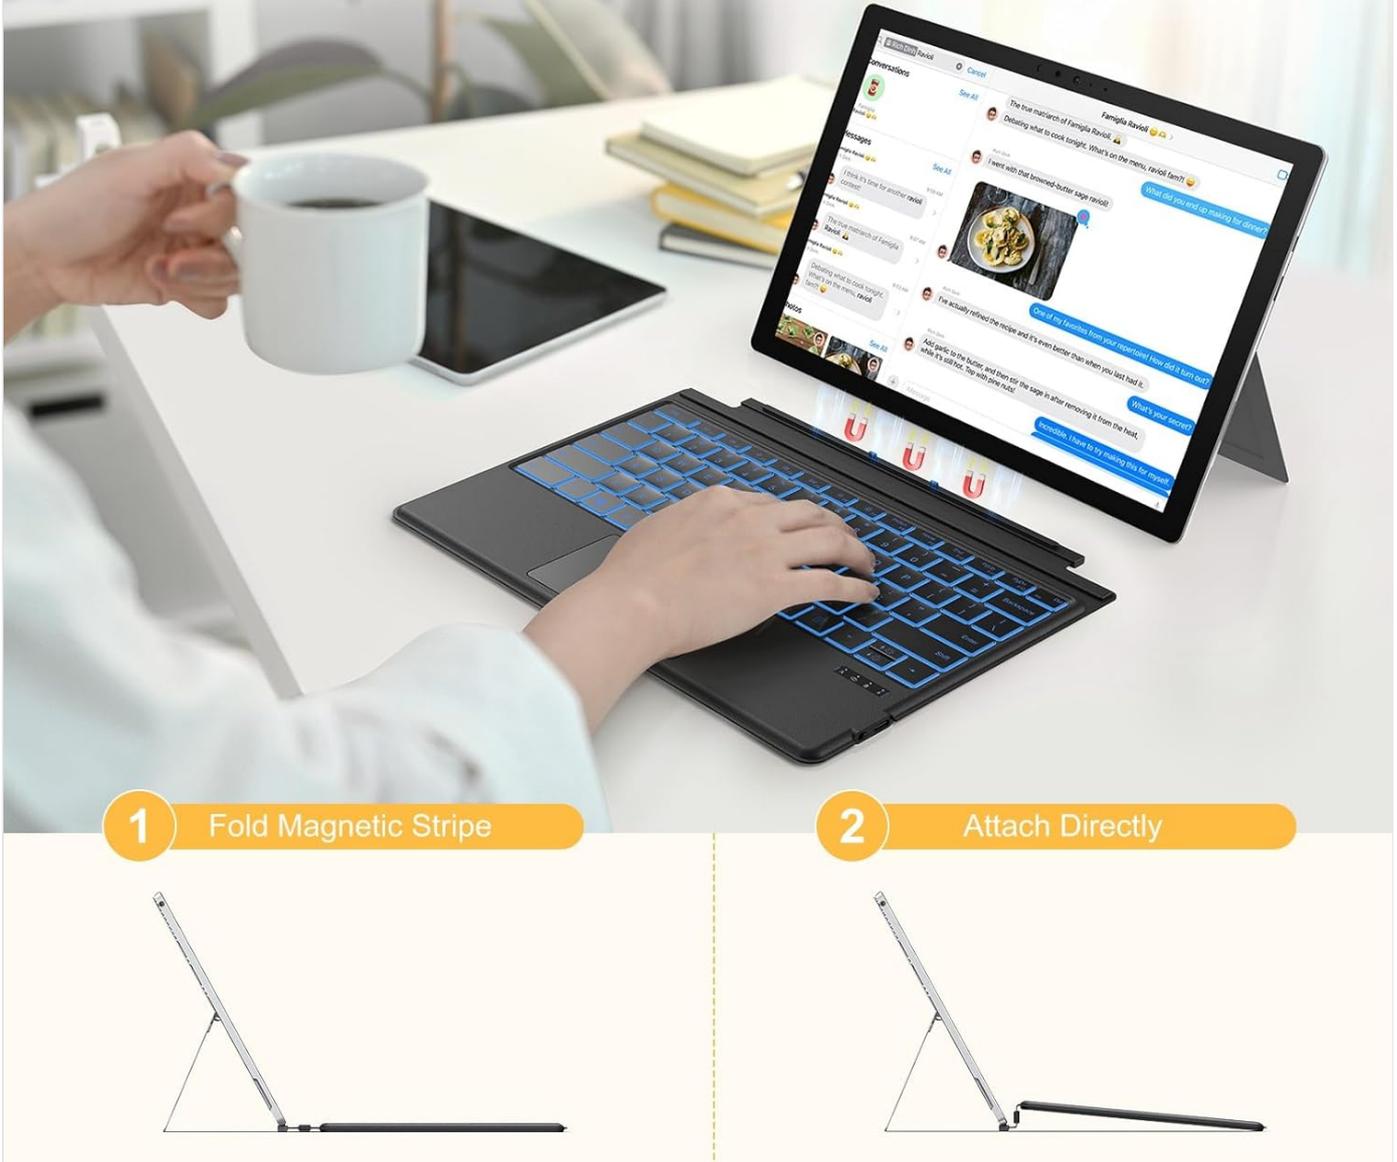


Figure 4: Magnetic attachment of the keyboard to the Surface Pro, offering two typing angles.

2.3. Charging the Keyboard

The keyboard has a built-in rechargeable battery and is charged via a Type-C charging cable (included). Connect the Type-C cable to the charging port on the keyboard and a suitable USB power source. A full charge takes approximately 2 hours and provides up to 50 hours of working time.



Figure 5: Charging the TECURS Wireless Keyboard via its Type-C port.

2.4. Bluetooth Connection Steps

Follow these steps to pair your keyboard with your Surface Pro:

1. Turn on the power switch located on the side of the keyboard.
2. Press the "**Fn**" + "**C**" keys simultaneously to activate the keyboard's Bluetooth pairing mode. The Bluetooth indicator light will blink.
3. On your Surface Pro, go to **Settings** > **Bluetooth & devices** and ensure Bluetooth is turned **ON**.
4. Click "**Add a device**" and select "**Bluetooth Keyboard**" from the list to complete the pairing process.


Bluetooth Keyboard Connection Steps




1 Turn on the power Switch



2 Press **FN+C** key to active Bluetooth of Keyboard

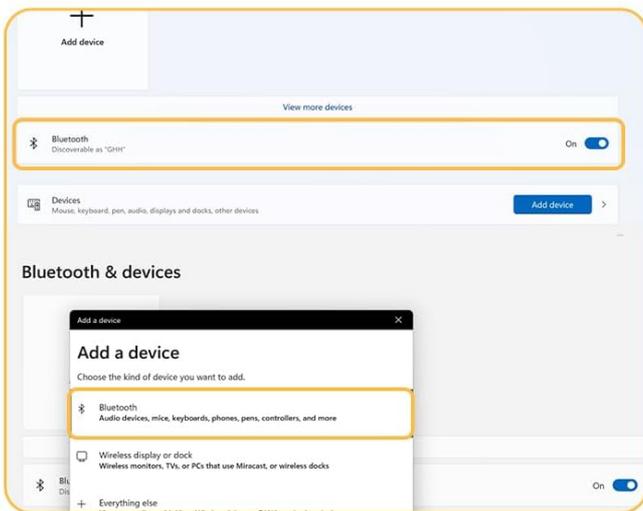

3 Turn Bluetooth on in Settings on your device

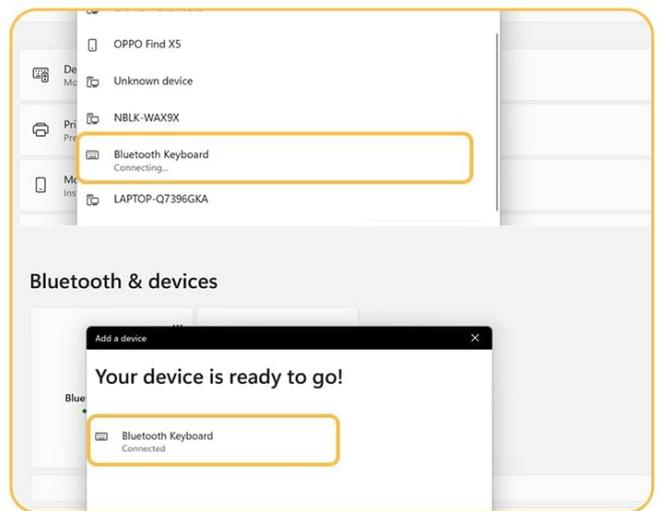

4 Select "Bluetooth Keyboard" for pairing

Figure 6: Detailed steps for establishing a Bluetooth connection between the keyboard and your Surface Pro.

3. OPERATING INSTRUCTIONS

3.1. Keyboard and Typing

The keyboard features a standard QWERTY layout with 78 keys, providing a comfortable and responsive typing experience. The keys are designed for silent and comfortable typing, similar to a laptop keyboard.

3.2. Backlight Control

The keyboard is equipped with a 7-color LED backlight. You can adjust the color and brightness to suit your preference and environment.

- To adjust the **backlight color**: Press "**Fn**" + (**light bulb icon**). Cycle through the 7 available colors.
- To adjust the **backlight brightness**: Press "**Fn**" + (**sun icon**). There are 3 levels of brightness adjustment, including off.



Figure 7: Controls for adjusting keyboard backlight colors and brightness levels.

3.3. Trackpad Functionality

The built-in responsive trackpad supports precise cursor control and multi-touch gestures, similar to a mouse.

 
- To turn the **trackpad ON/OFF**: Press "Fn" + Spacebar.
- **One finger slide**: Move cursor.
- **Two fingers tapping**: Right-click.
- **Two fingers up/down**: Scroll vertically.
- **Two fingers pinch**: Zoom in/out.
- **Three fingers tap**: Search.
- **Three fingers up**: Open all task windows.
- **Three fingers down**: Back to desktop.
- **Four fingers tap**: Open the activity center.

Comfortable Typing Sensitive Control

Touchpad ON/OFF



+



Scissor Swiths
Silent and Comfortable Typing



Responsive Touchpad
Convenient and Fast Operation



Figure 8: Trackpad features and multi-finger gestures for enhanced control.

3.4. Function Keys and Shortcuts

The top row of keys provides various function and shortcut controls:

- **Esc:** Escape
- **F1:** Mute
- **F2:** Decrease Volume
- **F3:** Increase Volume
- **F4:** Play/Pause
- **F5:** Previous Track
- **F6:** Next Track
- **F7:** Dim Screen
- **F8:** Brighten Screen

- **F9:** Print Screen
- **F10:** Home (Start of Line)
- **F11:** End (End of Line)
- **F12:** Page Up
- **Del:** Delete

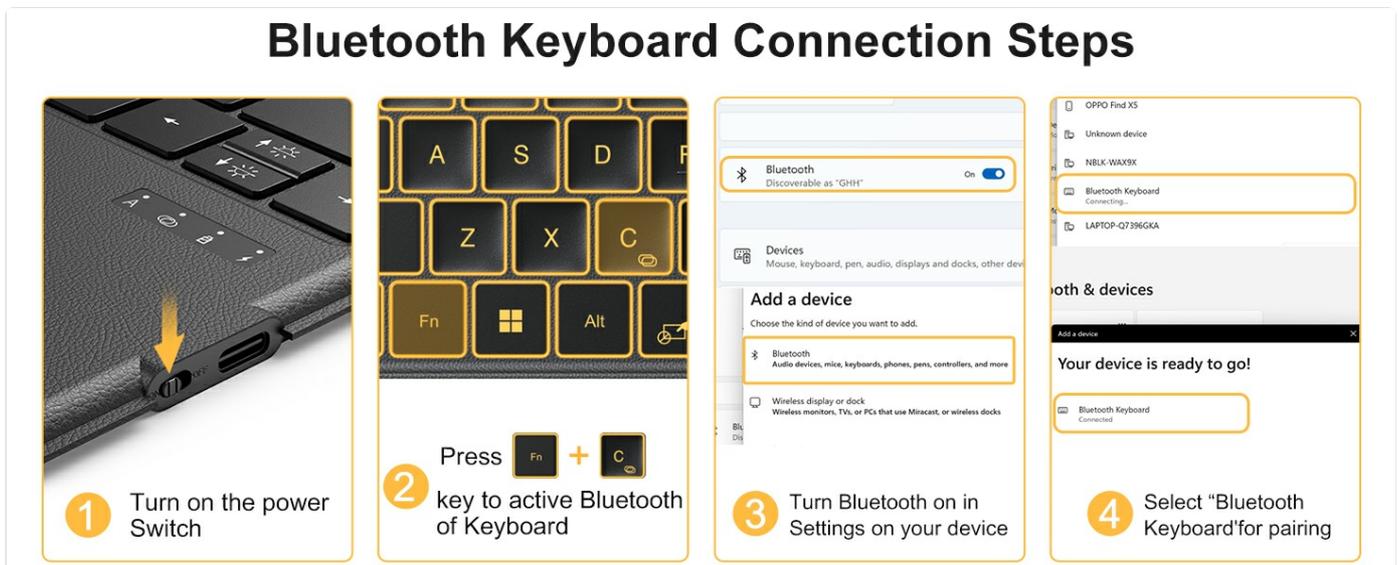


Figure 9: Overview of keyboard function keys and their shortcuts.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your TECURS Wireless Keyboard.

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keyboard and trackpad. Avoid excessive moisture. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, keep the keyboard attached to your Surface Pro to protect the screen and keys. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the keyboard frequently. Charge it regularly, even if not in constant use.

5. TROUBLESHOOTING

If you encounter issues with your TECURS Wireless Keyboard, refer to the following common problems and solutions:

1. Keyboard not connecting via Bluetooth:

- Ensure the keyboard's power switch is ON.
- Press "Fn" + "C" to put the keyboard into pairing mode.
- Check that Bluetooth is enabled on your Surface Pro.
- Forget the "Bluetooth Keyboard" device in your Surface Pro's Bluetooth settings and attempt to re-pair.
- Ensure the keyboard is charged.

2. Backlight not working or dim:

- Press "Fn" + (sun icon) to increase brightness levels.
- Ensure the keyboard has sufficient battery charge.

3. Trackpad unresponsive:

- Press "Fn" + Spacebar to toggle the trackpad ON/OFF.
- Ensure the keyboard is properly connected via Bluetooth.
- Clean the trackpad surface to remove any debris.

4. Keys not responding:

- Verify Bluetooth connection.
- Recharge the keyboard.
- Restart your Surface Pro.

6. SPECIFICATIONS

Feature	Detail
Brand	TECURS
Compatible Devices	Microsoft Surface Pro 7/Pro 7+ /Pro 6 /Pro 5 /Pro 4 /Pro 3 (12.3 inch)
Connectivity Technology	Bluetooth
Keyboard Description	Rechargeable Battery
Special Features	Backlit, Ergonomic, Portable
Color	Black
Number of Keys	78
Keyboard Backlighting Color Support	RGB (7 Colors)
Included Components	1 x Keyboard, 1 x Type-C Charging Cable, 1 x User Manual
Keyboard Layout	QWERTY
Item Weight	1.21 pounds
Package Dimensions	13.43 x 9.92 x 0.59 inches
Charging Time	Approx. 2 hours
Working Time	Approx. 50 hours



Figure 10: Physical dimensions and battery performance of the keyboard.

7. WARRANTY AND SUPPORT

TECURS products are designed for reliability and performance. For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official TECURS website.

Additional protection plans may be available for purchase separately to extend coverage beyond the standard warranty. Please check with your retailer for details.