

[Manuals.plus](#) /

> [Greenpan](#) /

> GREENPAN Click Chef 9-Piece Cookware Set Instruction Manual

Greenpan CC009850-104

GREENPAN Click Chef 9-Piece Cookware Set Instruction Manual

Model: CC009850-104

INTRODUCTION

This manual provides comprehensive instructions for the GREENPAN Click Chef 9-Piece Cookware Set, model CC009850-104. This innovative cookware set features a removable handle, healthy ceramic non-stick coating, and is compatible with various heat sources including IH and gas cooktops. Designed for convenience, it offers compact storage and easy cleaning. Please read this manual thoroughly before first use to ensure safe and optimal performance of your cookware.



Image: An overview of the GREENPAN Click Chef 9-Piece Cookware Set, showcasing various pots, pans, and accessories in a kitchen setting.

PRODUCT COMPONENTS

The GREENPAN Click Chef 9-Piece Cookware Set includes the following items:

- 20cm Frying Pan
- 26cm Frying Pan

- 16cm Saucepan
- Egg Pan
- Removable Handle
- Glass Lid
- Seal Lid
- Protector Sheet x2



The Original GREEN PAN™

CLICK CHEF

クリックシェフ コレクション
チャコールグレー

9点セット

	1 20cm フライパン	2 26cm フライパン
	3 ソースパン	4 エッグパン
	5 着脱式ハンドル	6 プラスチック蓋
	7 ガラス蓋	8 9 保護シート×2

Image: A visual representation of all 9 components included in the Greenpan Click Chef set, clearly labeled with their sizes and types.

The cookware features a healthy ceramic non-stick coating, free from PFAS, PFOA, lead, and cadmium, ensuring safe cooking.

ヘルシーセラミック ノンスティックコーティング



PFOAをはじめその他の
PFAS、鉛、カドミウム等の
有害物質を一切
使用していません

こびりつき
にくい



そのまま食卓へ



一時的な保存も可能

Image: A graphic highlighting the "PFAS FREE NON-STICK" feature, showing food easily sliding off the pan and emphasizing the absence of harmful substances.

SETUP

Attaching the Removable Handle

The Click Chef cookware set is designed with a removable handle for versatile use and compact storage. To attach the handle, align it with the designated attachment point on the cookware and secure it firmly. The handle features a 2-stage lock system for secure attachment and easy detachment.

／ ずり落ちない ／

2段階ロックで 安全なハンドル

特許取得で安心な
ダブル安全構造



Image: A hand demonstrating how to attach the removable handle to a frying pan, showing the secure locking mechanism.

Important Note for Egg Pan Handle Attachment


ATTENTION:

When attaching the handle to the egg pan, ensure it is attached to the center of the large curved surface. Attaching the handle to an incorrect position may prevent its removal and can be dangerous. Refer to the diagram below for correct attachment.

エッグパンに関する大切なお知らせ



ハンドルを誤った
位置に装着すると
取り外せなくなる
可能性があり
大変危険です

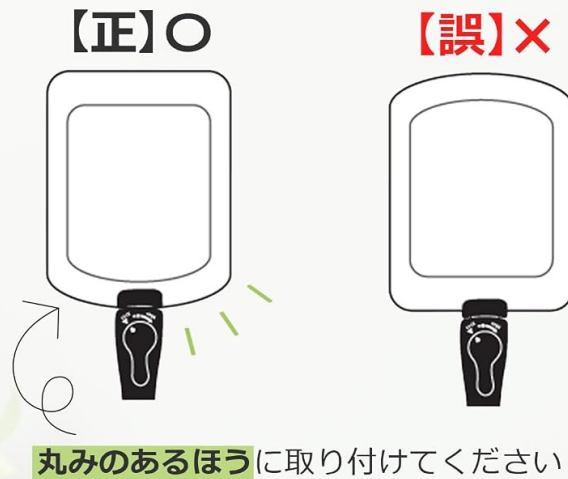

丸みのあるほうに取り付けてください



Image: A diagram illustrating the correct (circular side) and incorrect handle attachment points for the egg pan, with a warning about improper use.

OPERATING INSTRUCTIONS

Heat Source Compatibility

This cookware set is compatible with various heat sources, including:

- Gas Stoves
- IH Cooktops (200V compatible)
- Radiant Heaters
- Halogen Heaters
- Ovens (up to 350°C, main body only)



IH調理器を含む 全ての熱源に対応



ガス



ラジエント
ヒーター



ハロゲン
ヒーター



IH
(200VIH)



オーブン
(本体のみ)

Image: Icons and text indicating compatibility with gas, radiant, halogen, IH, and oven heat sources, with a visual of the pans being used on different cooktops and in an oven.

Preheating for Optimal Non-Stick Performance

For best non-stick performance, proper preheating is crucial. Heat the pan over low to medium heat for the recommended duration before adding oil or butter and food.

- **20cm Frying Pan:** 40 seconds to 1 minute (medium heat)
- **26cm Frying Pan:** 1 to 1.5 minutes (medium heat)
- **Egg Pan:** 40 seconds to 1 minute (medium heat)

Adjust preheating time based on pan size. Always use low to medium heat for cooking; high heat is not recommended due to the excellent thermal conductivity of the ceramic coating.

グリーンパンを長くご愛用いただくために

中火で予熱

調理(炒め物・焼き物)をする際は、
必ず**中火で30秒～1分**程度、
予熱してください



 
フライパンが温まったところに
少量の油かバターを入れてから
調理をはじめてください




むだ火



強火



中火

 

弱火



とろ火

※IH(電磁調理器)でご使用の場合も予熱・調理は必ず**【中火】以下**でご使用ください

Image: A diagram showing recommended preheating times and heat levels (medium heat) for different pan sizes, with warnings against using high heat.

Cooking Recommendations

The ceramic coating with diamond particles ensures excellent heat distribution, allowing for efficient cooking at lower temperatures. Use low to medium heat for most cooking tasks. Avoid using metal utensils to prevent scratching the non-stick surface; silicone, wood, or plastic utensils are recommended.

CARE AND MAINTENANCE

Cleaning Instructions

To maintain the non-stick properties and longevity of your cookware, follow these cleaning guidelines:

- **Hand Washing:** Hand washing with a neutral detergent is recommended. Wash thoroughly to remove all food residue, as invisible residue can lead to sticking over time. After washing, wipe dry immediately with a cloth; do not air dry.
- **Dishwasher Use:** The main body of the cookware is dishwasher safe. However, the glass lid and removable handle are not suitable for dishwasher use and should be hand washed.
- **Stubborn Stains:** If food residue becomes stubborn, soak the pan in lukewarm water to loosen it. For persistent sticking issues, a melamine sponge can be used carefully. Excessive use of abrasive sponges

may affect the coating.



Image: A person cleaning a frying pan under running water, illustrating the ease of cleaning due to the non-stick surface.

Storage

The removable handle allows for compact, stackable storage, saving space in your kitchen. Use the included protector sheets between stacked pans to prevent scratches.



Image: Stacked Greenpan cookware with protector sheets, demonstrating the space-saving design.

TROUBLESHOOTING

Food Sticking to the Pan

If food begins to stick, it is often due to insufficient preheating or accumulated invisible food residue. Ensure you preheat the pan properly as described in the "Operating Instructions" section. Regularly clean the pan thoroughly with neutral detergent to prevent residue buildup. If sticking persists, a melamine sponge can help remove accumulated residue.

Handle Cannot Be Removed

This issue typically occurs if the handle was incorrectly attached, especially with the egg pan. Refer to the "Important Note for Egg Pan Handle Attachment" in the Setup section to ensure correct attachment. If the handle is stuck, gently try to re-engage the locking mechanism while ensuring it's aligned correctly.

SPECIFICATIONS

Feature	Detail
Brand	Greenpan
Model Number	CC009850-104
Color	Charcoal Gray
Material	Aluminum (Body), Stainless Steel (Handle)
Coating	Ceramic Non-Stick (PFAS-free)
Set Contents	20cm Frying Pan, 26cm Frying Pan, 16cm Saucepan, Egg Pan, Removable Handle, Glass Lid, Seal Lid, Protector Sheet x2

Heat Source Compatibility	Gas, IH (200V), Radiant, Halogen, Oven (up to 350°C, main body only)
Dishwasher Safe	Main body only (Glass lid and handle are not)
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Greenpan customer service directly. Keep your purchase receipt as proof of purchase.