



[Manuals.plus](#) /

> [commowner](#) /

> Commowner Electric Pressure Washer CMM4000-2313021 User Manual

## commowner CMM4000-2313021

# Commowner Electric Pressure Washer CMM4000-2313021 User Manual

Model: CMM4000-2313021

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation, assembly, maintenance, and troubleshooting of your Commowner Electric Pressure Washer, model CMM4000-2313021. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: Commowner Electric Pressure Washer CMM4000-2313021 with included accessories, including the main unit, spray gun, hose reel, power cord, various nozzles, and foam cannon.

## 2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this electric appliance to reduce the risk of fire, electric shock, and personal injury. This includes:

- **Read all instructions:** Familiarize yourself with the controls and proper use.
- **Grounding instructions:** Ensure the pressure washer is properly grounded.
- **Avoid accidental starting:** Ensure the switch is off before plugging in or moving the appliance.
- **Keep children away:** Do not allow children to operate the pressure washer.
- **Wear appropriate safety gear:** Eye protection, gloves, and protective clothing are recommended.
- **Do not direct spray at people or animals:** High-pressure spray can cause serious injury.
- **Use only approved accessories:** Using unapproved accessories may result in injury.
- **Total Stop System (TSS):** The unit is equipped with a TSS that automatically shuts off the pump when

the trigger is released, prolonging pump life and saving energy.

- **Safety Lock:** The spray gun features a safety lock to prevent accidental operation. Always engage the safety lock when not spraying.

### 3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon unpacking:

- Commowner Electric Pressure Washer Unit
- Spray Gun with Safety Lock
- High-Pressure Hose (33 ft)
- Power Cord (34 ft)
- Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon (500ml)
- Water Inlet Connector
- User Manual

### 4. SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer:

1. **Attach the Wheels:** Secure the wheels to the main unit if not pre-assembled.
2. **Install the Handle:** Slide the handle into place and secure it.
3. **Connect the Water Inlet Hose:** Attach the water inlet connector to the pressure washer's water inlet. Ensure a tight seal to prevent leaks.
4. **Connect the High-Pressure Hose:**
  - Connect one end of the 33-foot high-pressure hose to the outlet on the pressure washer unit.
  - Connect the other end of the high-pressure hose to the spray gun.
5. **Attach the Spray Lance:** Connect the spray lance to the spray gun.
6. **Select and Connect a Nozzle:** Choose the desired quick-connect nozzle and insert it into the end of the spray lance until it clicks into place.
7. **Connect to Water Supply:** Attach a standard garden hose (not included) to the water inlet connector and turn on the water supply fully.
8. **Connect to Power:** Plug the 34-foot power cord into a grounded electrical outlet.



Figure 2: Visual guide for connecting components: nozzle, spray lance, high-pressure hose to the gun, water outlet, water inlet, and operating the rotary switch.

## 5. OPERATING INSTRUCTIONS

Before starting, ensure all connections are secure and the water supply is fully open. Purge air from the system by squeezing the spray gun trigger until a steady stream of water emerges.

### 5.1 Starting and Stopping

- **To Start:** Turn the rotary switch to the "ON" position. Squeeze the spray gun trigger to begin spraying.
- **To Stop:** Release the spray gun trigger. The Total Stop System (TSS) will automatically shut off the pump. For complete shutdown, turn the rotary switch to the "OFF" position and unplug the power cord.

### 5.2 Nozzle Selection and Application

The pressure washer includes four quick-connect nozzles for various cleaning tasks. Always select the appropriate nozzle for the surface and cleaning intensity required.

- **0° Nozzle (Red):** Delivers a concentrated, high-pressure stream for dissolving stubborn substances on hard, durable surfaces. Use with caution.
- **15° Nozzle (Yellow):** Provides a powerful, fan-shaped spray for intensive cleaning of concrete, brick, and other hard surfaces.
- **25° Nozzle (Green):** Offers a wider, medium-pressure spray suitable for general cleaning of wood decks, siding, and other soft surfaces.
- **40° Nozzle (White):** Produces a broad, low-pressure spray ideal for delicate surfaces like windows, screens, and vehicles.
- **Foam Cannon (Black/Green):** Used for applying detergent or soap. Fill with appropriate cleaning solution and attach to the spray gun.



Figure 3: Quick-connect nozzles and their spray patterns for various cleaning applications.

### 5.3 Adjustable Pressure

The pressure washer features an adjustable pressure dial, allowing you to fine-tune the output from 2500 PSI to 5000 PSI to match the cleaning task. Rotate the dial on the unit to increase or decrease pressure.

# ADJUSTABLE PRESSURE

Tough on Dirt, Gentle on Surfaces – Even Your Luxury Car!



Figure 4: Adjustable pressure dial for customizing cleaning intensity.

## 5.4 General Cleaning Tips

- Always test a small, inconspicuous area first to ensure the chosen nozzle and pressure setting are suitable.
- Work from top to bottom on vertical surfaces to allow cleaning solutions to work effectively.
- Maintain a consistent distance from the surface to avoid damage.

# PRESSURE PERFECTION FOR EVERY SURFACE.




1

Driveways



2

Furniture

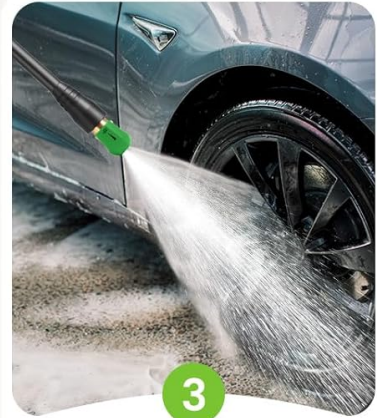

3

Cars




4

Fencing



5

Windows

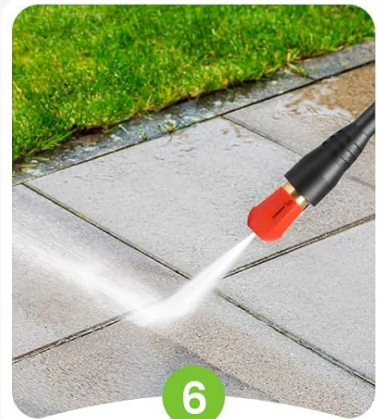

6

Cracks

Figure 5: Examples of common cleaning applications for the pressure washer.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

### 6.1 After Each Use

- **Shut Down:** Turn off the power switch and unplug the unit. Turn off the water supply.
- **Relieve Pressure:** Squeeze the spray gun trigger to release any remaining pressure in the system.
- **Disconnect Hoses:** Disconnect the garden hose and high-pressure hose.
- **Drain Water:** Drain all water from the pump, hoses, and spray gun to prevent freezing damage.
- **Clean Nozzles:** Remove any debris from the nozzle tips.
- **Wipe Down:** Clean the exterior of the unit with a damp cloth.

### 6.2 Storage

Store the pressure washer in a dry, frost-free area. The integrated hose reel and vertical design allow for compact storage.



# VERTICAL STORAGE

Save up to 50% more space

Figure 6: Vertical storage capability for space efficiency.

## 7. TROUBLESHOOTING

Refer to this section for solutions to common issues. If problems persist, contact customer support.

Problem	Possible Cause	Solution
Unit does not start	Power cord not plugged in Power switch is OFF Circuit breaker tripped	Plug in power cord Turn switch to ON Reset circuit breaker
Low pressure output	Insufficient water supply Clogged nozzle Air in pump Adjustable pressure dial set too low	Ensure water supply is fully open Clean or replace nozzle Purge air from system (squeeze trigger without power) Adjust dial to higher pressure setting

Problem	Possible Cause	Solution
Water leaks	Loose connections Damaged O-rings	Tighten all connections Inspect and replace O-rings if damaged

## 8. SPECIFICATIONS

Feature	Detail
Brand	Commowner
Model Number	CMM4000-2313021
Power Source	AC
Maximum Pressure	5000 PSI (Adjustable from 2500 PSI)
Maximum Flow Rate	4.0 Gallons Per Minute (GPM)
Hose Length	33 Feet
Power Cord Length	34 Feet
Item Weight	20 Pounds
Product Dimensions	11"L x 11"W x 25"H
Nozzles Included	0°, 15°, 25°, 40° Quick-Connect, Foam Cannon
Safety Features	Total Stop System (TSS), Safety Lock on Spray Gun

## 9. WARRANTY AND SUPPORT

Commowner provides a **2-Year warranty** for this electric pressure washer machine. Additionally, customers are eligible for **30 days risk-free return and replacement**. For technical support or warranty claims, please contact Commowner customer service.

For further assistance, please visit the official Commowner store: [Commowner Store on Amazon](#).