

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VIVOHOME](#) /

› [VIVOHOME VHPB45-27000 Heated Rocking Camping Chair User Manual](#)

VIVOHOME VHPB45-27000

VIVOHOME VHPB45-27000 Heated Rocking Camping Chair User Manual

Model: VHPB45-27000 | Brand: VIVOHOME

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the VIVOHOME Heated Rocking Camping Chair. Retain this manual for future reference.

General Safety

- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Ensure the chair is fully unfolded and stable on a flat surface before use.
- Keep children and pets away from the chair during heating operation.
- Avoid placing sharp objects on the chair fabric to prevent damage.
- Do not use the chair if any part is damaged or broken.

Electrical and Battery Safety

- Use only the provided 27,000mAh PD 45W power bank or a compatible power source with similar specifications.
- Do not expose the power bank or heating elements to water or extreme moisture.
- Unplug the power bank from the chair when not in use or during cleaning.
- The built-in thermistor provides overheat protection. If the chair feels excessively hot, turn off the heating function immediately.
- Do not puncture, disassemble, or modify the power bank.
- Charge the power bank in a well-ventilated area, away from flammable materials.

2. PRODUCT OVERVIEW

The VIVOHOME Heated Rocking Camping Chair is designed for comfort and warmth in outdoor settings. It features integrated heating pads, a robust frame, and convenient storage options.

Components List

- Heated Rocking Camping Chair
- 27,000mAh PD 45W Power Bank
- USB-C to USB-C Charging Cable
- Carrying Bag

Key Features

- **Large Heating Pads:** Even and efficient warmth for back (12.6 x 18.5 in) and seat (17.7 x 13.8 in), heating in 5 seconds.
- **Three Temperature Settings:** Adjustable heat levels (122°F, 140°F, 158°F) with independent control for back and seat.
- **Overheat Protection:** Built-in thermistor ensures safe operation.
- **27,000mAh Power Bank:** Provides extended heating time and features 2 USB ports and 1 Type-C port for charging other devices.
- **Durable Construction:** Heavy-duty steel tubes with powder-coated finish for rust resistance, supporting up to 300 lbs.
- **Comfortable Design:** Padded with thick foam and covered with waterproof, tear-resistant 600D Oxford fabric.
- **Smooth Rocking Motion:** For relaxation and added comfort.
- **Convenient Storage:** Multiple pockets for drinks, snacks, and devices, including a dedicated power bank pocket.
- **Portable & Foldable:** Easy to fold and carry in the included bag.



Figure 2.1: The VIVOHOME Heated Rocking Camping Chair, showing the main components including the chair, power bank, and carrying bag.

3. SPECIFICATIONS

Feature	Specification
Brand	VIVOHOME
Model Number	VHPB45-27000
Product Dimensions (Unfolded)	38.2"D x 23.6"W x 37.8"H
Folded Dimensions (Approx.)	39.4"H x 9.8"D (in carrying bag)
Item Weight	15.6 lbs
Maximum Weight Recommendation	300 lbs
Material	600D Oxford Cloth, Alloy Steel, Sponge

Feature	Specification
Power Bank Capacity	27,000mAh
Power Bank Output	PD 45W (Type-C), 2x USB ports
Heating Levels	Low (122°F), Medium (140°F), High (158°F)



Figure 3.1: Product dimensions for the VIVOHOME Heated Rocking Camping Chair, both unfolded and packed in its carrying bag.

4. SETUP INSTRUCTIONS

The VIVOHOME Heated Rocking Camping Chair is designed for quick and easy setup. No assembly is required.

Unfolding the Chair

1. Remove the chair from its carrying bag.
2. Stand the folded chair upright.

3. Gently lower the rocking legs to the ground.
4. Lift the bottom fabric of the seat to prevent snagging.
5. Pull the opposite corners of the chair frame outwards until it fully opens and locks into place.



Figure 4.1: Visual guide for setting up the chair. Follow the numbered steps to unfold the chair correctly.

Folding the Chair

1. Ensure the heating function is off and the power bank is disconnected.
2. Hold the middle of the seat and the backrest, then push them inward to begin folding.
3. Continue to fold the legs upwards until the chair is compact.
4. Secure the folded chair and place it into the carrying bag for transport or storage.



Figure 4.2: The chair is portable and foldable, making it easy to carry and store.

Video Guide: Setup and Folding

Your browser does not support the video tag.

Video 4.1: Official VIVOHOME guide demonstrating how to open and fold the Heated Rocking Camping Chair for easy setup and storage.

5. OPERATING INSTRUCTIONS

Power Bank Operation

- **Charging the Power Bank:** Use the provided USB-C cable to connect the power bank to a compatible wall adapter (not included). The indicator lights will show charging progress.
- **Checking Battery Status:** Press the power button on the power bank once to see the battery level indicated by the LED lights (each light represents approximately 25% charge).
- **Connecting to Chair:** Locate the Type-C port on the chair's control panel. Connect the power bank to this port using the USB-C cable. Ensure a secure connection.
- **Charging External Devices:** The power bank features 2 USB-A ports and 1 USB-C port, allowing you to charge phones, tablets, or laptops while the chair is in use or independently.



Figure 5.1: The 27,000mAh power bank provides extended heating and charging capabilities for multiple devices.

Heating Function

- **Powering On/Off:** Press and hold the desired heating zone button (back or seat) for 3 seconds to turn the heating on or off.
- **Adjusting Heat Levels:** Once a heating zone is on, press the corresponding button once to cycle through the three temperature settings: Low (122°F), Medium (140°F), and High (158°F). The LED indicator on the

button will change color to reflect the selected level.

- **Independent Control:** The back and seat heating zones can be operated independently, allowing for personalized comfort.
- **Rapid Heating:** The heating pads warm up in approximately 5 seconds.



Figure 5.2: The chair offers three distinct heating levels for customized warmth, controlled independently for the back and seat.



Figure 5.3: The large heating pads provide quick and even warmth across the back and seat.

6. MAINTENANCE

Cleaning

- Ensure the chair is unplugged from the power bank before cleaning.
- Wipe clean the fabric surfaces with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- Allow the chair to air dry completely before folding or storing.
- For the steel frame, wipe with a damp cloth as needed.

Storage

- Fold the chair as instructed in Section 4.
- Store the chair in its carrying bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure the power bank is fully charged before long-term storage to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heating not working	Power bank not connected or low battery. Heating zone not activated. Overheat protection engaged.	Ensure power bank is connected and charged. Press and hold the heating button for 3 seconds. Allow chair to cool down, then restart.
Power bank not charging	Charging cable or adapter faulty. Power bank fully charged.	Try a different USB-C cable and wall adapter. Check battery indicator lights; if full, no further charging is needed.
Chair is unstable	Not fully unfolded or on uneven ground.	Ensure chair is fully locked into position. Move to a flat, stable surface.

8. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact VIVOHOME customer service. Refer to the product packaging or the official VIVOHOME website for contact details.

Please have your model number (VHPB45-27000) and purchase date available when contacting support.