

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VIVOHOME](#) /

› [VIVOHOME VHPB45-27000 Padded Heating Double Camping Chair Instruction Manual](#)

## VIVOHOME VHPB45-27000

# VIVOHOME VHPB45-27000 Padded Heating Double Camping Chair Instruction Manual

Model: VHPB45-27000 | Brand: VIVOHOME

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient use of your VIVOHOME 45W Padded Heating Double Camping Chair. Please read this manual thoroughly before operating the product and retain it for future reference.

## 1. SETUP

---

### 1.1 Unpacking and Unfolding

The VIVOHOME Padded Heating Double Camping Chair comes pre-assembled and folds compactly for easy transport. To set up the chair:

1. Remove the chair from its storage bag.
2. Hold the chair by the top frame and pull the sides apart until the frame fully extends and locks into place. Ensure all legs are stable on a flat surface.





Image: The VIVOHOME Double Camping Chair stored in its carrying bag.



Image: The VIVOHOME Double Camping Chair unfolded, highlighting its dimensions and included power banks.

## 1.2 Connecting the Power Banks

Your chair includes two 27,000 mAh 45W PD power banks to power the heating elements. Each seat has a dedicated pocket for its power bank.

1. Locate the power bank pockets on the underside of each armrest.
2. Connect the USB-A cable from the chair's heating system to the USB-A port on each power bank.
3. Place the connected power banks securely into their respective pockets.

# 45W Fast Charging & Compatible



Image: Diagram illustrating the 27,000 mAh power bank with its USB and Type-C ports for charging and powering the chair.

Your browser does not support the video tag.

Video: Official VIVOHOME product video demonstrating the setup and features of the 45W Padded Heating Double Camping Chair.

## 2. OPERATING INSTRUCTIONS

### 2.1 Heating Controls

Each seat of the double camping chair features independent heating controls, allowing individual temperature adjustments.

- 1. Power On/Off:** Press and hold the power button (located on the inner side of each armrest) for 3 seconds to turn the heating on or off. The heating will start in High mode (red light).
- 2. Temperature Cycling:** Short presses of the power button will cycle through the three heating levels:
  - **1 Press (Red Light):** High (158°F / 70°C) - Recommended for very cold outdoor environments. Use with caution to avoid burns.

- **2 Presses (Blue Light):** Medium (140°F / 60°C)
- **3 Presses (Green Light):** Low (122°F / 50°C)

3. The system will return to High mode after cycling through Low, or turn off if pressed again from Low.



Image: Visual guide to the three heating levels (Low, Medium, High) and their temperature ranges.

## 2.2 Device Charging

The included power banks are equipped with 2 USB ports and 1 Type-C port, allowing you to charge your phone, tablet, or other devices while enjoying the heated chair.

1. Connect your device's charging cable to the appropriate port on the power bank.
2. Monitor the battery indicator lights on the power bank to track remaining charge.

## 3. KEY FEATURES


- **Large Heating Pads:** Features large heating pads (back: 19.7×10.2 in, seat: 16.7×19.7 in) that heat up in just 5 seconds, providing even and efficient warmth.

- **Overheat Protection:** A built-in thermistor prevents overheating, ensuring safe operation.
- **Durable Construction:** Built with a robust 16mm steel frame and X-brace design, supporting up to 500 lbs. The rust-resistant steel frame and waterproof 600D Oxford fabric ensure longevity.
- **Comfortable Design:** Padded with breathable PP cotton for a soft and cozy seating experience. Raised armrests reduce strain.
- **Integrated Storage:** Includes 2 insulated cup holders, 2 stem glass holders, 2 power bank pockets, and a large rear pocket for essentials.

## Upgraded Pad Heating

Safe Heating  
  Even Heat  
  5s Rapid heat



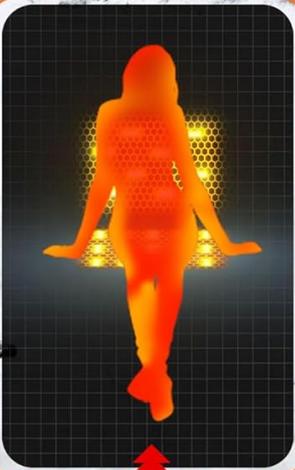

45W 158°F

Stay warm in the cold, even with layers

# VS



## Traditional Wire Heating

Overheating  
  Uneven warmth  
  Slower heat-up



Small Heating Pad

Image: Diagram showing the upgraded heating pads for even and rapid warmth.



Image: Diagram detailing the chair's user-friendly features including cup holders, power bank pockets, and stable X-structure.

## 4. MAINTENANCE

### 4.1 Cleaning

The chair is made with waterproof 600D Oxford fabric, making it easy to clean.

- Wipe down the fabric with a damp cloth and mild soap.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric.
- Ensure the chair is completely dry before folding and storing to prevent mold or mildew.

### 4.2 Storage

To prolong the life of your chair, store it properly when not in use.

1. Ensure the heating elements are turned off and power banks are disconnected.
2. Fold the chair by pushing the sides together until it collapses.

- Place the folded chair into its provided storage bag.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

- Heating not working:**
  - Ensure the power banks are fully charged and correctly connected to the chair's USB cables.
  - Check that the power button is pressed and held for 3 seconds to activate the heating.
  - Verify that the power banks are functioning correctly by testing them with another device.
- Uneven heating:**
  - Ensure the chair is fully unfolded and the heating pads are not creased or obstructed.
  - Confirm that both power banks are connected and active for both seats.
- Chair unstable:**
  - Ensure the chair is fully unfolded and the X-brace frame is locked into position.
  - Place the chair on a flat, stable surface.

## 6. SPECIFICATIONS

Attribute	Detail
Brand	VIVOHOME
Model Number	VHPB45-27000
Color	Black and Gray
Product Dimensions (Unfolded)	23.2"D x 42.5"W x 36.6"H (42.5 x 23.2 x 36.6 inches)
Item Weight	15.7 pounds
Maximum Weight Recommendation	500 Pounds
Material	600D Oxford Cloth, Alloy Steel, Cotton (Fill)
Heating Levels	3 (Low: 122°F, Medium: 140°F, High: 158°F)
Power Output	45W (PD Fast-Charging Type-C)
Power Bank Capacity	2 x 27,000 mAh (included)
Included Components	Camping Chair, Power Bank x 2, Storage Bag
Special Features	3 Heating Levels, Cup Holders, Foldable, Large Heating Pads, Portable, Overheat Protection

## 7. SAFETY WARNINGS

- **High Heat Setting:** The High setting (three bars lit) generates intense heat and is recommended for use only in cold outdoor environments. Use with caution to avoid burns.
- Always ensure power banks are properly connected and secured in their pockets.
- Do not use the heating function if the chair or power banks are wet.
- Keep away from open flames or extreme heat sources.
- Do not modify the heating elements or electrical components of the chair.
- Supervise children when using the heated chair.

## 8. WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts, please visit the official VIVOHOME website or contact their customer service directly. Refer to your purchase documentation for specific warranty terms and conditions.

You can visit the [VIVOHOME Store on Amazon](#) for more products and information.

© 2026 VIVOHOME. All rights reserved.

This manual is for informational purposes only. VIVOHOME is not responsible for any damages or injuries resulting from improper use of this product.