

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZOJIRUSHI](#) /

› [ZOJIRUSHI 5.5-Cup Flame Dance Cooking Rice Cooker NW-NB10-BZ Instruction Manual](#)

ZOJIRUSHI NW-NB10

ZOJIRUSHI 5.5-Cup Flame Dance Cooking Rice Cooker NW-NB10-BZ Instruction Manual

1. INTRODUCTION

The ZOJIRUSHI NW-NB10-BZ is a 5.5-cup rice cooker featuring the advanced "Flame Dance Cooking" (Enbu) technology. This technology aims to produce exceptionally delicious rice by mimicking traditional cooking methods with precise heat control. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new rice cooker.



Image: The ZOJIRUSHI NW-NB10-BZ rice cooker in Slate Black, positioned in a kitchen environment.

2. SAFETY INFORMATION

Please read and understand all safety precautions before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always read all instructions before initial use.
- Ensure the power cord is securely plugged into a grounded electrical outlet.
- Do not immerse the main unit, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Do not block the steam vent during operation, as this can cause steam burns or damage the unit.
- Use only the provided inner pot and accessories. Using unauthorized parts may void your warranty.



Image: The durable inner pot, designed for optimal heat distribution and cooking performance.

4. SETUP

- 1. Unpacking:** Carefully remove the rice cooker and all included accessories from the packaging. Retain packaging for future transport or storage.
- 2. Initial Cleaning:** Before first use, wash the inner pot, inner lid, and any other removable accessories with mild dish soap and warm water. Wipe the exterior of the main unit with a soft, damp cloth. Ensure all parts are completely dry before assembly and use.
- 3. Placement:** Place the rice cooker on a stable, level, and heat-resistant surface. Ensure it is away from direct sunlight, heat sources, and areas with high moisture. Allow adequate space around the unit for proper ventilation.
- 4. Power Connection:** Plug the power cord securely into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

- 1. Measuring and Rinsing Rice:** Use the provided measuring cup to measure the desired amount of rice. Rinse the rice thoroughly in a separate bowl until the water runs clear.
- 2. Adding Water:** Place the rinsed rice into the inner pot. Add water up to the corresponding water level mark inside the inner pot, according to the type and quantity of rice being cooked.
- 3. Cooking Mode Selection:** Close the lid securely. Select your desired cooking mode using the control panel. The "Flame Dance Cooking" (Enbu) feature utilizes multiple bottom IH heaters to create intense convection, ensuring each grain of rice is cooked evenly and deliciously.



Image: Illustration of the Flame Dance Cooking mechanism with multiple IH heaters creating dynamic heat circulation.

4. **My Home Cooking Menu:** This feature allows customization of rice texture. Refer to the control panel and user interface for options to adjust hardness and stickiness to your preference.

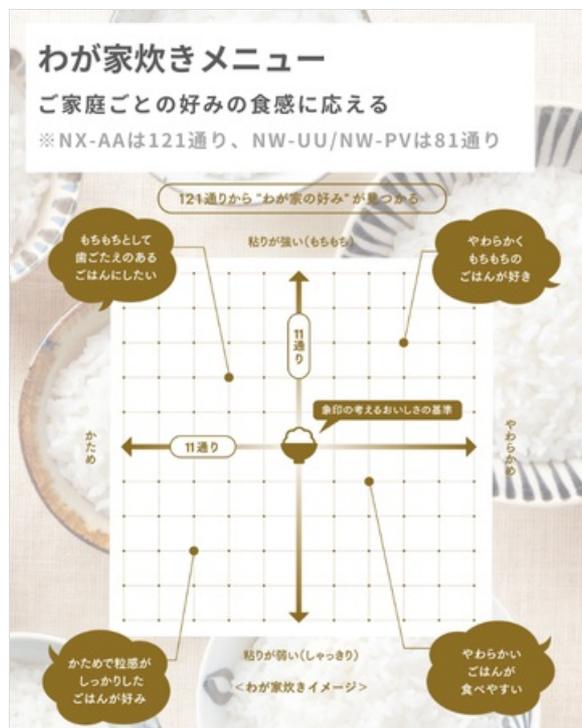


Image: Chart illustrating the "My Home Cooking Menu" options for customizing rice texture based on preference.

5. **Frozen Rice Menu:** For preparing rice specifically for freezing, select the "Frozen Rice" menu. This setting optimizes cooking for better texture after thawing.



Image: Preparing rice for freezing using the dedicated "Frozen Rice Menu" to ensure optimal texture after thawing.

6. **Start Cooking:** Press the "Start" button. The cooking process will begin.
7. **Keep Warm:** After cooking, the rice cooker will automatically switch to keep-warm mode.

6. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your rice cooker. Always unplug the rice cooker and allow it to cool completely before cleaning.

- **Cleanable Parts:** The inner pot and inner lid are the primary parts requiring regular cleaning.

毎日のお手入れを簡単に!

洗うのはたったの2点

※その他のお手入れに関しては、取扱説明書をご確認ください。



①内釜



②内ぶた

さらに内ぶた食洗機OK



Image: The inner pot and inner lid are easily removable for thorough cleaning.

- **Inner Pot and Inner Lid:** Wash these parts with mild dish soap and a soft sponge. They are also dishwasher-safe for convenience.
- **Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners, harsh chemicals, or immerse the main unit in water.
- **Steam Vent:** Ensure the steam vent is clear of any food debris. A flat design minimizes crevices for easier cleaning.



Image: The flat design of the top panel and interior makes cleaning simple and efficient.

7. TROUBLESHOOTING

If you encounter issues with your rice cooker, please refer to the following common problems and solutions:

- **Rice not cooking properly (too hard/soft, uneven):**
 - Check water levels against the inner pot markings.
 - Ensure the inner pot is correctly seated within the main unit.
 - Verify that the selected cooking mode is appropriate for the type and quantity of rice being cooked.
- **Unit does not power on:**
 - Check if the power cord is securely plugged into both the rice cooker and a functional electrical outlet.
 - Test the outlet with another appliance to ensure it is receiving power.
- **Unusual odors during operation:**
 - Perform a thorough cleaning of all removable parts, especially the inner pot and inner lid.
 - Ensure no food debris is trapped in the steam vent or around the heating element.

For persistent issues or problems not listed here, please contact customer support.

8. SPECIFICATIONS

Product Specifications

Feature	Detail
Manufacturer	ZOJIRUSHI
Model Number	NW-NB10-BZ
Color	Slate Black
Capacity	5.5-cup
Product Dimensions (W x D x H)	24.5 cm x 33 cm x 21.5 cm (9.6 in x 13 in x 8.5 in)
Product Weight	6.5 kg (14.3 lbs)
Power Source	Corded Electric



Image: Visual representation of the dimensions (width, depth, height) and weight of the ZOJIRUSHI NW-NB10-BZ rice cooker.

9. WARRANTY AND SUPPORT

The ZOJIRUSHI NW-NB10-BZ rice cooker comes with a manufacturer's **2-year warranty**. The inner pot specifically has a reliable **3-year warranty**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your purchase documentation or visit the official ZOJIRUSHI website for the most up-to-date support resources.

炎舞炊き[®]

メーカー2年保証サービス



対象製品をご購入され、オーナーサービス登録をされた方（既に登録済みの方含む）を対象にメーカー保証(1年)を2年に延長するキャンペーンを実施いたします。

※ご登録方法はZOJIRUSHIオーナーサービスWEBサイトからのみとなります。※ご登録には電子領収書のスクリーンショットなど、ご購入証明書が必要です。※詳しい内容についてはZOJIRUSHIオーナーサービスのキャンペーンページをご覧ください。

Image: Information regarding the manufacturer's 2-year warranty service for the product.