

[Manuals.plus](#) /

> [MAXGROOM](#) /

> MAXGROOM 3-in-1 Waterproof Electric Shaver (Model M-105W) Instruction Manual

## MAXGROOM M-105W

# MAXGROOM 3-in-1 Waterproof Electric Shaver (Model M-105W) Instruction Manual

Your comprehensive guide to safe and effective use.

## 1. WELCOME

Thank you for choosing the MAXGROOM 3-in-1 Waterproof Electric Shaver, Model M-105W. This device is designed to provide a versatile and comfortable hair removal experience across various body areas. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: MAXGROOM 3-in-1 Electric Shaver with all attachments and travel pouch, illustrating the complete grooming kit.

## 2. PRODUCT OVERVIEW

The MAXGROOM M-105W features three interchangeable heads for comprehensive hair removal:

- **Body Trimmer Head:** Equipped with R-round hypoallergenic ceramic blades, suitable for underarms and bikini lines.
- **Electric Foil Shaver Head:** Designed for body curves and removing short remaining hair.
- **Rotary Facial Shaver Head:** For delicate facial hair removal from neck to jawline.

Additional features include IPX6 waterproof rating, a 15% stronger motor for efficient trimming, Type-C rechargeable battery with 90 minutes cordless runtime, and an LED display for battery level.

# MULTI-FUNCTIONAL TRIMMER



Facial



Armpit



Legs

Image: A woman demonstrating the versatile application of the trimmer for facial, armpit, and leg hair removal.

## 3. SAFETY INFORMATION

- Always unplug and remove the charging cable before using the shaver.
- Be cautious when handling the shaver, as the blades are sharp and can cause cuts.
- Replace the blades regularly to maintain optimal performance and prevent skin irritation.
- After use, clean the shaver thoroughly and dry it completely to prevent bacterial growth.
- Never use the shaver while it's charging to avoid electrical hazards.

## 4. GETTING STARTED

### 4.1. Charging the Device

Before first use, fully charge the device. Connect the provided USB-C cable to the charging port on the trimmer and a suitable USB power source (e.g., power bank, laptop, adapter, car charger). The LED display

will show the battery level during charging. A full charge takes approximately 1.5 hours and provides up to 90 minutes of cordless runtime.



Image: The MAXGROOM trimmer connected to a USB-C charging cable, illustrating its rechargeable nature.

#### 4.2. Attaching/Detaching Heads

To change the trimmer head, gently twist the current head counter-clockwise and pull it off. Align the desired head with the main body and twist clockwise until it clicks securely into place.

# WHAT'S INCLUDED?



Image: All MAXGROOM trimmer components laid out, showing the main body, three interchangeable heads, guide combs, cleaning brush, USB-C cable, and travel pouch.

## 5. OPERATING INSTRUCTIONS

### 5.1. General Use

Press the power button to turn the device on. The LED display will show the current battery percentage. For optimal results, ensure your skin is clean and dry before trimming, or use it in the shower for wet trimming.

### 5.2. Using the Body Trimmer Head

Attach the R-round bikini trimmer head. This head is ideal for underarms and bikini lines. Glide the trimmer gently against the direction of hair growth. The hypoallergenic ceramic blades are designed to prevent nicks and irritation.

# Design für Glatte Haut

Sanft & Reizfrei



Image: A woman using the MAXGROOM bikini trimmer on her bikini line, demonstrating its targeted use.

### 5.3. Using the Electric Foil Shaver Head

For a closer shave on body curves and to remove short stubble, attach the electric foil shaver head. The 3D floating foil blade is effective for hairs shorter than 1mm. Move the shaver in short, gentle strokes over the skin.

# 3D FOIL SHAVER

For a Smoother and Closer Shave




## Curved Blade


Trim long hairs >1mm

## 3D Floating Foil Blade

Remove residual short stubble <1mm

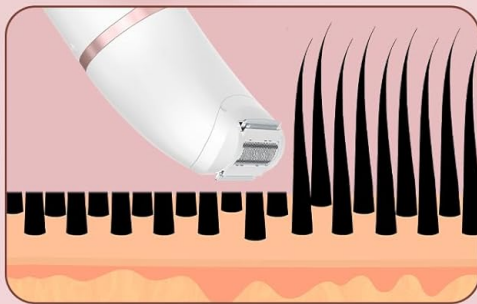

STEP 1

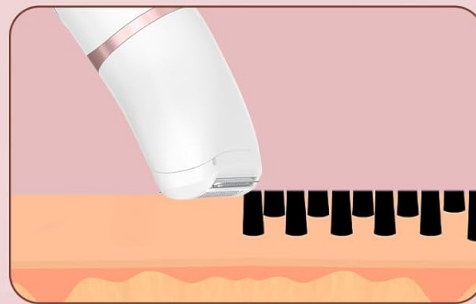

STEP 2

Image: A diagram illustrating the two-step process of hair removal using the 3D foil shaver: first trimming long hairs, then shaving short stubble for a smooth finish.

## 5.4. Using the Rotary Facial Shaver Head

For delicate facial hair, use the rotary facial shaver head. Gently move the shaver in small circular motions over the desired area for flawless skin.

## 5.5. Wet/Dry Use

The device is IPX6 waterproof, allowing for both wet and dry use. Shower steam can help open pores for a closer shave. Ensure the charging port is completely dry before charging after wet use.

# WATERPROOF & REMOVABLE

## Easy Cleaning IPX6



Image: A woman using the MAXGROOM electric shaver in a bubble bath, highlighting its waterproof design for convenient wet use.

### 5.6. Instructional Videos

Video: General overview of the MAXGROOM 3-in-1 Waterproof Electric Shaver for women.

Video: Demonstration on how to use the Foil Shaver head for effective hair removal.

Video: Guide on using the 3-in-1 pubic hair trimmer for women.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene. After each use, detach the trimmer head and rinse it under running water. Use the provided cleaning brush to remove any trapped hairs from the blades and internal components. Allow all parts to air dry completely before reassembling or storing the device.

## 7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check the charging cable connection.
- **Poor trimming performance:** Clean the blades thoroughly. Replace the trimmer head if blades are dull or damaged. Ensure the head is securely attached.
- **Skin irritation:** Ensure blades are clean and sharp. Use on clean, dry skin or with shaving cream/gel during wet use. Avoid pressing too hard.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	M-105W
Product Dimensions	1.34 x 1.3 x 5.75 inches
Weight	9.6 ounces
Power Source	Battery Powered (1 AA battery included)
Special Features	Battery Indicator, Cordless, Ergonomic Design, Portable, Washable
Waterproof Rating	IPX6
Charging Type	Type-C Rechargeable
Runtime	90 minutes (cordless)

## 9. WARRANTY AND SUPPORT

MAXGROOM is committed to providing high-quality personal care products. Your MAXGROOM M-105W comes with a **24-month replacement warranty** and **lifetime service**. For any inquiries or support needs, our customer service team offers a **12-hour quick reply** and **24/7 support services**. Please refer to the contact information provided with your product for direct support.