

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MAXGROOM](#) /

> [MAXGROOM M-105W Bikini Trimmer for Women - Instruction Manual](#)

## MAXGROOM M-105W

# MAXGROOM M-105W Bikini Trimmer for Women - Instruction Manual

Model: M-105W | Brand: MAXGROOM

## 1. INTRODUCTION

Thank you for choosing the MAXGROOM M-105W Bikini Trimmer. This versatile electric shaver is designed for gentle and effective hair removal across various body areas. Please read this manual thoroughly before first use to ensure safe and optimal performance.

### Key Features:

- All-in-one solution with three interchangeable trimming heads: bikini trimmer, face shaver, and 3D foil shaver.
- Hypoallergenic stainless steel and ceramic blades for irritation-free shaving.
- Powerful motor for quick and efficient trimming.
- 100% waterproof design for wet and dry use.
- Rechargeable battery with up to 90 minutes of cordless runtime.
- LED display for battery status and travel lock indicator.
- Portable and lightweight with included travel pouch.

### Included Components:

- MAXGROOM M-105W Trimmer Body
- Bikini Trimmer Head
- Face Shaver Head
- 3D Foil Shaver Head
- 3/6 mm Guide Comb
- 9/12 mm Guide Comb
- Cleaning Brush
- Type-C USB Charging Cable

- Travel Pouch



Figure 1: Included Components

## 2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage to the device, please observe the following safety precautions:

- Always unplug the shaver and allow it to cool before cleaning.
- Do not use the shaver while charging.
- Do not use the shaver near water if it is not explicitly designed for wet use or while charging. This model is waterproof for wet use, but charging near water is not recommended.
- Keep the blades and device away from children and pets.
- Always clean the shaver after each use to prevent bacterial growth and maintain hygiene.
- Be cautious when using the shaver on delicate areas to avoid cuts or skin irritation.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (Note: This statement appears in the provided 'ingredients' field and is included for completeness, though it seems out of context for a shaver manual.)

### 3. PRODUCT OVERVIEW

The MAXGROOM M-105W features a sleek, ergonomic design with an intuitive LED display and interchangeable heads for various grooming needs.

#### Main Unit Features:

- **Power Button:** Turns the device on/off and activates/deactivates travel lock.
- **LED Display:** Shows remaining battery percentage, travel lock status, charging reminder, and wash reminder.
- **USB-C Charging Port:** For convenient recharging.



Figure 2: LED Display and Main Unit

#### Interchangeable Heads:

- **Bikini Trimmer Head:** Ideal for trimming hair on the bikini line and other body areas. Features R-shaped blades for gentle contact.
- **Face Shaver Head:** Designed for delicate facial hair, capturing micro stubbles for a smooth finish.
- **3D Foil Shaver Head:** Provides a closer and smoother shave for larger body areas, featuring a

curved blade and 3D floating foil blade.



Figure 3: 3D Foil Shaver Head Components

## 4. SETUP

### Charging the Device:

1. Connect the USB-C charging cable to the port at the bottom of the trimmer.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a USB port.
3. The LED display will show the charging progress. A full charge provides up to 90 minutes of cordless runtime.

### Attaching/Detaching Trimmer Heads:

1. To attach a head, align the head with the main unit and press firmly until it clicks into place.
2. To detach a head, gently pull it away from the main unit.

### Activating/Deactivating Travel Lock:

The device comes with a travel lock feature to prevent accidental activation. To unlock, press and hold the

power button until the lock icon disappears from the LED display and the device powers on. To activate the travel lock, press and hold the power button until the lock icon appears.

## 5. OPERATING INSTRUCTIONS

The MAXGROOM M-105W can be used for both wet and dry grooming. For best results, ensure your skin is clean before use.

### General Usage:

1. Select the appropriate trimmer head for the desired area.
2. Press the power button to turn on the device.
3. For dry use, ensure skin is dry. For wet use, apply water or shaving cream.
4. Gently glide the trimmer against the direction of hair growth. Do not press too hard to avoid irritation.
5. After use, press the power button to turn off the device.



Figure 4: Wet and Dry Use

### Using the Bikini Trimmer Head:

This head is designed for the bikini line, legs, body, armpits, and arms. For longer hair, use the bikini

trimmer head first. Attach the desired guide comb (3/6 mm or 9/12 mm) for specific hair lengths.



Figure 5: Bikini Trimmer Head in Use

### **Using the Face Shaver Head:**

The face shaver head is suitable for delicate areas like the face, upper lip, and chin. It captures 0.2mm micro stubbles for a smooth finish.



**Super-thin  
Shaver Head**



## **Face Shaver For Women**

Captures **0.2mm** micro stubbles

Figure 6: Face Shaver Head in Use

### **Using the 3D Foil Shaver Head:**

For a closer and smoother shave on larger body areas, use the 3D foil shaver head. First, use the curved blade to trim longer hairs, then follow with the 3D floating foil shaver to remove residual hairs and stubbles.

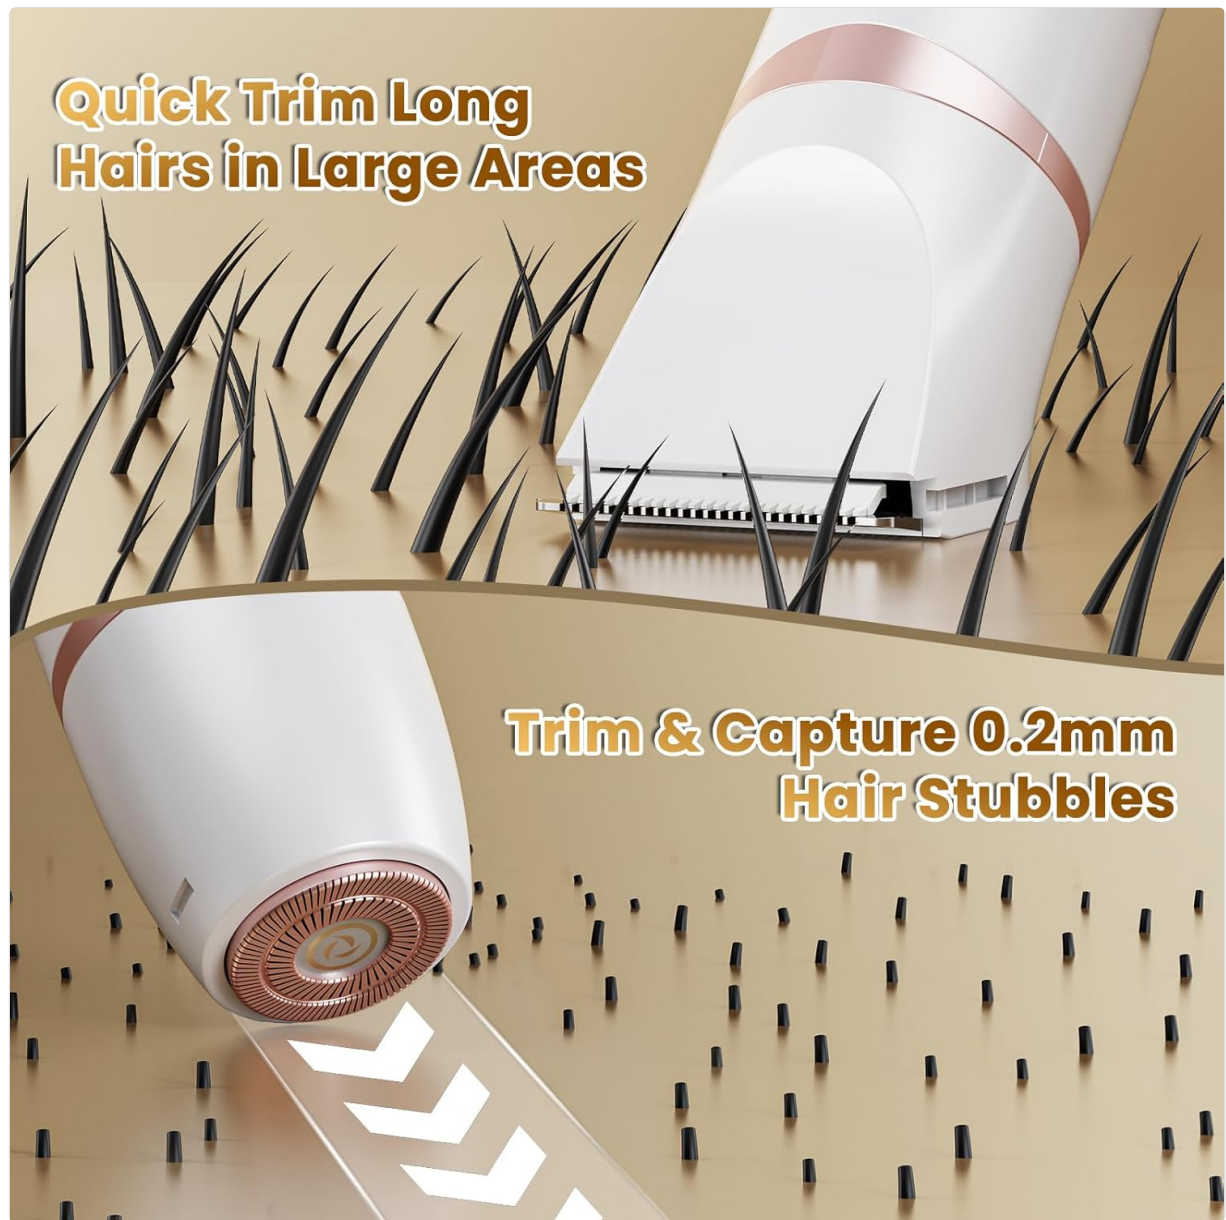


Figure 7: Trimming with 3D Foil Shaver Head

### Official Product Videos:

Your browser does not support the video tag.

Video 1: MAXGROOM Waterproof Bikini Trimmer for Women. This video demonstrates the waterproof capabilities and general use of the trimmer.

Your browser does not support the video tag.

Video 2: MAXGROOM 3 in 1 Electric Razors for Women. This video showcases the different interchangeable heads and their functions.

## 6. MAINTENANCE

### Cleaning:

1. After each use, turn off the device and detach the trimmer head.
2. Rinse the trimmer head under running water to remove hair and debris.
3. Use the included cleaning brush to remove any stubborn hairs from the blades.
4. Allow the head to air dry completely before reattaching or storing.

- Wipe the main unit with a dry cloth. Do not submerge the main unit in water unless the head is securely attached and the device is off.

## Storage:

Store the trimmer and all accessories in the provided travel pouch in a cool, dry place, away from direct sunlight and moisture. Ensure the travel lock is activated before storing or traveling.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your MAXGROOM M-105W trimmer, please refer to the following common solutions:

- Device not turning on:** Ensure the travel lock is disengaged by holding the power button until the lock icon disappears. Check the battery level on the LED display and recharge if necessary.
- Poor trimming performance:** Ensure the correct head is attached for the desired area. Clean the blades regularly to prevent hair buildup. Ensure the device is fully charged for optimal power.
- Skin irritation:** Use the trimmer on clean, dry skin or with water/shaving cream for wet use. Ensure the blades are clean and not dull. Glide the trimmer gently, do not press too hard against the skin.
- Device stops during use:** This may indicate a low battery. Recharge the device. If using in wet conditions, ensure water is not interfering with the power button or internal components.

If the problem persists after trying these steps, please contact MAXGROOM customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	1.34 x 1.3 x 5.75 inches
Item Weight	9.6 ounces
Model Number	M-105W
Power Source	Battery Powered (Lithium-Ion)
Battery Average Life	90 minutes
Blade Material	Ceramic, Stainless Steel
Number of Blades	3 (interchangeable heads)
Additional Features	3 Interchangeable Trimmer Heads, Cordless, Dry Shave, Rechargeable, Waterproof, Wet
Color	White

## 9. WARRANTY AND SUPPORT

---

For warranty information, product support, or to inquire about replacement parts, please contact

MAXGROOM customer service through the retailer where you purchased the product or visit the official MAXGROOM website. Please retain your proof of purchase for warranty claims.