

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Furologee](#) /

› [Furologee 22-inch Black 4-Tier Kitchen Baker's Rack with Power Outlet: Instruction Manual](#)

### Furologee BR006-C

# Furologee 22-inch Black 4-Tier Kitchen Baker's Rack with Power Outlet: Instruction Manual

Model: BR006-C

## 1. INTRODUCTION

Thank you for choosing the Furologee 22-inch Black 4-Tier Kitchen Baker's Rack with Power Outlet. This manual provides essential information for the safe assembly, operation, and maintenance of your new kitchen storage solution. Please read these instructions carefully before assembly and retain them for future reference.





*Image 1.1: The Furologee 22-inch Black 4-Tier Kitchen Baker's Rack, showcasing its multiple shelves, pegboard with S-hooks, and integrated power outlet.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe use and prevent damage, please observe the following safety guidelines:

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the shelves. Refer to the specifications section for weight limits.
- Use the included anti-tip kits to secure the rack to a wall, especially if children or pets are present.
- Only use the integrated power outlets for appliances within the specified voltage and amperage limits (120V/12A).
- Do not expose the power cord or outlets to water or excessive moisture.
- Unplug the rack from the wall outlet when not in use or during cleaning.
- Keep small parts away from children during assembly.



Image 2.1: Key safety and stability features, including the anti-tip kit for wall attachment, X-shaped supports for structural integrity, adjustable feet for leveling, and iron mesh netting on lower shelves.

### 3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Metal Frame Components
- P2 Particleboard Shelves (4 tiers)
- Pegboard with 6 S-Hooks
- Power Outlet Unit (2 AC outlets, 1 switch, 6.5 FT power cord)
- Assembly Hardware (screws, bolts, Allen wrench)
- Anti-tip Kit

- Adjustable Foot Pads (4)
- Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS

---

Assembly typically requires two people. Follow the numbered steps below. Each accessory is labeled for easy identification.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble Base Frame:** Connect the bottom metal frame pieces using the provided screws. Ensure the "X" shaped supports are correctly oriented for stability.
3. **Attach Lower Shelves:** Secure the bottom two particleboard shelves to the assembled base frame.
4. **Install Middle Frame:** Attach the vertical metal supports for the middle section, ensuring they align with the lower frame.
5. **Mount Power Outlet:** Decide whether to fix the power outlet unit on the left or right side of the middle shelf. Secure it with the designated screws.
6. **Attach Middle Shelf:** Place and secure the middle particleboard shelf.
7. **Install Upper Frame:** Attach the vertical metal supports for the top section.
8. **Attach Pegboard and Top Shelf:** Secure the pegboard to the upper frame, then attach the top particleboard shelf.
9. **Install S-Hooks:** Hang the 6 S-hooks onto the pegboard.
10. **Attach Adjustable Feet:** Screw the adjustable foot pads into the bottom of the rack legs. Adjust them to level the rack on uneven surfaces.
11. **Secure Anti-tip Kit:** Using the provided hardware, attach the anti-tip kit to the top rear of the rack and then to a wall stud.
12. **Final Check:** Ensure all screws are tightened and the rack is stable.

# Product Size

Friendly Notice: Can hold up to 0.9 Cu.Ft microwave oven, if used as microwave stand, please note the product size

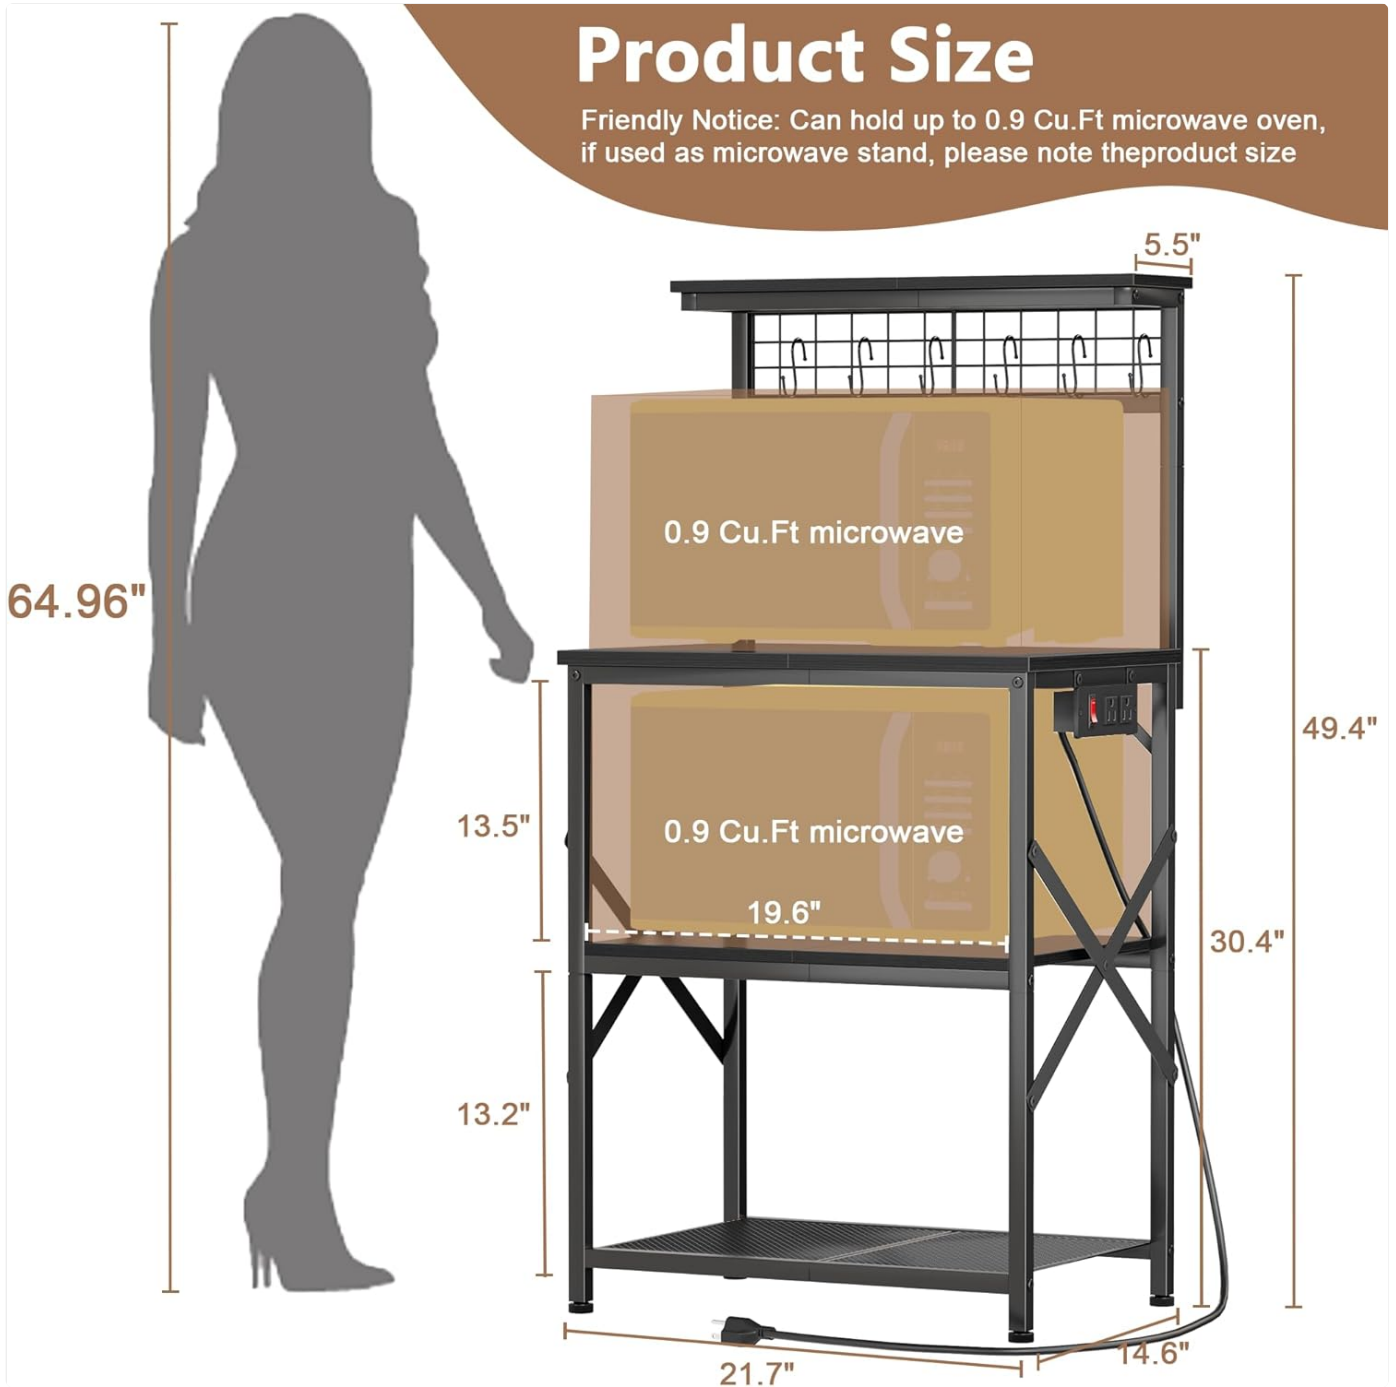


Image 4.1: Product dimensions (21.7" L x 14.6" D x 49.4" H) and a guide indicating suitability for microwaves up to 0.9 Cu.Ft.

# Reversible Power Outlet



**2 AC Outlets**  
120V/12A



**1 Switch**



**6.5 FT**  
Power Cord

Image 4.2: Detail of the reversible power outlet unit, featuring two 120V/12A AC outlets, an on/off switch, and a 6.5-foot power cord for convenient appliance use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Using the Power Outlet

- Plug the rack's main power cord into a grounded 3-prong wall outlet.
- Connect your kitchen appliances (e.g., coffee maker, microwave, toaster) to the two AC outlets on the rack.
- Use the integrated air switch button to turn the power outlets on or off. This eliminates the need to unplug appliances individually.
- The power outlet can be installed on either the left or right side of the rack during assembly to suit your preference.

### 5.2 Utilizing Storage Space

- **Top Shelf:** Ideal for smaller items like spices, oils, or decorative pieces.

- **Middle Shelf:** Designed to accommodate appliances such as a coffee maker, microwave (up to 0.9 Cu.Ft.), or toaster.
- **Bottom Shelves:** Suitable for storing cookware, dishes, or other kitchen essentials. The iron mesh netting on the lowest shelf provides breathability, useful for fruits and vegetables.
- **Pegboard with S-Hooks:** Use the 6 S-hooks to hang mugs, spatulas, towels, or other small kitchen tools, keeping them easily accessible.



Image 5.1: The top shelf provides space for small items, while the pegboard with S-hooks offers convenient hanging storage for kitchen utensils and mugs.

## 6. CARE AND MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the rack to prevent buildup.
- **Power Outlet Care:** Ensure the power outlets are clean and dry before use. Do not attempt to disassemble the

power unit.

- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Placement:** Avoid placing the rack in direct sunlight or near heat sources to prevent material degradation.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly/unstable.	Screws are loose; uneven floor; anti-tip kit not installed.	Tighten all assembly screws. Adjust the foot pads to level the rack. Install the anti-tip kit to secure it to the wall.
Power outlets are not working.	Power switch is off; rack not plugged into wall; overloaded circuit.	Ensure the power switch on the rack is in the "ON" position. Verify the rack's main plug is securely inserted into a functional wall outlet. Check if the appliance is drawing too much power and causing a trip.
Missing parts during assembly.	Packaging error.	Contact Furologee customer service with your purchase details for replacement parts.

## 8. PRODUCT SPECIFICATIONS

- **Model:** BR006-C
- **Material:** Metal frame, P2 Particleboard shelves
- **Color:** Black
- **Product Dimensions:** 21.7" L x 14.6" D x 49.4" H (55.1cm L x 37.1cm D x 125.5cm H)
- **Number of Shelves:** 4
- **Power Outlet:** 2 AC Outlets (120V/12A), 1 Air Switch, 6.5 ft Power Cord
- **Special Features:** Hutch with pegboard, 6 S-hooks, X-shaped support, Adjustable feet, Anti-tip kit, Iron mesh netting
- **Item Weight:** Approximately 20.2 pounds (9.17 kg)
- **Assembly Required:** Yes

## 9. WARRANTY AND CUSTOMER SUPPORT

Furologee is committed to providing quality products and excellent customer service. If you encounter any issues with your product, require replacement parts, or have questions regarding assembly or operation, please do not hesitate to contact our customer support team.

Please have your purchase details and model number (BR006-C) ready when contacting support to ensure a swift resolution.

For more information or to contact support, please visit the official Furologee store or contact your retailer.



*Image 9.1: Furologee customer service is available to assist with any inquiries or support needs.*

