



Manuals.plus /

- › PAXA /
- › PAXA Clipbuds7 Open Ear Earbuds User Manual

PAXA Clipbuds 7

PAXA Clipbuds7 Open Ear Earbuds User Manual

Model: Clipbuds 7

1. INTRODUCTION

Thank you for choosing the PAXA Clipbuds7 Open Ear Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image 1: PAXA Clipbuds7 Open Ear Earbuds and their charging case. The earbuds are purple and feature a unique clip-on design. The charging case has an LED display showing battery levels.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- PAXA Clipbuds7 Open Ear Earbuds (1 pair)
- Wireless Charging Case (1)
- Charging Cable (1)
- User Manual (1)

3. SETUP


3.1 Initial Charging

Before first use, fully charge the earbuds and charging case. Connect the provided charging cable to the Type-C port on the charging case and a power source. The LED display on the case will indicate the charging status.


Ergonomic Clip-On Earbuds for All-Day Comfort

Designed with a lightweight open-loop structure, these clip-on earbuds gently attach to your ears

Wearing Tips

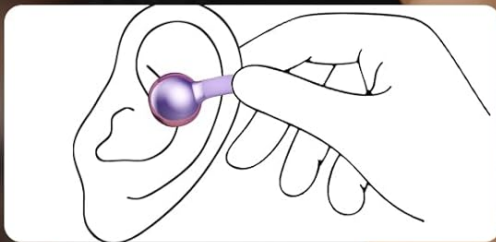

1. Clip the earbuds on the thinnest part of your ear

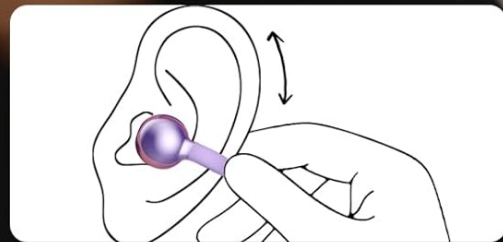

2. Adjust the earbud tip to align with your ear canal for optimal sound

Image 2: The PAXA Clipbuds7 charging case connected to a charging cable, displaying the battery percentage on its LED screen.

3.2 Wearing the Earbuds


The Clipbuds7 are designed for open-ear comfort. Follow these steps for proper fit:

1. Clip the earbuds onto the thinnest part of your ear.
2. Adjust the earbud tip to align with your ear canal for optimal sound delivery.

Long-Lasting Listening Experience

44 hours of battery life, you only need to charge it once a week

44 Hrs

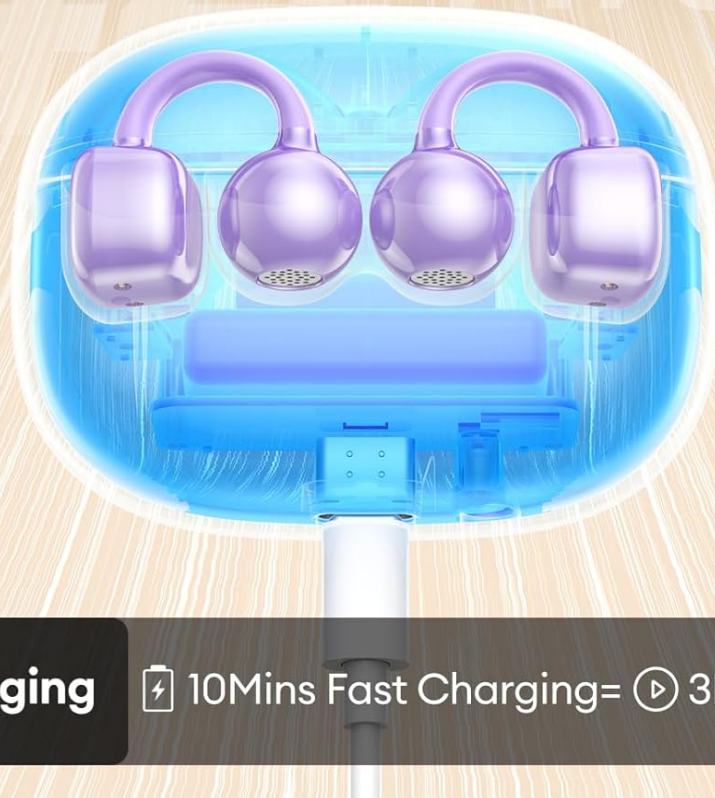

Fast Charging



10Mins Fast Charging = 3Hrs Playtime

Image 3: A visual guide demonstrating the correct method for clipping the earbuds onto the ear and adjusting them for the best fit.

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing and proper wearing technique for the PAXA Clipbuds7 earbuds, highlighting their comfortable and secure fit.

3.3 Bluetooth Pairing

The earbuds utilize Bluetooth 5.4 for stable connections.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for "PAXA Clipbuds7".
3. Select "PAXA Clipbuds7" to connect. A voice prompt will confirm successful pairing.

Next-Gen Bluetooth 5.4

Stable connection with zero dropouts or lag across all your devices - phones, laptops, tablets



Image 4: A smartphone screen showing the PAXA Clipbuds7 successfully connected via Bluetooth, alongside the earbuds in their charging case.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The PAXA Clipbuds7 feature intuitive touch controls:

Action	Function
Double-click either earbud	Answer/End call, Play/Pause music
Press and hold either earbud for 2 seconds	Reject call
Triple-click the left (L) earbud	Previous song, Volume -
Triple-click the right (R) earbud	Next song, Volume +
Hold both earbuds	Activate Voice Assistant (Siri, Google Assistant, etc.)

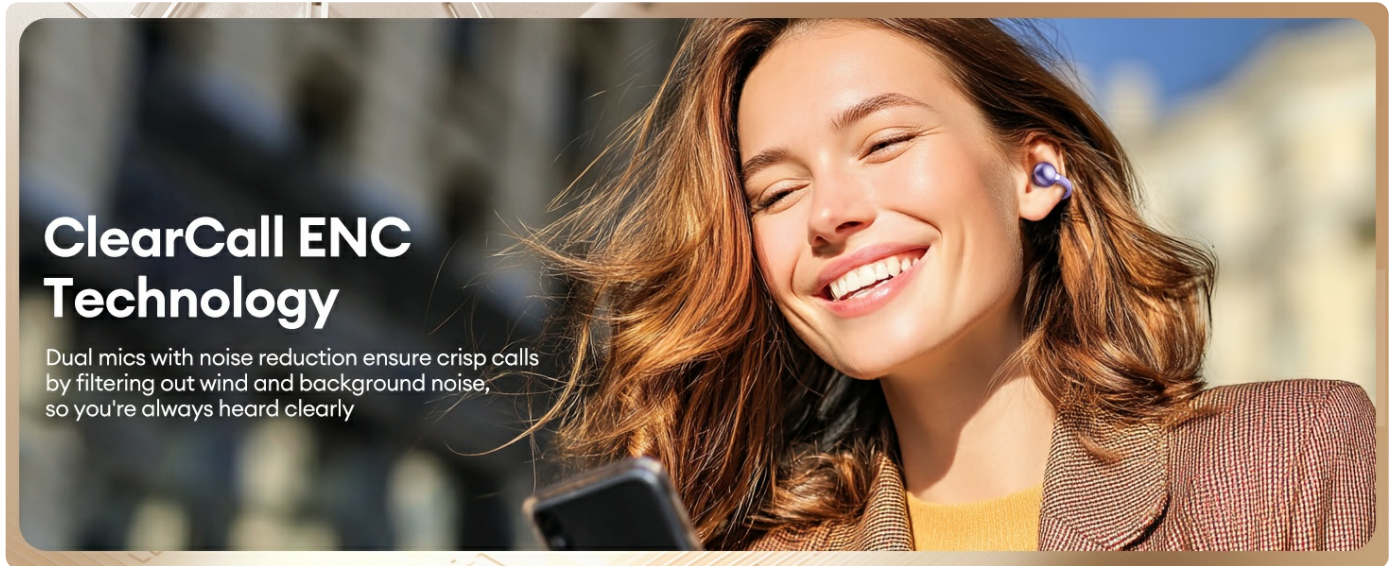


Image 5: A detailed graphic illustrating the various touch control functions for the PAXA Clipbuds7 earbuds, including call management and music playback.

4.2 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

4.3 Call Management


The earbuds feature ENC noise cancellation for clear calls. Use the touch controls as described above to manage calls.

4.4 Audio Features

Experience immersive stereo sound with directional audio technology, minimizing sound leakage while maintaining environmental awareness.

4.5g Ultra-light wearing experience

Get a secure fit with the cloud-soft comfort

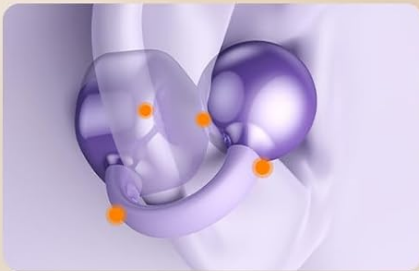

4-Point Weight Balance



Self-Adjusting Flexible C-Bridge Design



Image 6: A visual representation of the directional audio technology, showing how sound is delivered to the ear while minimizing leakage to the surroundings.

5. MAINTENANCE

5.1 Cleaning

Regularly clean your earbuds and charging case with a soft, dry cloth. Avoid using abrasive materials or harsh chemicals. Ensure charging contacts are free of dust and debris.

5.2 Storage

When not in use, store the earbuds in their charging case to protect them and maintain battery life. Store in a cool, dry place away from direct sunlight and extreme temperatures.

5.3 Water and Dust Resistance

The earbuds are IP45 rated for dust and water resistance, meaning they can withstand splashes of water and sweat.

They are not designed for submersion in water.

Directional Audio Tech

Minimizes sound leakage while delivering crystal-clear, high-fidelity audio for premium listening



Immersive Stereo Sound

Richer sound details and enhanced clarity

Image 7: A person wearing the PAXA Clipbuds7 earbuds while being exposed to light rain, demonstrating their IP45 water and dust resistance.

6. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen to re-enter pairing mode. Check your device's Bluetooth settings and try reconnecting.
No sound from one earbud	Check battery level of both earbuds. Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not in manual). Re-pair with your device.
Charging case not charging	Verify the charging cable and power adapter are working. Ensure the Type-C cable is securely connected to both the case and the power source.
Poor sound quality	Ensure earbuds are properly seated in your ears. Check for debris blocking the speaker grilles. Move closer to your connected device to avoid interference.

7. SPECIFICATIONS

Feature	Detail
Model Name	Clipbuds 7
Bluetooth Version	5.4
Earbud Weight	4.5g (each)
Battery Life (Single Charge)	Up to 8 hours
Total Battery Life (with Case)	Up to 44 hours
Charging Port	Type-C
Water Resistance Rating	IP45
Noise Control	Hybrid Noise Cancellation (ENC for calls)
Control Type	Touch Control
Material	Silicone Rubber + Plastic

8. WARRANTY AND SUPPORT

PAXA products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to contact customer service, please visit the official PAXA website or refer to the warranty card included in your package.

Online Support: Visit the PAXA Store on Amazon