

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Soobaby](#) /

› [Soobaby Convertible High Chair \(Model B0FVLQCJ9K\) Instruction Manual](#)

Soobaby B0FVLQCJ9K

Soobaby Convertible High Chair Instruction Manual

Model: B0FVLQCJ9K

INTRODUCTION

Thank you for choosing the Soobaby Convertible High Chair. This 5-in-1 adjustable high chair is designed to grow with your child, offering versatile seating solutions from infancy through childhood and beyond. It functions as a high chair for babies, a traditional dining chair, and a stool for older children and adults. This manual provides essential information for safe assembly, operation, and maintenance of your high chair.

FIVE-LEVEL ADJUSTABLE FOOTRES

| Ensure baby is well supported as they grow



Image: The Soobaby High Chair adapts for use by infants, toddlers, older children, and adults, supporting up to 240 lbs.

WHAT IS INCLUDED



Tray: Detachable tray is dishwasher safe, allowing for quick and convenient cleaning.

Chair: Soobaby High Chair is a seating system to accommodate your baby through childhood. Once your little one outgrows it, you can continue using the chair as a traditional dining chair and the maximum load-bearing is up to 240 lbs.



Cushion with harness: The cushion on the chair is waterproof and easy to clean. 3-point harness will make your baby feel safe & comfortable and willing to learn how to dine.

Image: The high chair integrates seamlessly into family dining, adapting to different ages.

Image: The versatile design allows the chair to be used by different family members at the dining table.



Image: The chair is designed for durability, supporting a weight capacity of up to 250 lbs.

IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use. Keep this manual for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the 5-point safety harness to secure your child in the high chair. Children under 3 years of age are required to use the provided safety harness.
- The dinner tray is intended for dining or playing purposes, not for restraining the baby.
- Never leave your child unattended in the high chair.
- Ensure the high chair is fully open and locked into position before placing a child in it. Listen for the "click" sound to confirm.
- Do not use the high chair if any parts are damaged or missing.
- Maximum weight recommendation for the high chair configuration is 200 pounds (90.7 kg).
- Keep children away from moving parts during adjustment.



Image: The high chair features a 3-point safety belt for secure child restraint and 360-degree protection.

Image: Detail of the safe restraint system, emphasizing that the tray is not a primary restraint.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- High Chair Frame (legs and main body)
- Detachable Food Tray
- Seat Cushion with 5-point Harness
- Adjustable Footrest
- Assembly Hardware (screws, screwdriver if included)
- Instruction Manual

GROW UP WITH YOUR BABY

The maximum load-bearing is up to 240 lbs



Image: Visual representation of the main components: the high chair frame, detachable tray, and seat cushion with harness.

ASSEMBLY INSTRUCTIONS

Assembly is straightforward and typically takes about 10-15 minutes for an adult. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the "Package Contents" list.
2. **Attach Legs:** Securely attach the chair legs to the main seat unit using the provided hardware. Ensure all connections are tight.
3. **Install Footrest:** Slide the adjustable footrest into the designated slots on the chair legs. Ensure it clicks into place at your desired height.
4. **Place Seat Cushion:** Position the seat cushion onto the chair, ensuring the harness straps are correctly threaded through the openings.
5. **Attach Tray:** Slide the detachable food tray onto the chair's armrests until it locks securely.
6. **Final Check:** Before first use, double-check all connections and ensure the chair is stable.

OPERATING INSTRUCTIONS

Adjusting the Footrest

The footrest can be adjusted to 5 different positions to ensure comfort and proper posture for your child as they grow. To adjust, locate the adjustment buttons or levers on the sides of the footrest, press them, and slide the footrest to the desired height. Release the buttons to lock it in place.



Image: Demonstrates how to adjust the footrest to one of its five positions.



Image: The footrest is both adjustable and removable, allowing for conversion to an adult stool.

Converting the High Chair (5-in-1 Functionality)

The Soobaby High Chair is designed for multiple stages of your child's development and can be converted into various seating options:

- **Infant High Chair:** Use with the tray and harness for feeding babies (approx. 6 months to 2 years).
- **Toddler Chair:** Remove the tray for toddlers who can sit independently at a dining table.
- **Child Chair/Stool:** As your child grows, remove the baby set and footrest to use it as a traditional dining chair or a stool.
- **Adult Stool:** The chair can support up to 200 lbs, making it suitable for adult use as a kitchen counter stool or extra seating.



Image: The versatile design allows the chair to be used for various activities including eating, playing, studying, and as an adult stool.

Image: The chair's design supports growth from 6 months to over 3 years, and for adult use.

Folding for Storage

The high chair features a quick-folding mechanism for easy storage and portability. To fold, locate the "one-click" release mechanism, typically on the side or back of the chair. Activate the mechanism and gently fold the chair until it is compact. Ensure it locks in the folded position for safe storage.



Image: The high chair can be expanded, folded with one click, and retracted for compact storage.

Attaching and Removing the Tray

The food tray is detachable for easy cleaning and to allow your child to sit directly at the table. To remove, locate

the release levers or buttons, usually underneath the tray or on the armrests. Press and pull the tray away from the chair. To attach, align the tray with the armrests and push until it clicks securely into place.



Image: Instructions for detaching the tray, allowing the child to join the family at the dining table.

CARE AND MAINTENANCE

- **Tray Cleaning:** The detachable food tray is dishwasher safe for thorough cleaning. For quick clean-ups, wipe with a damp cloth.
- **Seat Cushion:** The seat cushion is waterproof and easy to wipe clean with a damp cloth and mild soap. It is also machine-washable for deeper cleaning. Refer to the care label on the cushion for specific washing instructions.
- **Frame Cleaning:** Wipe the chair frame with a damp cloth. Avoid abrasive cleaners.
- **Storage:** Store the high chair in a clean, dry place when not in use. The folding feature allows for compact storage.
- **Regular Inspection:** Periodically check all screws, bolts, and connections to ensure they are secure.



Image: The high chair features a dishwasher-safe tray and a machine-washable cushion for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your Soobaby Convertible High Chair, please refer to the following common solutions:

- **Chair Not Stable:** Ensure all screws and connections are tightened. Verify that the chair is fully unfolded and locked into position.
- **Tray Not Attaching/Detaching Smoothly:** Check for any obstructions or debris in the sliding mechanism. Ensure release levers are fully engaged/disengaged.
- **Harness Issues:** Ensure straps are not twisted and are correctly threaded through the cushion. Adjust strap length for a snug fit.

For further assistance, please contact Soobaby customer support.

PRODUCT SPECIFICATIONS

Model Number	B0FVLQCJ9K
Brand	Soobaby
Product Dimensions	25"D x 25"W x 25"H (63.5 cm x 63.5 cm x 63.5 cm)
Item Weight	22 pounds (10 kg)
Maximum Weight Recommendation	200 Pounds (90.7 kg)
Material Composition	Alloy (frame), Plastic (tray), Fabric (cushion)
Age Range (Description)	Baby (convertible for toddlers and adults)

Is Portable	Yes
Batteries Required	No

WARRANTY AND CUSTOMER SUPPORT

Soobaby is committed to providing high-quality products. For any questions, concerns, or warranty inquiries regarding your Convertible High Chair, please contact Soobaby customer support. Please have your model number (B0FVLQCJ9K) and purchase information ready when contacting support.

Contact information can typically be found on the Soobaby official website or through your retailer's customer service portal.